


# Inclined Quadruple Station Chin Up Bars

## STEP: 1

**DO NOT CEMENT POSTS/MOUNTS INTO PLACE UNTIL THE ENTIRE STRUCTURE IS ASSEMBLED.**

Refer to the General Installation guide footing size information and digging proper holes for the support posts/mounts.

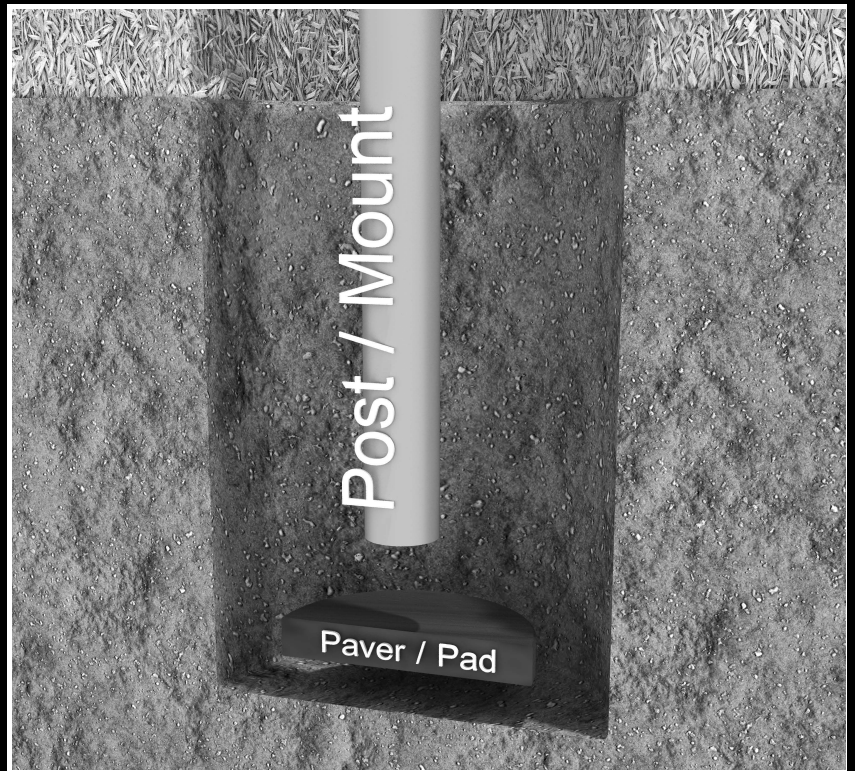

## STEP: 2

Use two (2) M10-25 insert screws and two (2) M10 washers for each bracket attachment point.

Repeat this step for each Chin Up Bar.

