


# Log Roll Installation

## STEP: 1

Connect the tube half of the clamps to the Hand Grip component using one (1) M8\*30 bolt each inside the clamp. Then, using the other half of the tube clamps and the hardware provided in the clamp hardware bag, attach the backside of the tube clamp around the post.

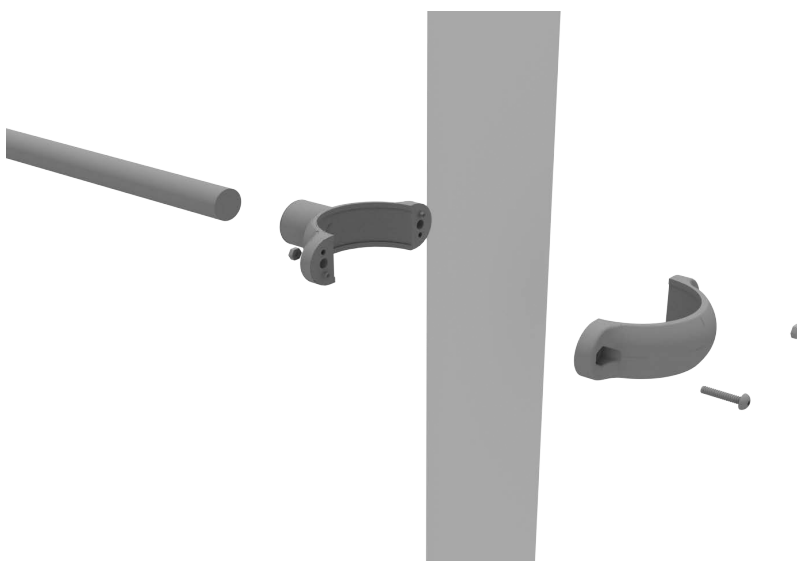

## STEP: 2

Connect the tube half of the Log Wheel component using one (1) M8\*30 bolt each inside the clamp. Then, using the other half of the tube clamps and the hardware provided in the clamp hardware bag, attach the backside of the tube clamp around the post.

