


# Inground Post/Mount Installation

## STEP: 1

**DO NOT CEMENT POSTS/MOUNTS  
INTO PLACE UNTIL THE ENTIRE  
STRUCTURE IS ASSEMBLED.**


Refer to the General Installation  
guide footing size information and  
digging proper holes for the support  
posts/mounts.

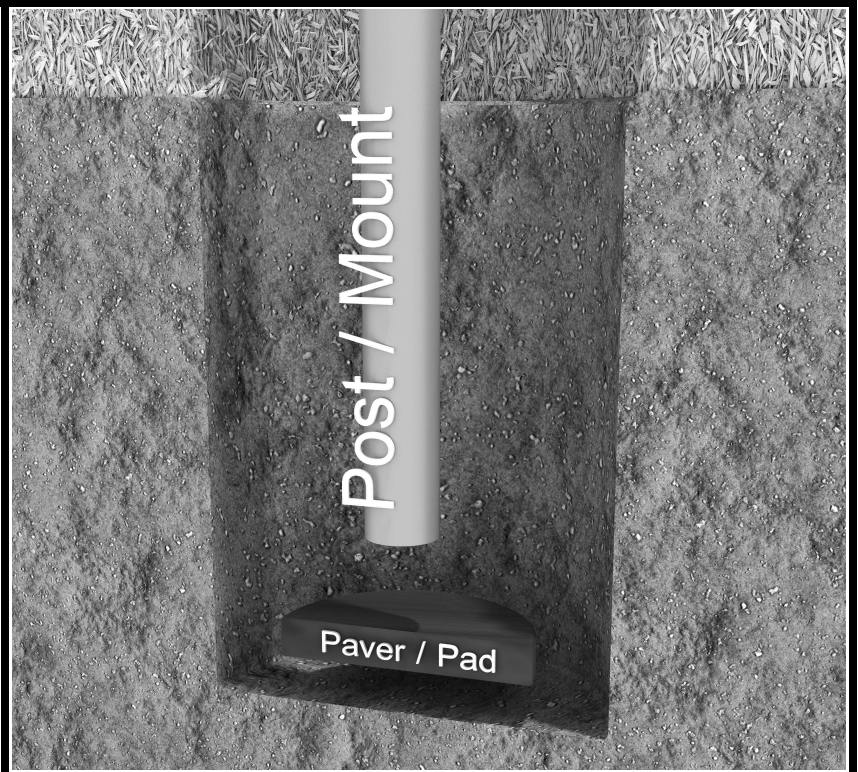

## 5.0-inch Clamp Installation Guide

### 5.0-inch Tube Clamp


Insert Bar on Component into one half of the Tube Clamp and attach with M4\*25 Set Screw. Then, using the other half of the tube clamp and the hardware provided in the clamp hardware bag, attach the other half of the tube clamp around the post.

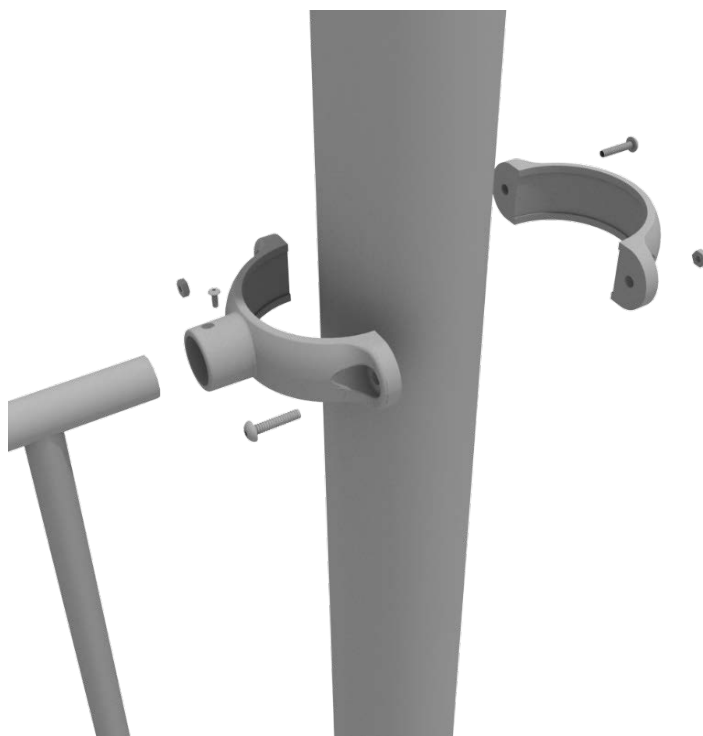

## 5.0-inch 4-foot Transfer Station Install

### STEP: 1

Using three (3) M10\*25 Bolts, six (6) M10 Washers, and three (3) M10 Lock Nuts, attach the top of the stairs to the half hex deck.

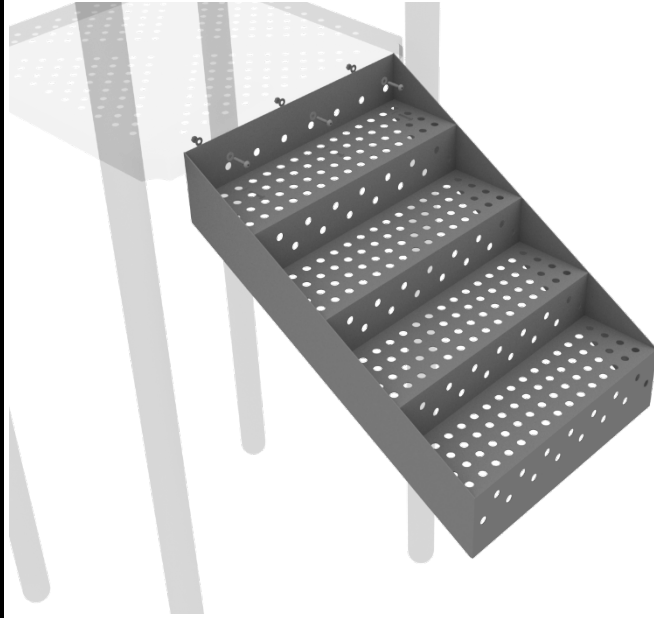

### STEP: 2


Attach the ADA Transfer Stair Handrails to the posts using Offset Clamps. Then using six (6) M10\*25 Bolts, twelve (12) M10 Washers, and six (6) M10 Lock Nuts, attach the handrail to the bottom and side of the stairs.



## 5.0-inch 4-foot Transfer Station Install

### STEP: 3

Using three (3) M10\*25 Bolts, six (6) M10 Washers, and three (3) M10 Lock Nuts, attach the ADA transfer deck to the base of the 4-foot ADA transfer stair.

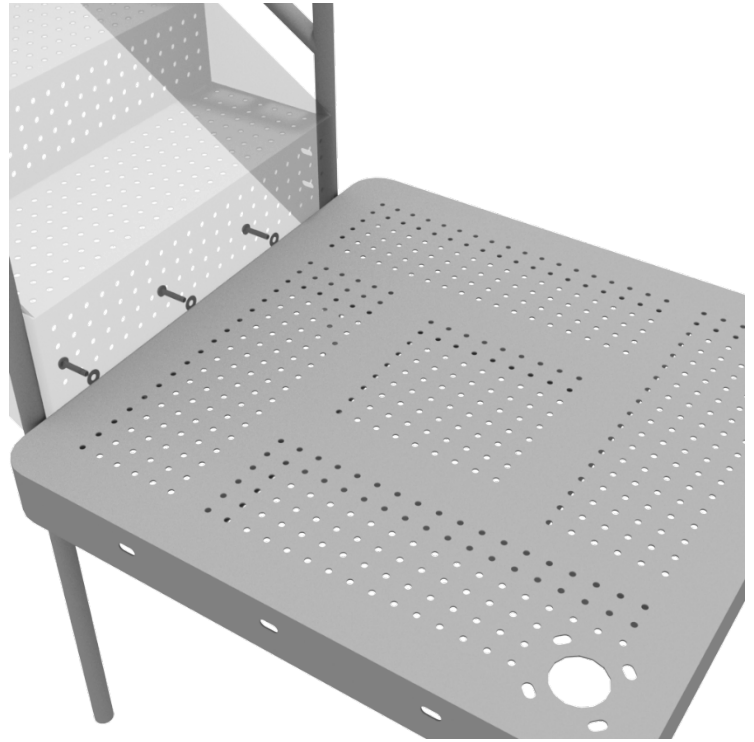

### STEP: 4

See general installation guide regarding footing information for the transfer deck handrail. Using four (4) M10\*25 Bolts, eight (8) M10 Washers, and four (4) M10 Lock Nuts, attach each transfer deck handrail to the ADA transfer deck.






## 5.0-inch 4-foot Transfer Station Install


### STEP: 5

See general installation guide regarding footing information for the ADA transfer step mount. Using two (2) M10\*25 Bolts, four (4) M10 Washers, and two (2) M10 Lock Nuts, attach the transfer step to each ADA transfer step mounts.

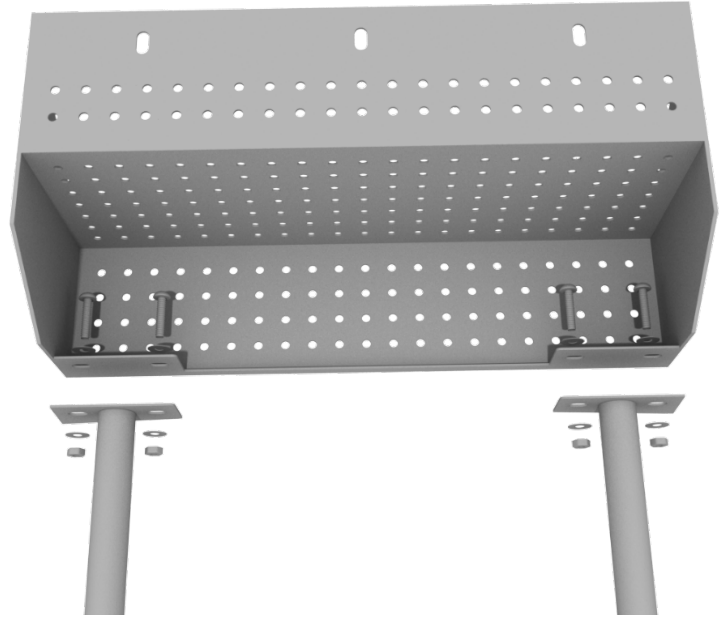

### STEP: 6

Using three (3) M10\*25 Bolts, six (6) M10 Washers, and three (3) M10 Lock Nuts, attach the top of the ADA transfer step to the ADA transfer deck.

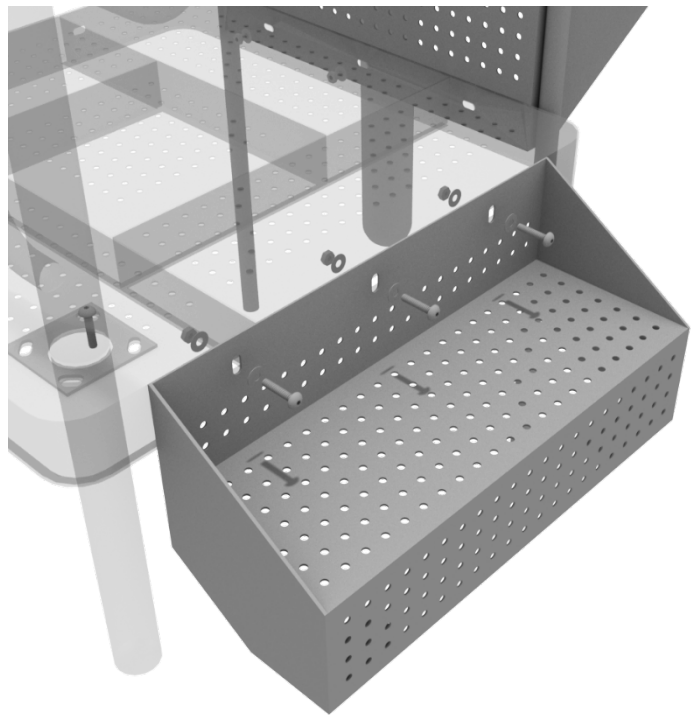

# Half Hex Deck Installation

## STEP: 1

After the posts are in place, using five (5) M10\*35 bolts, ten (10) M10 washers, and five (5) M10 lock nuts, attach the deck to each pre-attached deck clamps as shown in the image.


Deck clamps are pre-attached to the posts and should not be altered in any way.



# Half Hex Deck Connect to Half Hex Deck


## STEP: 1

When installing decks that are adjacent to one another at the same height, they should be bolted together. On the underside of the deck, install using four (4) M10\*25 Bolts, eight (8) M10 Washers, and four (4) M10 Lock Nuts. Repeat this process for every set of adjacent decks.

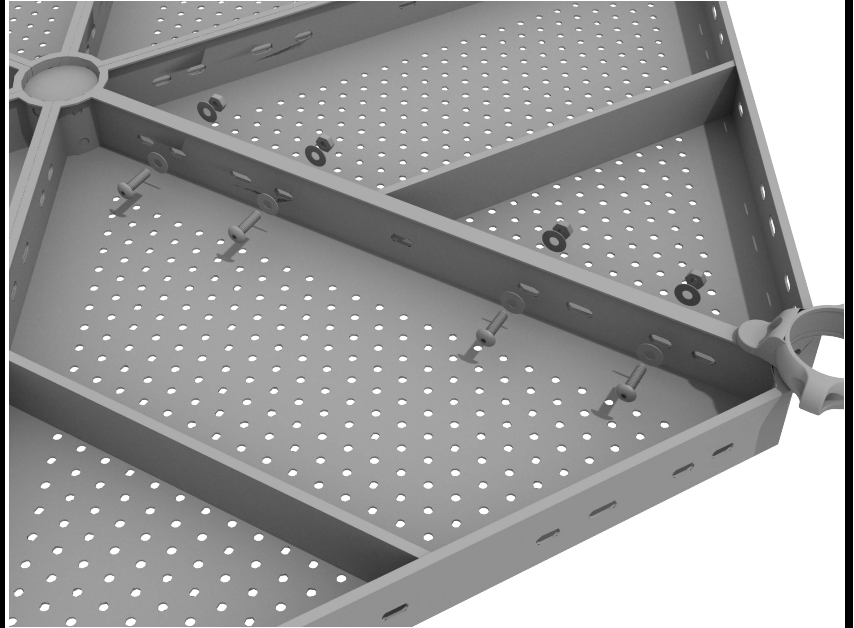

# Bamboo Arch Climber Installation

See general installation guide regarding footing information for the Bamboo Arch climber. Attach the climber to the deck using five (5) M10\*25 bolts, five (5) M10 spring washers and five (5) M10 washers.

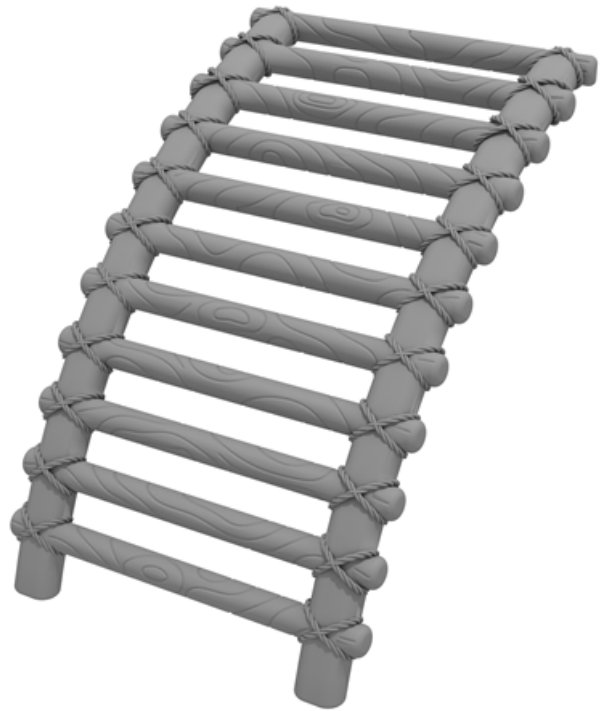


Using two (2) M10\*20 bolts, two (2) M10 spring gaskets, and two (2) M10 washers, attach the bottom of the bamboo climber to the climber end mounts.



# 4-foot Double Straight Slide Installation

## STEP: 1

Attach the deck climber extension to the proper deck using four (4) M10\*25 bolts, eight (8) M10 washers, and four (4) M10 lock nuts.

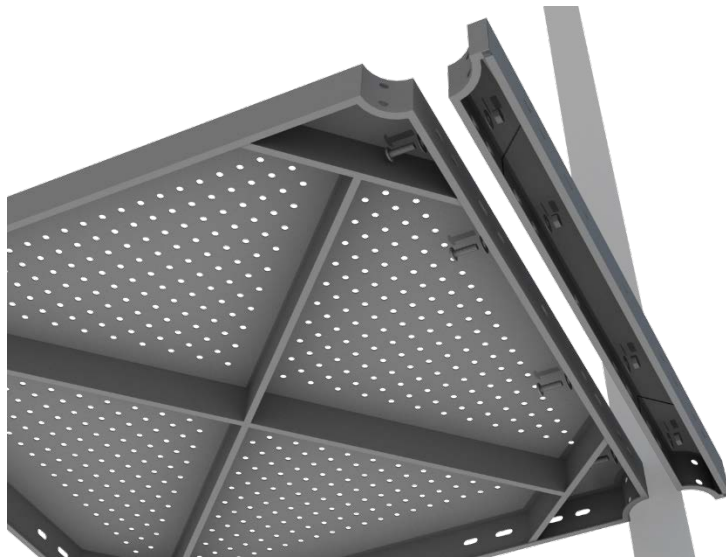

## STEP: 2

Then, See general installation guide regarding footing information for the double slide end mounts. Using two (2) M8\*20 bolts, two (2) M8 spring gaskets, and two (2) M8 washers, attach the slide end mounts to the double slide.






# 4-foot Double Straight Slide Installation


## STEP: 3

Then, attach the slide to the deck extension using four (4) M10\*45 bolts, eight (8) M10 washers, and four (4) M10 lock nuts.

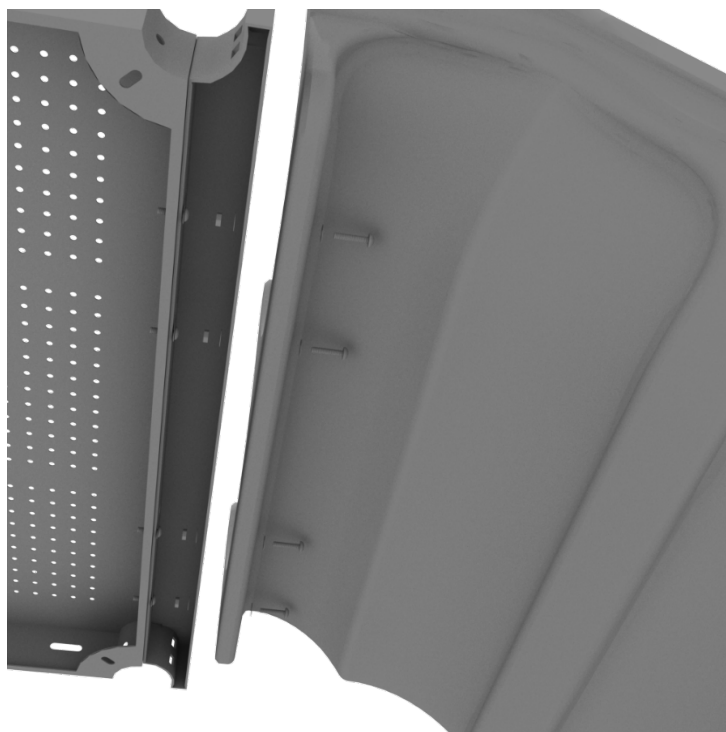

## STEP: 4

Once the slide is attached, take the tree house double slide hood and insert hood into the top of the slide, and then attach the top using two (2) double slide clamps, and two (2) M8\*30 bolts.

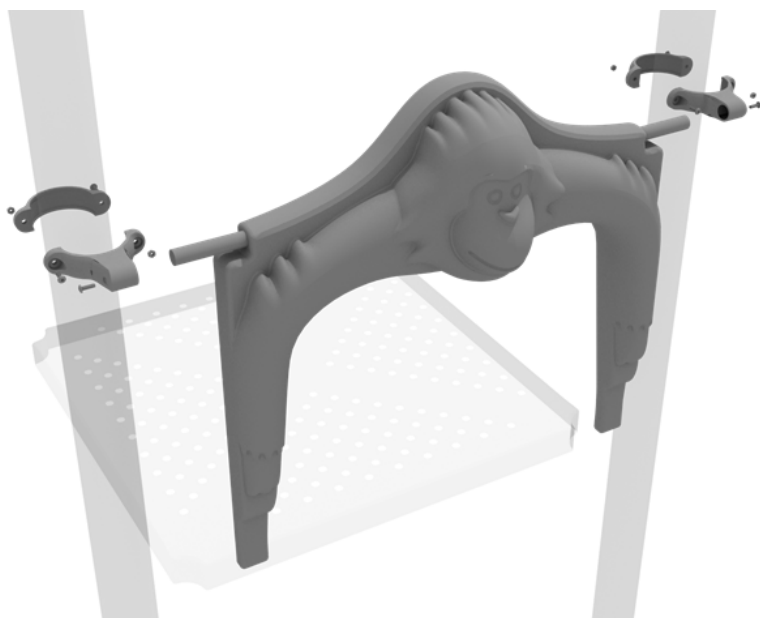


# 4-Foot Tree House Right Turn Slide Installation

## STEP: 1


To attach the tree house slide hood to a deck, take two tube clamps and attach them to the posts using two (2) M4\*25 self-tapping screws.

Then, attach the hood to the deck using two (2) M10\*20 bolts, two (2) spring washer, four (4) M10 washers, and two (2) M10 lock nuts. Repeat this process for every single slide hood.

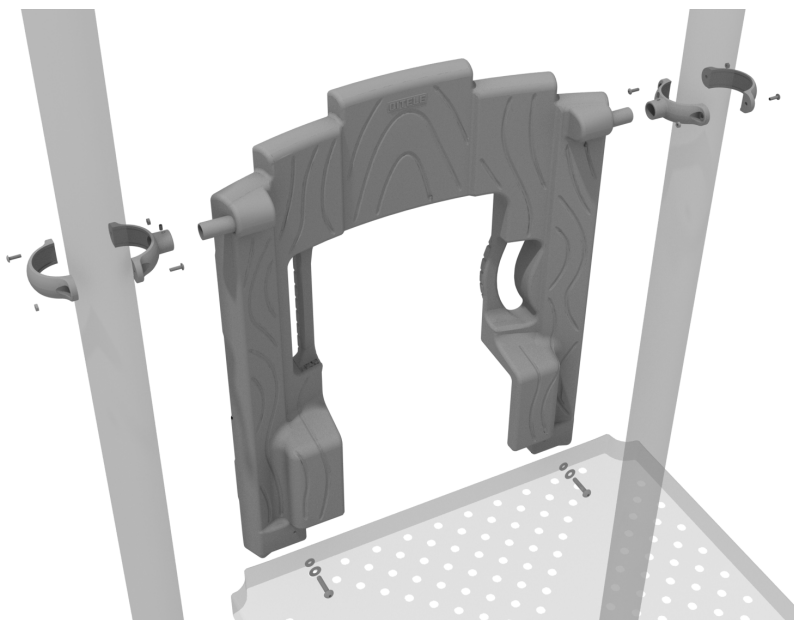

## STEP: 2

See general installation guide regarding footing information for the slide end mount. Using two (2) M8\*20, two (M8) spring washers. And two (2) M8 washers, attach the slide to the slide support post.

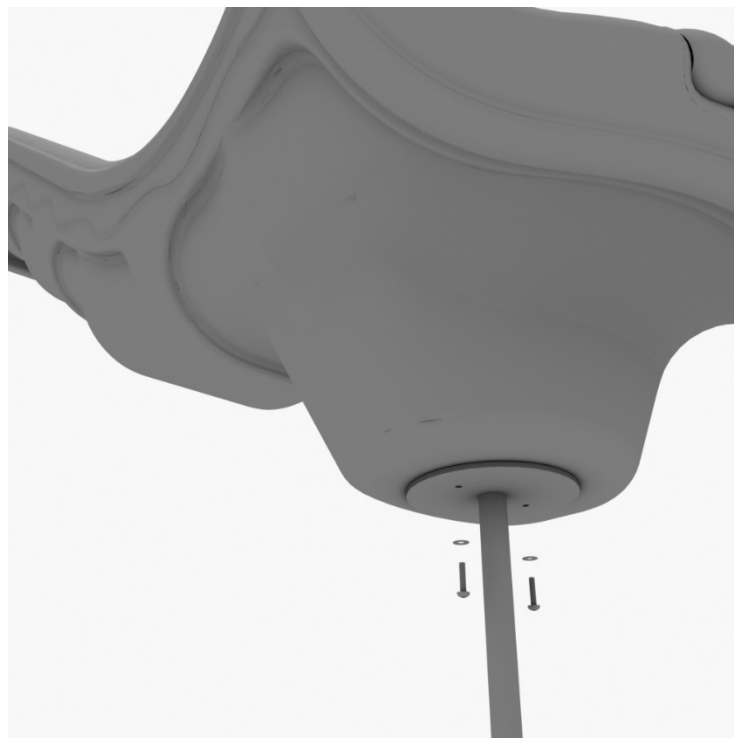


10859 Washington St. Suite  
200, Indianapolis, IN  
1-800-667-0097

Created By: Lindsey D  
Date: 0719/2022

# 4-Foot Tree House Right Turn Slide Installation


## STEP: 3

See general installation guide regarding footing information for the middle slide support. Using two (2) M8\*20 bolts, two (2) M8 spring washers, and two (2) M8 washers, attach the middle slide support post.

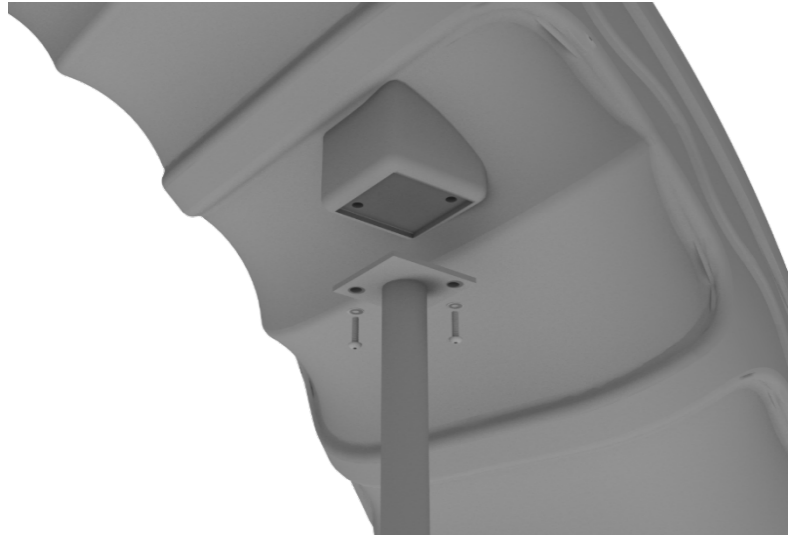

## STEP: 4

Using one (1) M10\*45 bolt, two (2) M10 washers, and two (2) M10 lock nuts, attach one side of the slide to the deck.

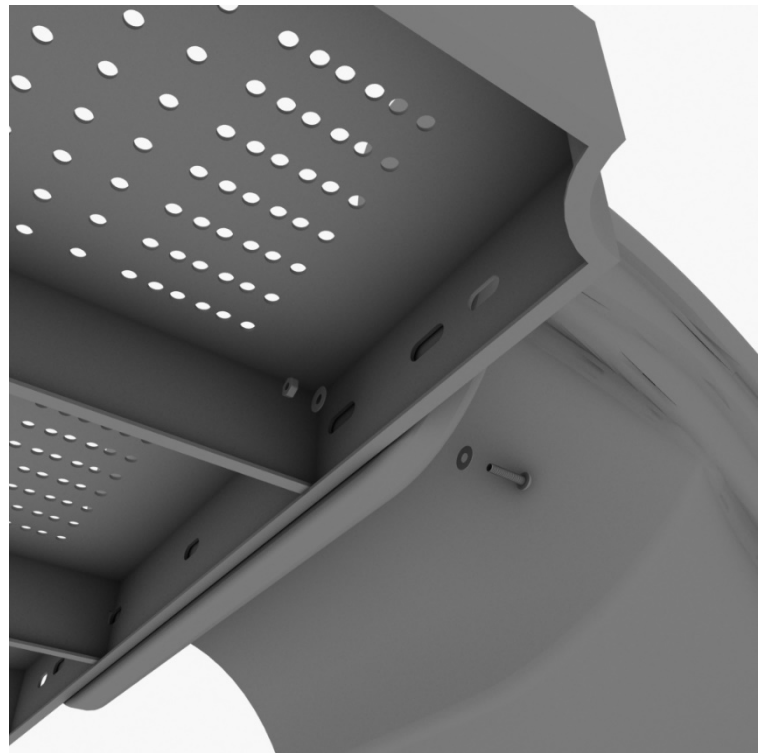


# Treehouse Stump Window Panel Installation

## STEP: 1

Align the Treehouse Stump Window Panel with the intended posts. The posts have a threaded insert that must be lined up correctly with the Treehouse Stump Window Panel.

Using the provided mounting brackets, attach the panel to the posts with eight (8) M8\*30 Bolts, eight (8) M8 Washers, and eight (8) M8 Spring Gaskets.

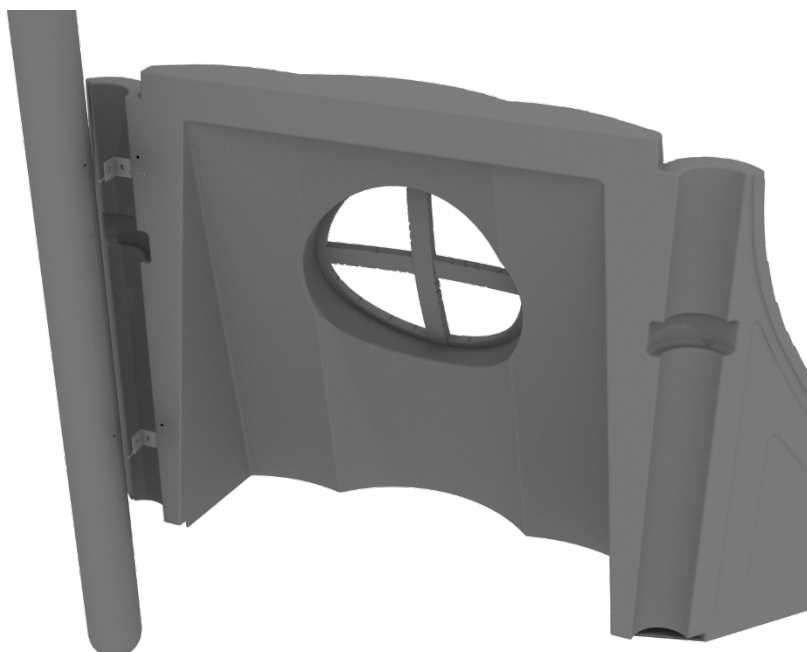

## STEP: 2

The Treehouse Stump Window Panel can attach to a 2<sup>nd</sup> Treehouse Stump Window Panel using one (1) M8\*45 Bolt, and one (1) M10\*45 Inner Hex Nut.

This step does not apply in cases where there is only 1 Treehouse Stump Window Panel.




10859 E Washington St. Suite 200  
Indianapolis, IN 46229  
1-800-667-0097

Created By: Derick H  
Date: 08/10/2018

# 5.0-inch Bamboo Panel Installation

## STEP: 1


Attach the Bamboo Panel to the designated posts using two (2) tube clamps and two (2) M4\*25 Set Screws. Then, attach the bottom of the panel to the deck using four (4) M10\*20 Bolts, four (4) M10 Washers, and four (4) M10 Lock Nuts.

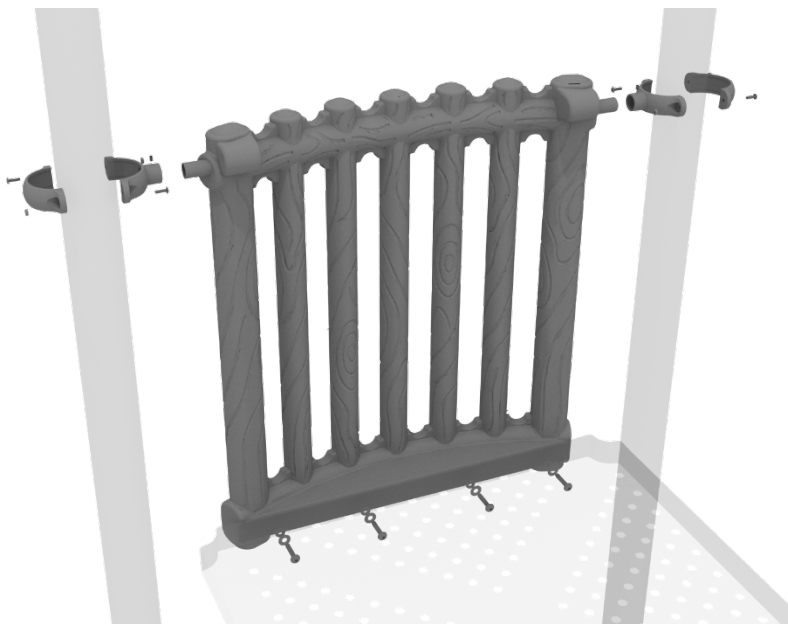

# 5.0-inch Treehouse Gear Panel Installation

## STEP: 1

Attach the Treehouse Gear Panel to the designated posts using two (2) tube clamps and two (2) M4\*25 Set Screws. Then, attach the bottom of the panel to the deck using four (4) M10\*20 Bolts, four (4) M10 Washers, and four (4) M10 Lock Nuts.

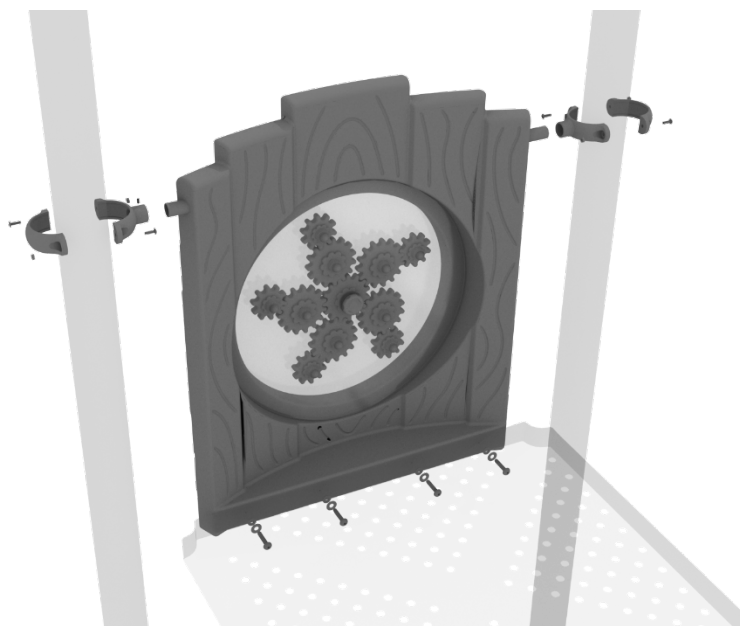




# 5-inch 2-Clamp Arch Rail Installation

## STEP: 1


Attach each two-clamp arch rail to the designated deck by using two (2) tube clamps, and two (2) M4\*25 self-tapping screws to attach the top of the panel to the posts. Then use two (2) M10\*25 bolts, four (4) M10 washers, and two (2) M10 lock nuts to attach the panel to the deck.

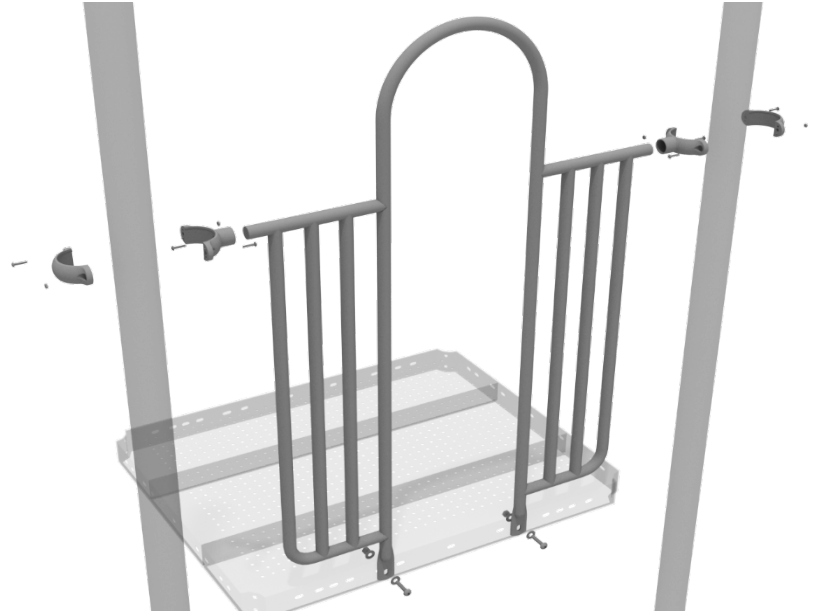

# Hex Bulb Roof Install


## STEP: 1

Connect Hex bulb roof pieces together using seven (7) M4\*75 screw for each leaf segment.

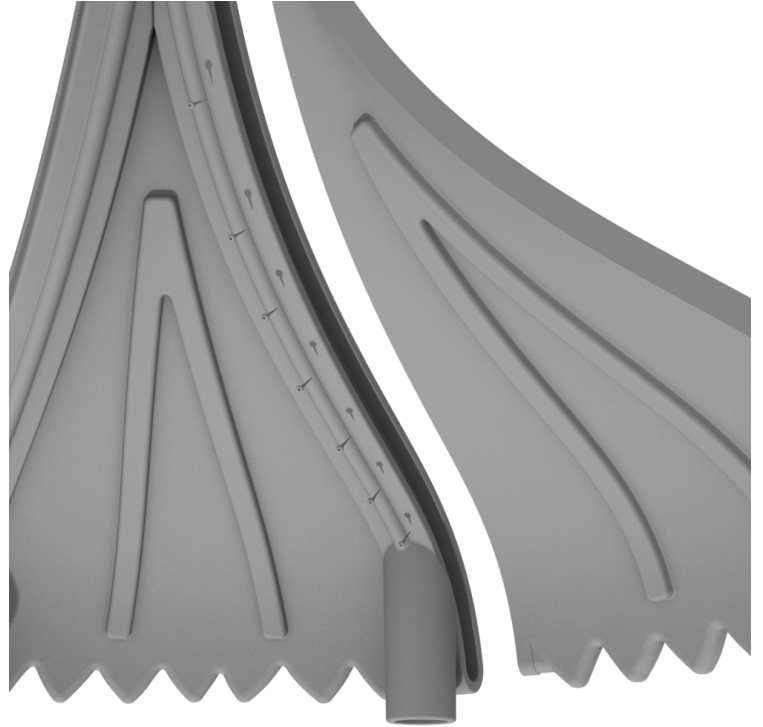

## STEP: 2

Once bulb top is in place secure using three (3) M4\*75 self tapping screws.

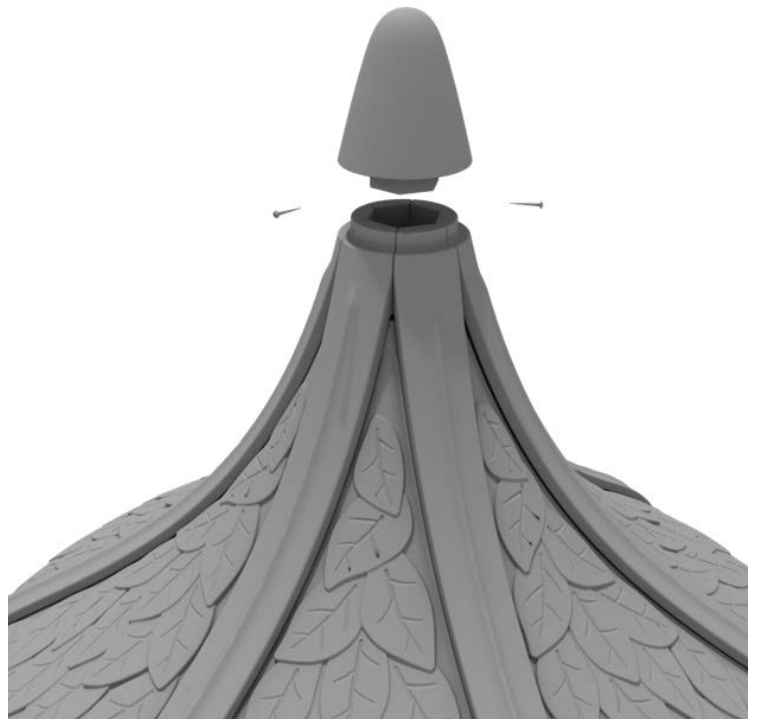

# Hex Bulb Roof Install

## STEP: 3

Place Bulb roof on designated posts.



## STEP: 4

Secure Bulb roof in place using one (1) M4\*50 self tapping screw, one (1) M4 washer and one plastic cover with cap for each post.

