


Honeycomb Hand Drums Installation

STEP: 1

Dig footer (18" x 18" x 18") and fill with concrete. Allow concrete to begin to set before sinking L-Bolts into the mixture.

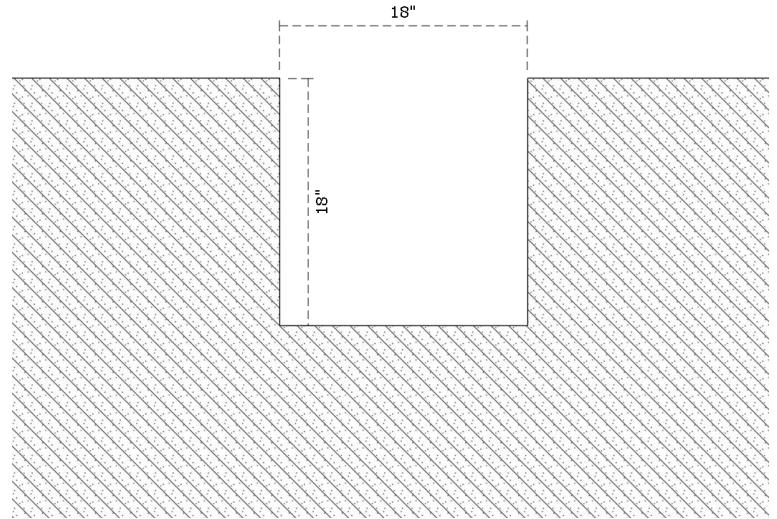

STEP: 2


Attach the L-bolts to the Honeycomb hand drum stand using the given hardware. Once all L-bolts are attached the Honeycomb hand drum is ready to be set into the concrete footer.



Honeycomb Hand Drums Installation

STEP: 3

Once the bolts are set, let concrete cure for at least 48 hours. (Follow concrete manufacturer's recommendations.) It may be necessary to retighten the nuts at this time.

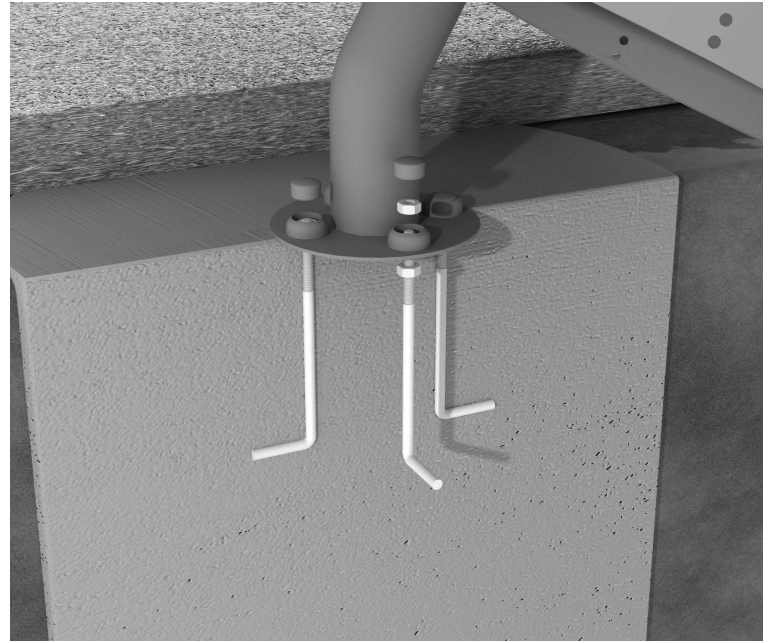

STEP: 4

Connect plastic mount cover over the mounting plate and bolt the two pieces together using the supplied hardware.

