



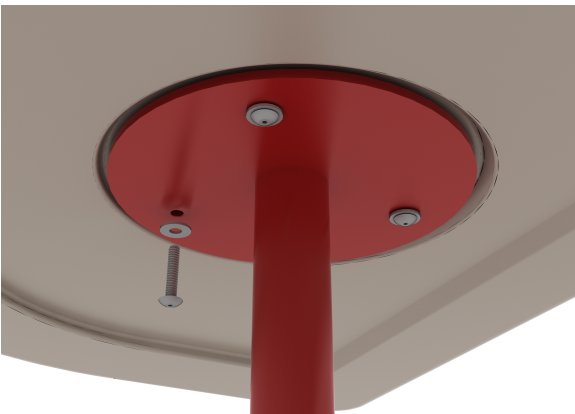


Poseidon's Hideout Packing List and Install Guide

PFS013 Poseidon's Hideout



No.	Item	Image	QTY	Hardware	
1	Climber Section (half)		2	3.5 in M10 Bolt: 12 Lock Nut: 12 Washer: 24 Bolt Cover: 12 17mm Wrench: 1	
2	Mount		4	M10 Security Bolt: 12 Washer: 12 Security Wrench: 1	

Install Guide		
1	<p>First, both halves of the climber must be connected. The hardware kit includes 12 3.5 inch bolts which are inserted through both sides. Place the plastic bolt cover over the end and secure in place with the washer and lock nut. Finally, slide the cap for the bolt cover into place.</p>	
2	<p>Next, install the Mounts. Place mounting plate against the circular indents on the bottom of the climber. Then, fasten using washers and the security bolts.</p>	

Poseidon's Hideout Packing List and Install Guide

3

Standing Climber upright, mark ground for footer locations. Dig footers to the appropriate depth to have the bottom of the climber touching the top of the safety surfacing (Depth of footer depends on amount of surfacing material being used). Pour concrete into footer holes to secure climber into place. Follow guidelines from the concrete manufacturer for amount / time of curing, etc.

