

Glockenspiel Installation

STEP: 1

Using four (4) M8 set screws connect Glockenspiel top to post.



STEP: 2


Attach mallets to post using V-bracket supplied and two (2) M6 set screws.



Glockenspiel Installation


STEP: 3

Drill four (4) holes into the concrete
1/2 inch deeper than the anchor
will penetrate. Make sure that the
minimum embedment
requirements are met.
Clean out the holes.

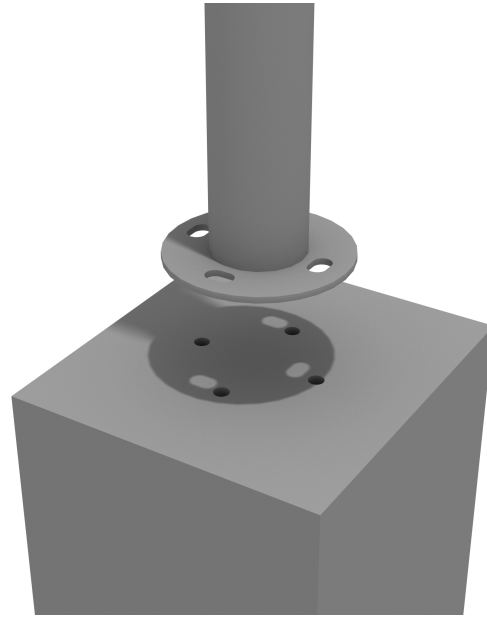

STEP: 4

Hammer the bottom of the wedge
anchor into the concrete. Make sure
this is a tight fit.

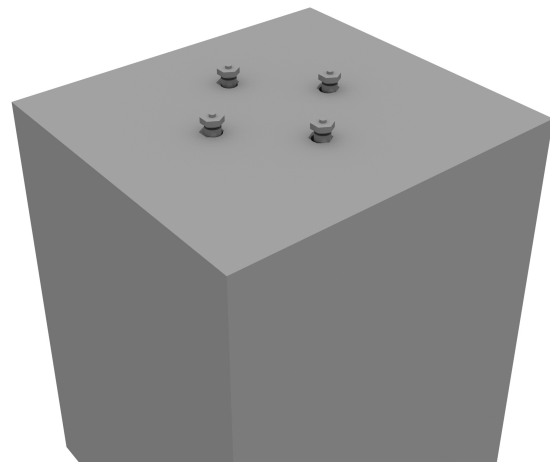

Glockenspiel Installation

STEP: 5

Using four (4) lock nuts and four (4) washers, tighten the nuts into the previously hammered in anchors.

