


Assembly Instructions for Permanent

Mount Fun Shot

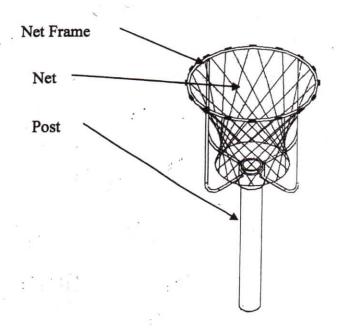

- 1. Attach net to the frame.
- 2. Align the net frame with the hole in the post and insert the 3/8 bolt through the hole.
- 3. Insert the set screw into the collar and tighten with Allen head wrench.
- 4. Locate the area for the Fun Shot and dig a 12" diameter hole approximately 18" deep.
- 5. Place the assembled the Fun Shot into the hole level and plum.
- 6. Pour concrete into the hole leaving about 3" below ground level.
- 7. Let concrete set up and the back-fill hole with dirt.

Safety Precautions:

No Climbing on basketball Goal No Ball Dunking