


Forever Building Imaginations Through Play

Product Information Pedai Path Talladega Fast Track

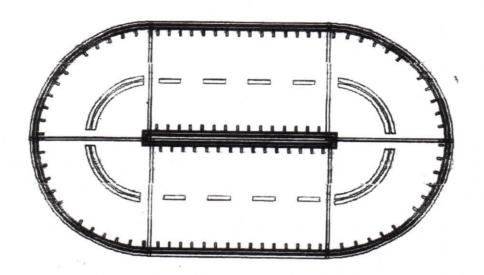

Parts List

- 1. (4) Curved Track
- 2. (2) Straight Track
- 3. 3b Button Head Bolt
- 4. 3b Cleat Nut 5. 3b 3/8" S.S Flat Washer
- 6. 28 In Ground Mount Anchors(Option 1) Steel Pins
 7. 28 Surface Mount Anchors (Option 2) Hex Head Bolts With Washers
- 8. 28 Direct Bury Anchors (Option 3) J-Bolts with Propeller Nuts
- 9. (1) Stripe Kit



TRIKE PATH

STRIPE KIT INSTALLATION

- 1) When applying the stripe kits make sure you clean the designated indention area by just dusting off any debris that may be on the indention. Do this prior to peeling off the back label as the stripe stickers are extremely sticky once backing is removed.
- 2) There will be 4 Straight Stripe Stickers per straight Trike Path Unit. Place each one on the indention provided for it.
- 3) There will be 2 Curve Stripe Stickers per curve Trike Path Unit. One stripe will go on each indention by centering it as best you can over the indention.
- 4) After placing on all stripe stickers, the children are ready to ride!!

PEDAL PATH ASSEMBLY INSTRUCTIONS

Each part has a male and female end. The female end will lay over the male end.

- Lay out all straight and curved sections in the configuration that was ordered
- 2. Begin to insert hardware placing the cleat nut on the bottom side beginning with one of the middle holes place a washer on the bolt and screw it into the receiving cleat nut. Place all bolts, washer and cleat nuts in all the holes except the ones on the outer lip. Snug tight, do not over tighten.
- The outer holes are for anchoring. Place washers on the spikes and drive the steel spikes into the ground. Note: If placing over concrete or other hard surface concrete anchors may be needed.

