



Everlast Climbing Industries' Mat-Locking® System Installation Instructions

**To view a video of these instructions
online visit: youtu.be/XNtliwTqtUw**

EVERLAST CLIMBING INDUSTRIES P. 800.476.7366 F. 651.665.9131

WWW.EVERLASTCLIMBING.COM

CORDLESS VERSION

EVERLAST CLIMBING INDUSTRIES, INC.

INSTALLATION INSTRUCTIONS: CORDLESS MAT LOCKING® SYSTEM



Materials Included:

Mats
Mat Locking® Holds
(including red slider, bolt and washer)
Security Wrench
1-5/8" Screws
Bolts

Tools:

Drill
#2 Phillips Head Bit

INSTALLATION INSTRUCTIONS:

(Please read all instructions thoroughly before starting to install.) Indoor use only.

1. Lay mats on the floor so that the bottom straps are closest to the wall and line up with the T-nuts on the wall. Attach the bottom straps to the climbing wall using the bolts and security wrench provided. Choose the grommet hole that allows the strap to have some slack - you may need to angle the straps to reach a nearby T-nut.

2. With the bottom straps attached to the wall, stand the mats up against the wall.

IMPORTANT NOTE: The Cordless Mat Locking® System is designed for the mats to rest on the floor. Hanging the mats off of the floor will shorten their life and make them much harder to use.

3. Hook the loop of the nylon webbing over a Mat Locking® Hold and hold it in a correct position on the climbing wall. Make sure the loops are not pulled too tight as this will make the locking/unlocking process more difficult. Where two mats come together, pass one loop through the other before hooking it over the Mat Lock Hold.

4. Using a drill with a #2 Phillips Head Bit, screw the three 1-5/8" screws through the Mat Lock Hold and into the climbing wall by turning the black slider out of the way, starting with the center mounting hole first.

5. Repeat steps #3-4 to install the remainder of the Mat Locks on the wall.

6. Starting with the first Mat Lock, rotate the black security slider. Tighten with the security wrench.

7. Repeat step #6 for the remainder of the Mat Lock Holds.



BE SURE YOU ARE INSTALLING THE MAT LOCKS AS PICTURED



WARNING


THE PROPER CARE AND ONGOING MAINTENANCE OF YOUR CLIMBING WALL IS ESSENTIAL AND IS YOUR RESPONSIBILITY. PLEASE REFER TO THE SAFETY, CARE AND MAINTENANCE INSTRUCTIONS.

EVERLAST CLIMBING INDUSTRIES, INC.

INSTALLATION INSTRUCTIONS: MAT-LOCKING® SYSTEM WITH PLATE



Figure A

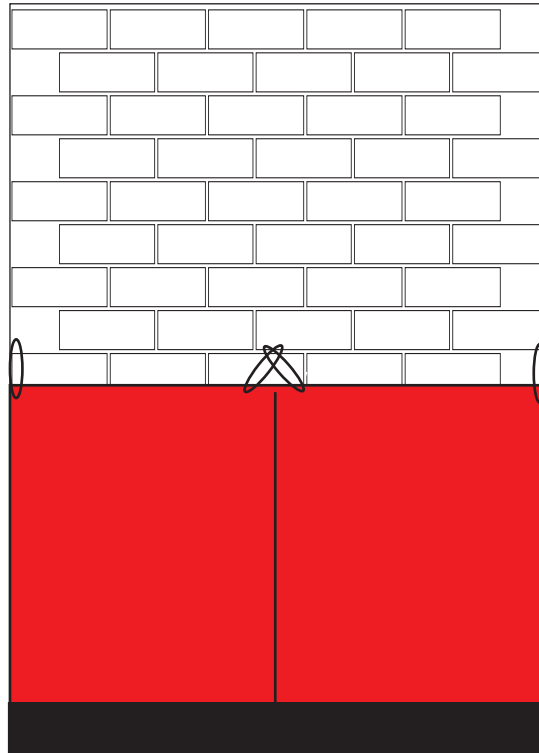

Mounting Holes

Figure B

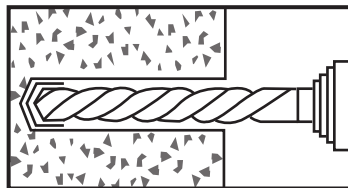


Figure C


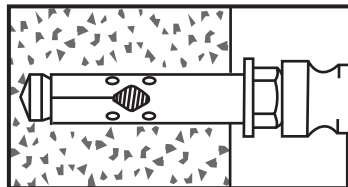


Figure D

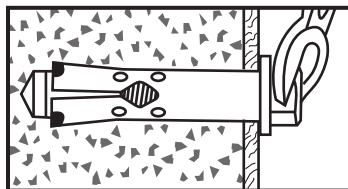

WARNING

THE PROPER CARE AND ONGOING MAINTENANCE OF YOUR CLIMBING WALL IS ESSENTIAL AND IS YOUR RESPONSIBILITY. PLEASE REFER TO THE SAFETY, CARE AND MAINTENANCE INSTRUCTIONS.