


Cosmic Crest Install Guide


STEP: 1

Align the Crossbar sections with the Spherical Hubs ensuring that all joints are able to be connected.

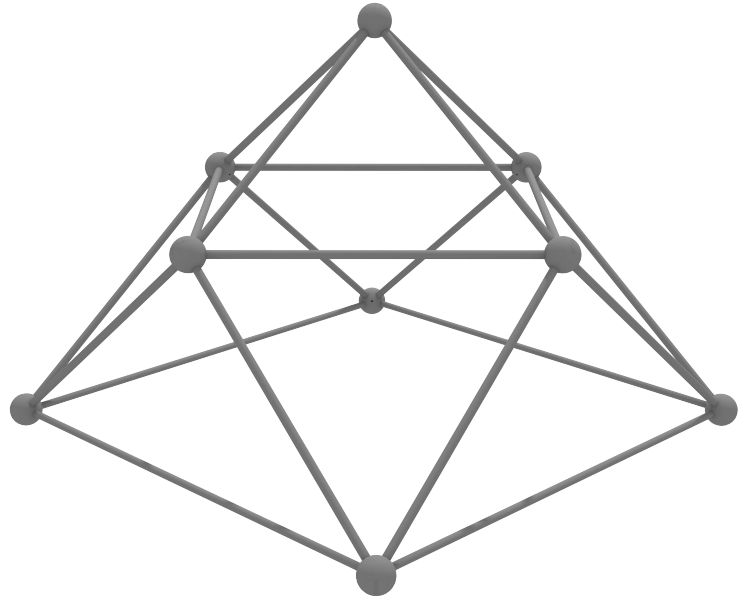


STEP: 2

The Crossbars and Mounts attach to the Spherical Hubs with a single M14 Hex bolt at each attachment point. Thread the bolt through from the inside of the Spherical Hub.

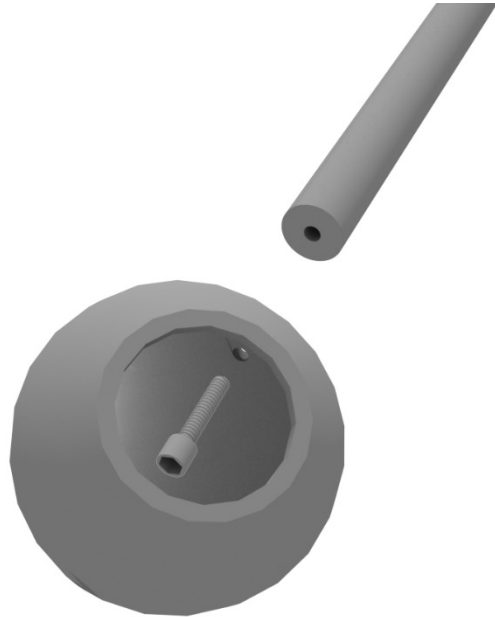


STEP: 3

Orient the Net so that each of the pre-attached eyebolts aligns with a Spherical Hub.

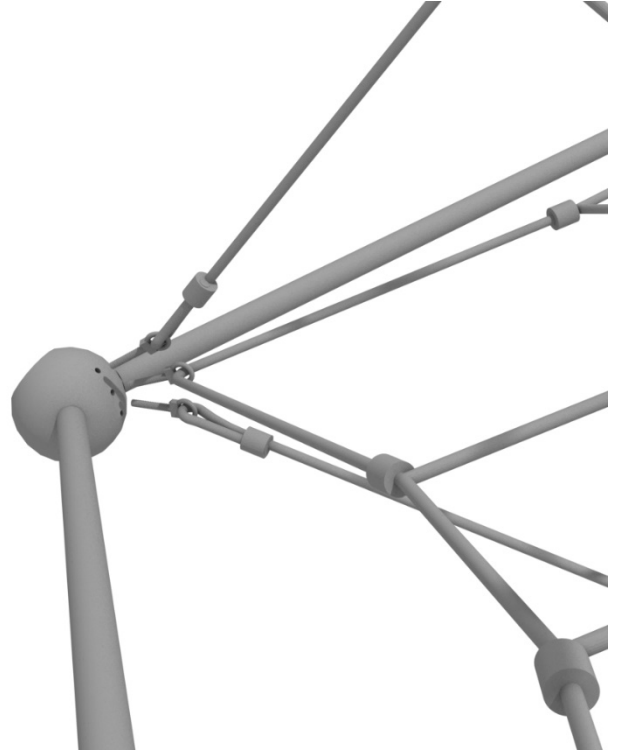
**STEP: 4**

Attach the Net to each Spherical Hub with an M14 Locking Nut.

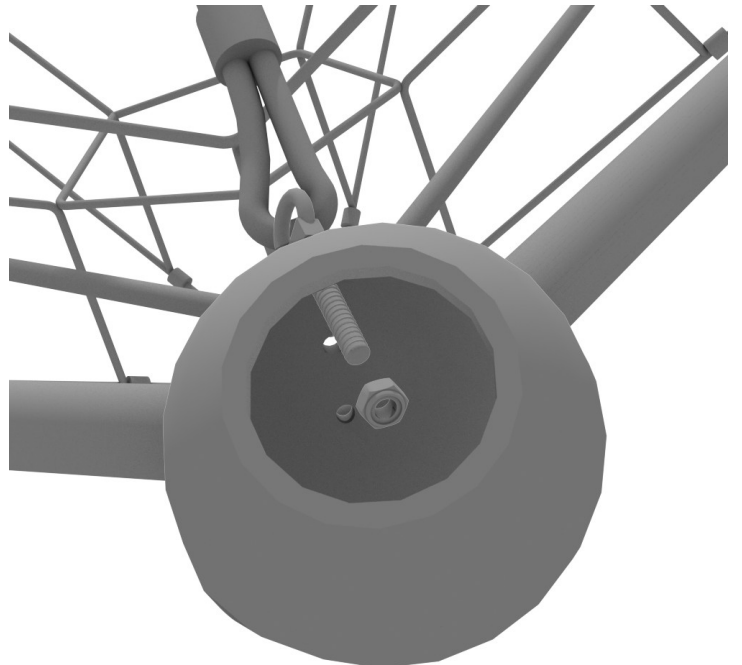

STEP: 5

After all Crossbars and the Net are fully installed snap the Plastic Caps into place on the Spherical Hubs to prevent access to the climber hardware.

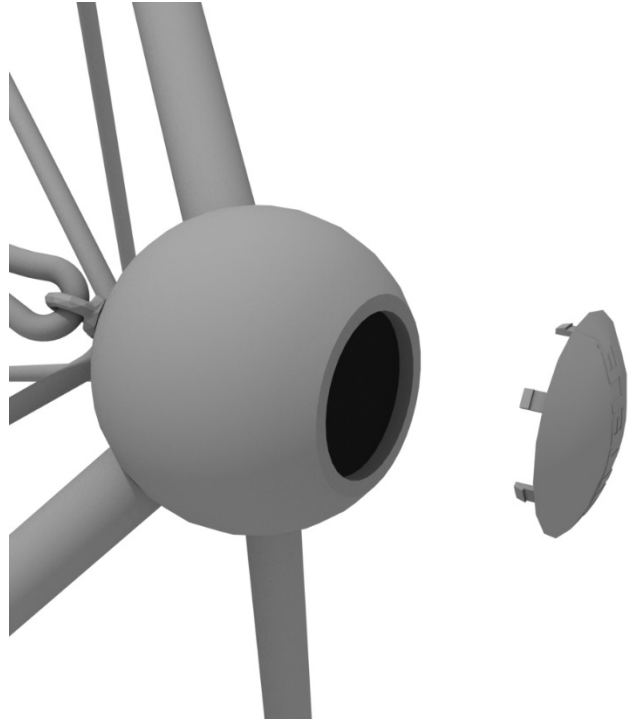**STEP: 6**

Ensure that all connection points on the net are secured to the outer frame.

