


PCH005 4 Panel Rope Challenger Install

STEP: 1


**DO NOT CEMENT POSTS INTO PLACE
UNTIL THE ENTIRE STRUCTURE IS
ASSEMBLED.**

Refer to the General Installation guide
footing information and dig proper holes
for the support posts.

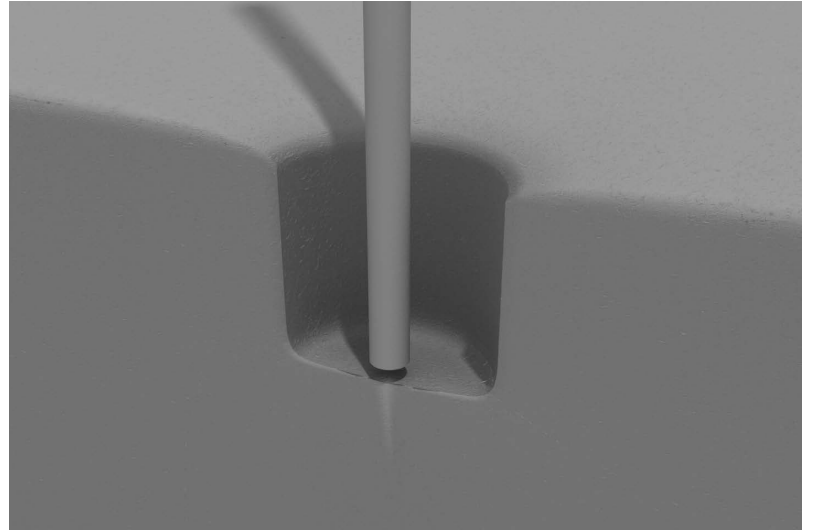

STEP: 2

The Net Climber is attached to a set of
posts with four (4) Tube Clamps, and four
(4) M8*30 bolts.

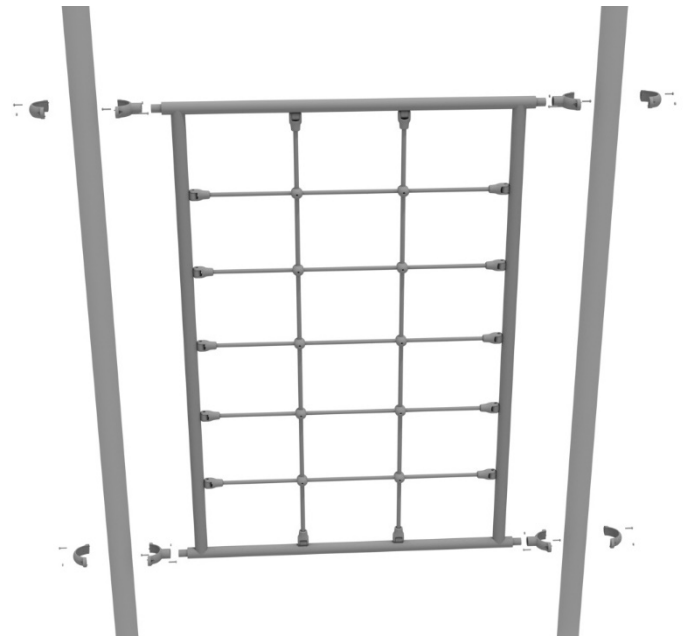

PCH005 4 Panel Rope Challenger Install

STEP: 3

The Cyclone Climber attaches to the post using four (4) M10*120 Bolts, eight (8) M10 Washers, four (4) M10 Locking Nuts, and eight (8) Plastic Bolt Covers.

The Cyclone Climber attaches to the in-ground mounts using one (1) M10*20 Bolt, one (1) M10 Spring Washer, and one (1) M10 Washer for each mount.

Repeat these steps for the other Cyclone Climber.

