
Post Installation



STEP: 1

DO <u>NOT</u> CEMENT POSTS INTO PLACE UNTIL THE ENTIRE STRUCTURE IS ASSEMBLED.

Refer to the General Installation guide footing information and dig proper holes for the support posts.

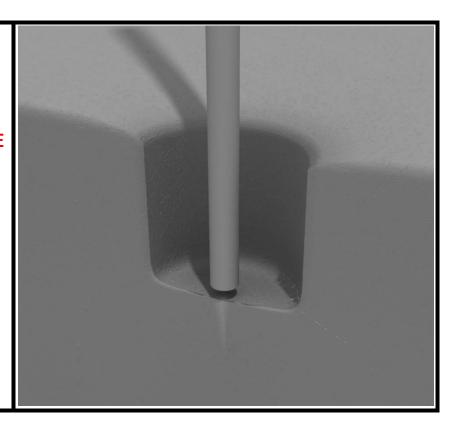

10859 E Washington Street, Ste. 200 Indianapolis, IN 46229 1-800-667-0097

Created By: Aaron Price


Date: 04/26/2018

Craggy Turn and Straight Sections Install



STEP: 1

Attach the two Straight Craggy
Sections together with the Mounting
Bracket using fourteen (14) M12
bolts, fourteen (14) M8*60 inner hex
screws, fourteen (14) M12 washers,
and fourteen (14) M8 washers.

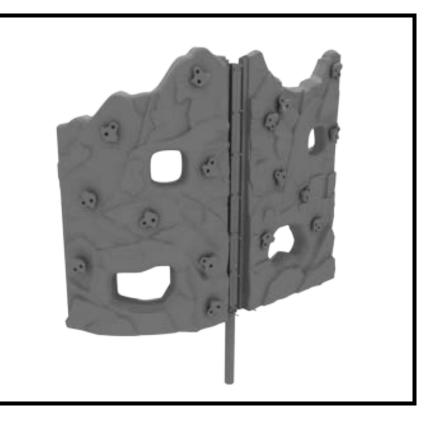

10859 E Washington Street, Ste. 200 Indianapolis, IN 46229 1-800-667-0097

Created By: Matt N Date: 10/19/2021

Craggy Rock Climber End Installation



Created By: Matt N

Date: 10/19/2021

Connect the craggy end section to the curved craggy section using ten (10) M12 barrel nuts, ten (10) M8*60 bolts, ten (10) M12 washers, and ten (10) M8 washers.



10859 E Washington Street, Ste. 200 Indianapolis, IN 46229 1-800-667-0097


Wavy Ladder Connect Installation



See General Installation Guide regarding post footing information.

Attach the Wavy Craggy Climber Brackets to the section ends using seven (7) M12 bolts, seven (7) M8*60 inner hex screws, seven (7) M12 washers, and seven (7) M8 washers. Then, attach each end to the connection points using two (2) M8 screws, two (2) M8 locking washers, two (2) M10 Loading Bolts, and two (2) M10 Washers.

Repeat the steps on the opposing end.

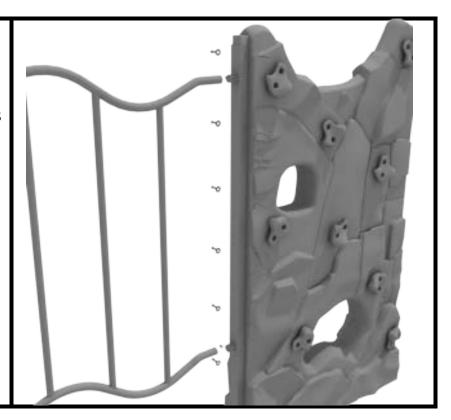

10859 E Washington Street, Ste. 200 Indianapolis, IN 46229 1-800-667-0097


Created By: Matt N Date: 10/19/2021

Craggy Disc Climber Connect Installation



See General Installation Guide regarding post footing information.

Attach the straight craggy climber section to the bracket Connect using seven (7) M12 bolts, seven (7) M8*60 inner hex screws, seven (7) M12 washers, and seven (7) M8 washers. Then, attach the connection point using one (1) M8 screw, one (2) M8 locking washer, one (1) M10 Loading Bolt, and one (1) M10 washer.

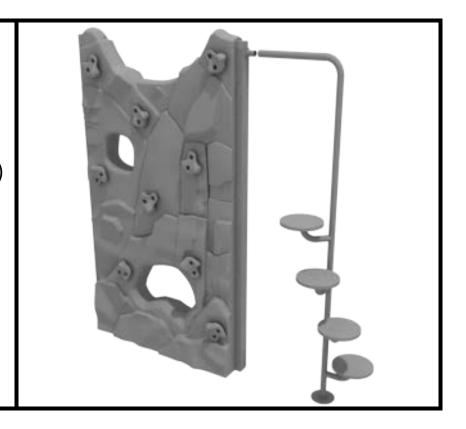

10859 E Washington Street, Ste. 200 Indianapolis, IN 46229 1-800-667-0097


Created By: Matt N Date: 10/19/2021

Craggy Arch Ladder Connect Installation



See General Installation Guide regarding post footing information.

Mount the Bracket section to the end of the Craggy using seven (7) M8*60 inner hex screws, seven (7) M12 washers, and seven (7) M8 washers. Then, attach the Craggy Arch Ladder to the connection points on the bracket using two (2) M8 screws, two (2) M8 locking washers, two (2) M10 Loading Bolts, and two (2) M10 washers provided.

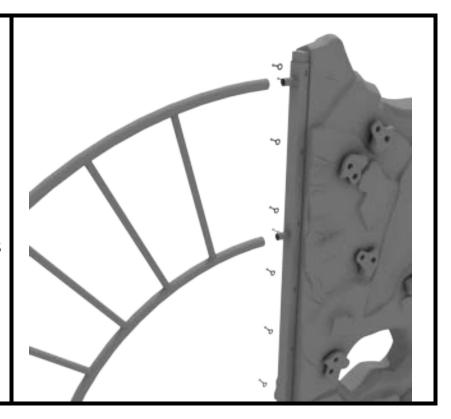

10859 E Washington Street, Ste. 200 Indianapolis, IN 46229 1-800-667-0097

Created By: Matt N Date:10/19/2021