

STEP: 1


Dig footings and place the Craggy Climber Tri-Connect climber. Do not cement until the entire climber is assembled.

Refer to the General Installation Instructions for more information on support post footings.



STEP: 2

Connect the Craggy Climber Straight Section to the Tri-Connect Climber using seven (7) M8*65 bolts, seven (7) M8 Washers, seven (7) M10 Washers, and seven (7) M10 Inner Hex nuts.

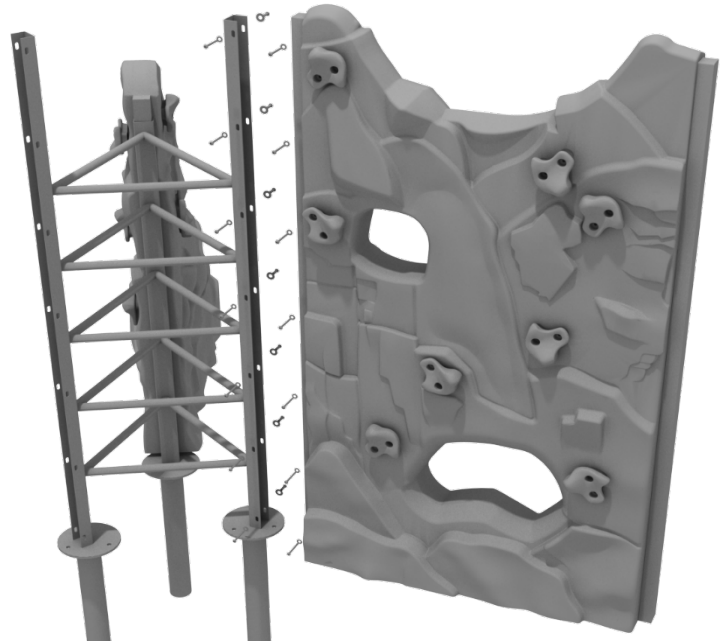

Attach the straight craggy section and the curved craggy section together with the Mounting Bracket using fourteen (14) M12 bolts, fourteen (14) M8*60 inner hex screws, fourteen (14) M12 washers, and fourteen (14) M8 washers.



STEP: 4

Connect the craggy end section to the curved craggy section using ten (10) M12 barrel nuts, ten (10) M8*60 bolts, ten (10) M12 washers, and ten (10) M8 washers.

