


# Inground Post/Mount Installation

## STEP: 1

**DO NOT CEMENT POSTS/MOUNTS  
INTO PLACE UNTIL THE ENTIRE  
STRUCTURE IS ASSEMBLED.**

Refer to the General Installation  
guide footing size information and  
digging proper holes for the support  
posts/mounts.

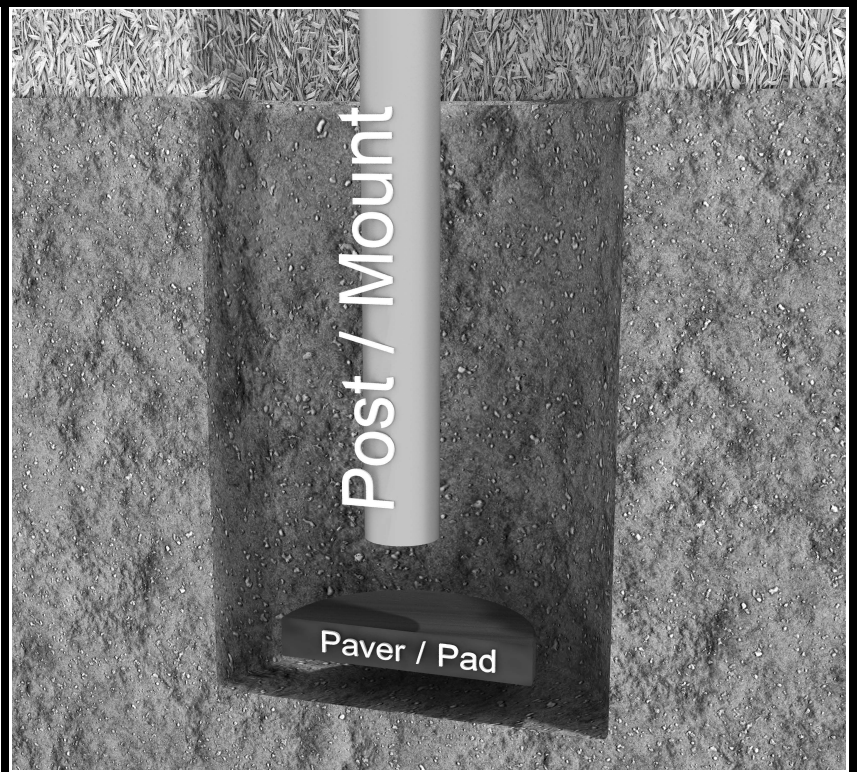


10859 E Washington St. Suite 200  
Indianapolis, IN 46229  
1-800-667-0097

Created By: Gage Brown  
Date: 04/26/2018

# Assisted Step Up Platforms Install


## STEP: 1

Connect each deck support to the deck plates by using eight (8) M10\*25 bolts, sixteen (16) M10 washers, and eight (8) M10 lock nuts.

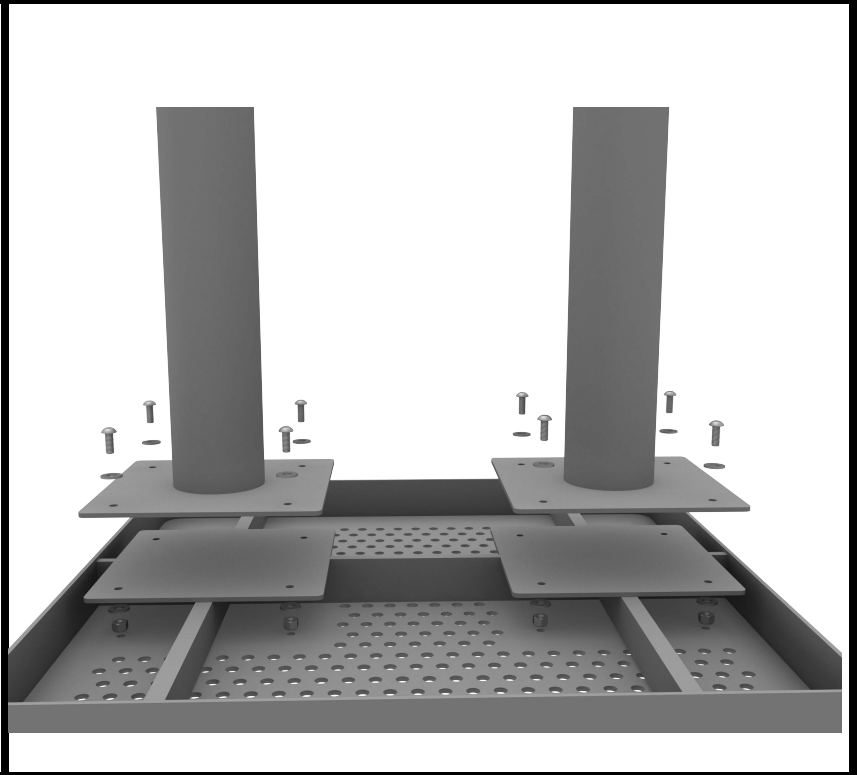

## STEP: 2

Attach the upper handrail to the designated handrail supports by using two (2) M10\*25 bolts and two (2) M10 lock nuts. Repeat this step for each connection point.

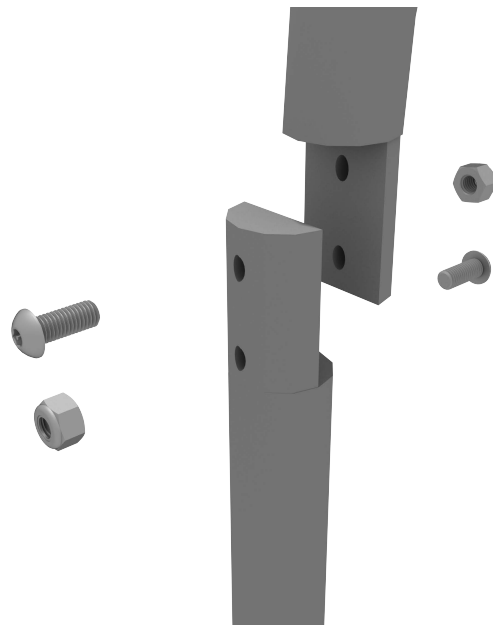

# Assisted Step Up Platforms Install

## STEP: 3

Using four (4) M10\*25 bolts, eight (8) M10 washers, and four (4) M10 lock nuts, connect the bottom of the handrails to the side of the square deck. Repeat this step for the other side.

