

Inground Post/Mount Installation

STEP: 1

**DO NOT CEMENT POSTS/MOUNTS
INTO PLACE UNTIL THE ENTIRE
STRUCTURE IS ASSEMBLED.**

Refer to the General Installation
guide footing size information and
digging proper holes for the support
posts/mounts.




3.5-Inch Clamp Installation Examples

The following three pages will include examples of how to install some of the most common types of Clamps that are present on our structures that use 3.5-inch outside diameter posts. The structure that you are assembling might not require all the types of clamps listed in these examples.

The Install Guides for specific components that come later in this document might call for a specific type of clamp (a tube clamp for example), those sections will not include detailed instructions for the clamps and should direct you back to this section for more detailed information.

3.5-inch Flat Clamp Install Example


Connect half of the flat clamp to the component using one (1) M8*40 bolt. Then, using the other half of the flat clamp and the hardware provided in the clamp hardware bag, attach the backside of the flat clamp around the post.

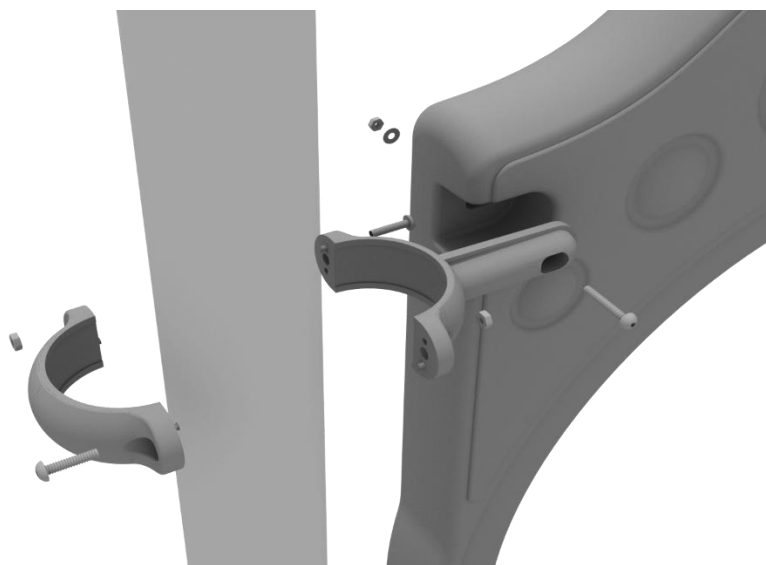

3.5-Inch Clamp Installation Examples


3.5-inch Tube Clamp Install Example

Connect half of the clamp to the component using one (1) M8*30 bolt. Then, using the other half of the tube clamp and the hardware provided in the clamp hardware bag, attach the backside of the tube clamp around the post.

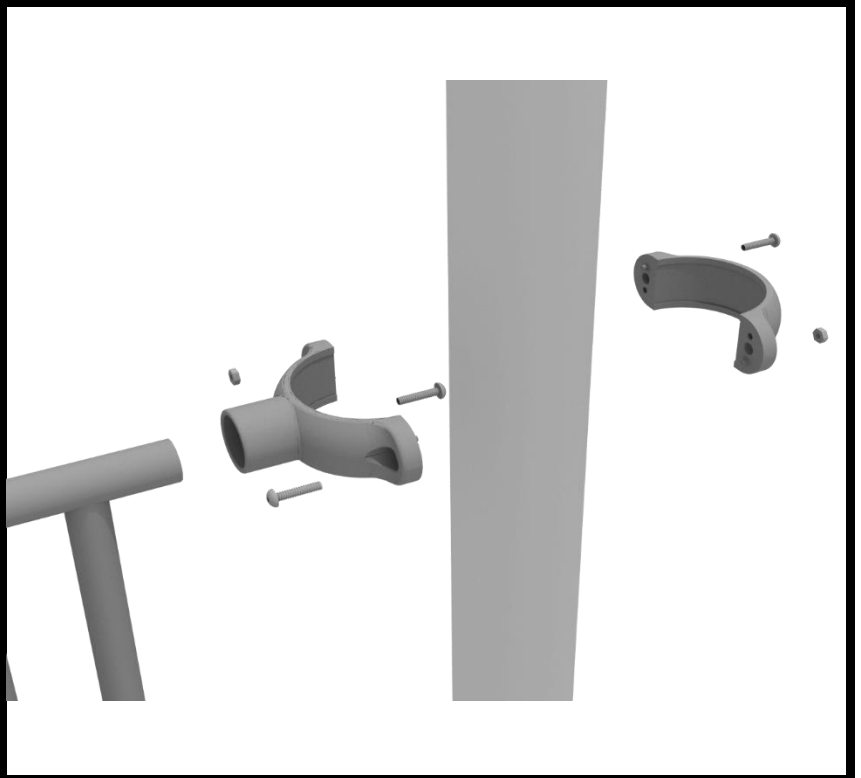

3.5-inch 90-Degree Flat Clamp Install Example


Connect half of the flat clamp to one panel using one (1) M8*40 bolt. Then, using the other half of the flat clamp and the hardware provided in the clamp hardware bag, attach the other half of the tube clamp around the post. Then, attach the next panel to the other side of the clamp using the same process.

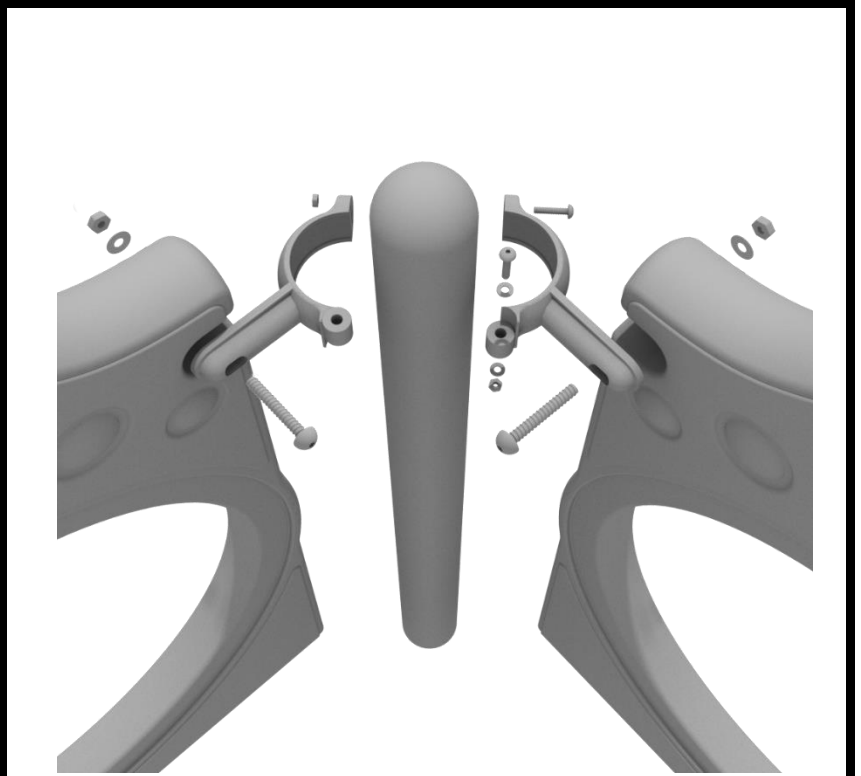

3.5-Inch Clamp Installation Examples

3.5-inch Double Slide Clamp Install Example


Connect half of the double slide clamp to the double slide hood using one (1) M8*30 bolt. Then, using the other half of the clamp and the hardware provided in the clamp hardware bag, attach the backside of the double slide clamp around the post.

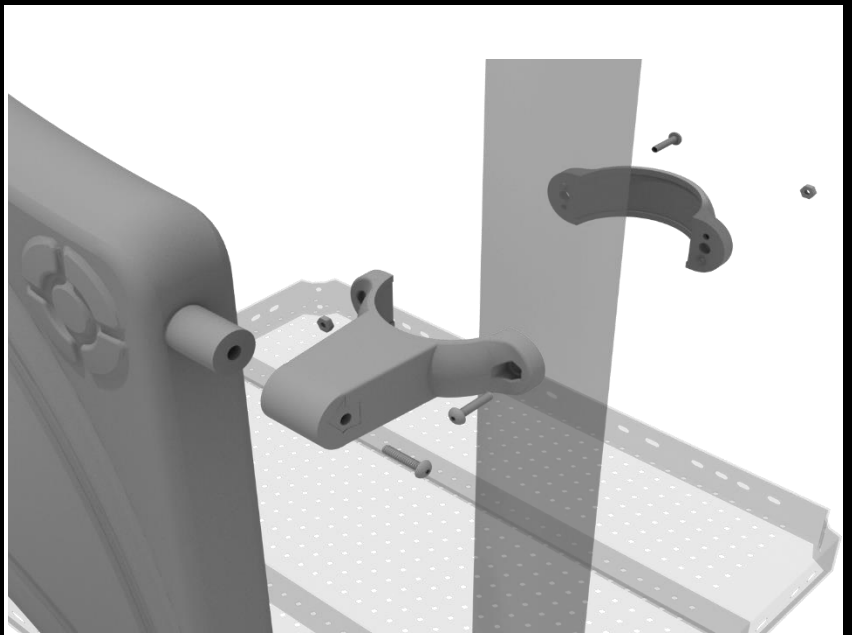

3.5-Inch Bubble Ground Panel Installation

Attach the Bubble Panel to the designated posts using four (4) tube clamps.


Please reference the Clamp Install Guide for detailed instructions on tube clamps.

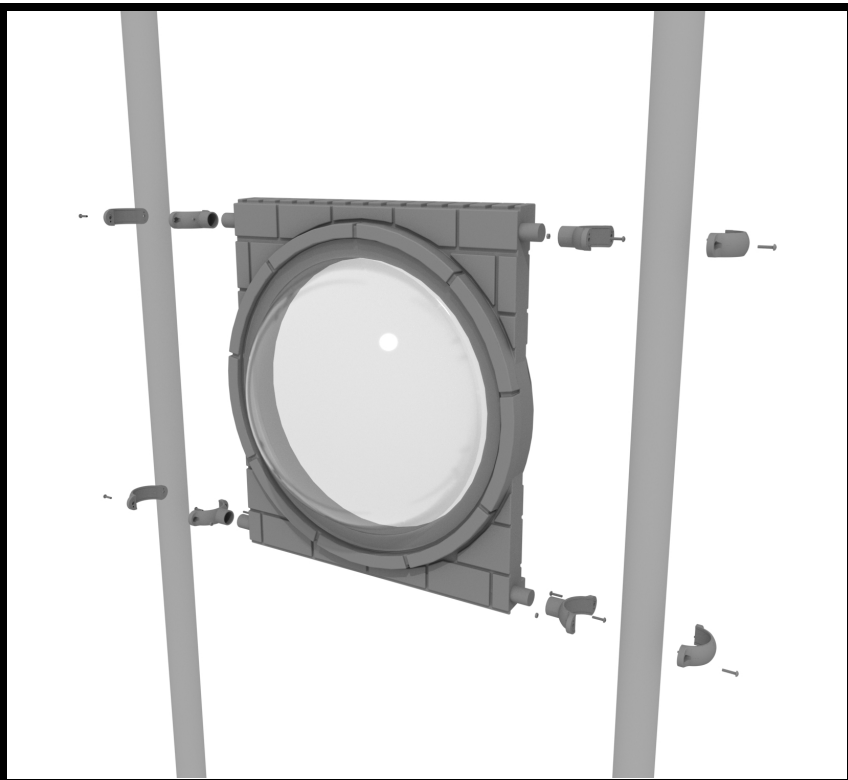

3.5-Inch Percussion Ground Panel Installation

Attach the Percussion Panel to the designated posts using four (4) tube clamps.


Please reference the Clamp Install Guide for detailed instructions on tube clamps.

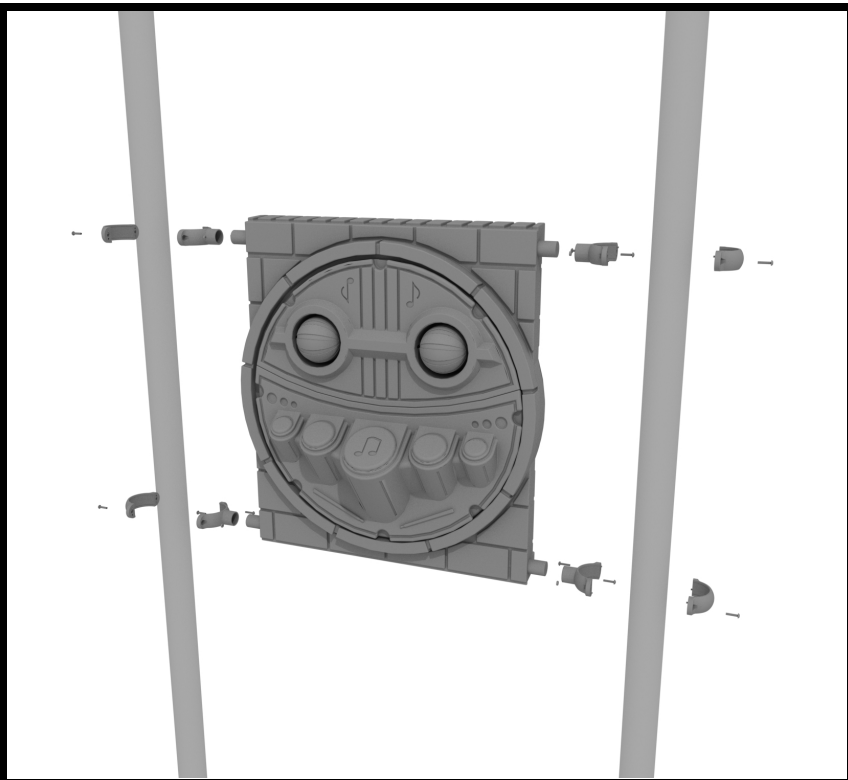

3.5-Inch Finger Maze Ground Panel Installation

Attach the Finger Maze Panel to the designated posts using four (4) tube clamps.


Please reference the Clamp Install Guide for detailed instructions on tube clamps.

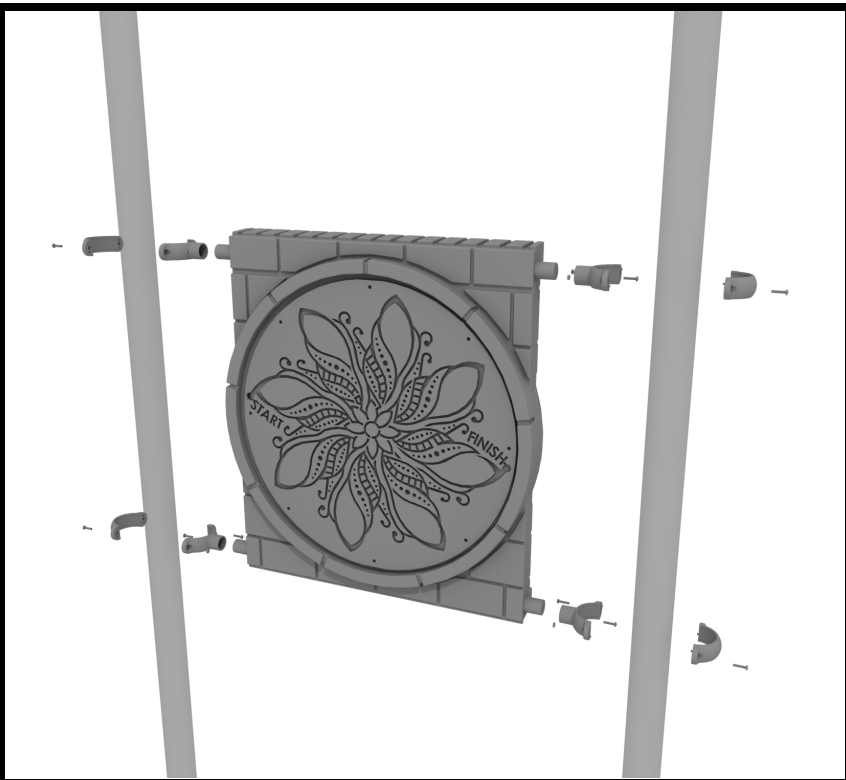

3.5-Inch Bear Ground Panel Installation

Attach the Bear Panel to the designated posts using four (4) tube clamps.


Please reference the Clamp Install Guide for detailed instructions on tube clamps.

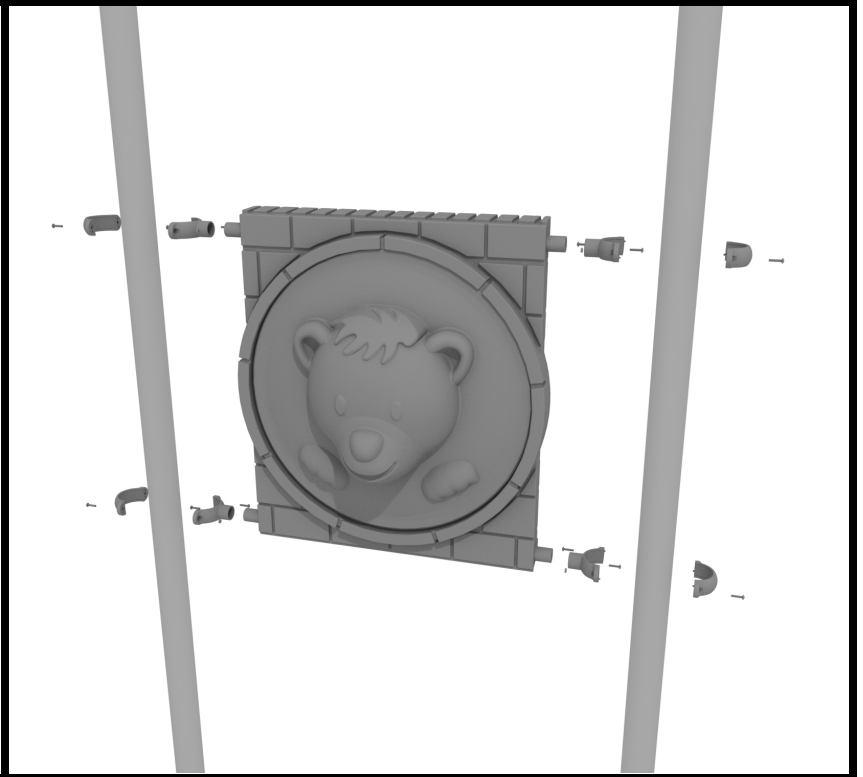

3.5-Inch Plinko Ground Panel Installation

Attach the Plinko Panel to the designated posts using four (4) tube clamps.


Please reference the Clamp Install Guide for detailed instructions on tube clamps.

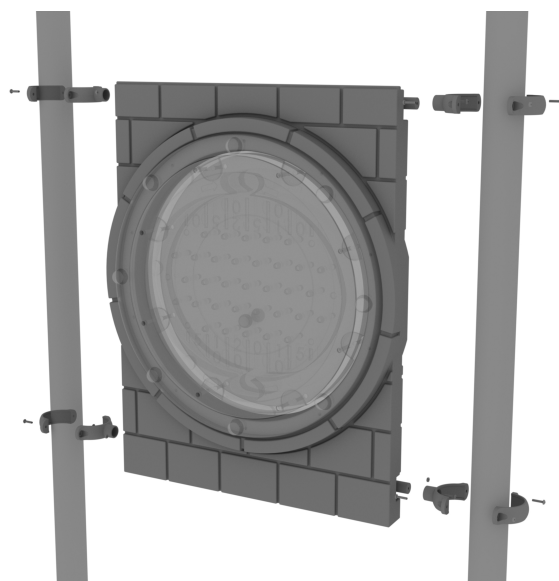

3.5-Inch Wheel of Activity Ground Panel Installation

Attach the Wheel of Activity Panel to the designated posts using four (4) tube clamps.

Please reference the Clamp Install Guide for detailed instructions on tube clamps.

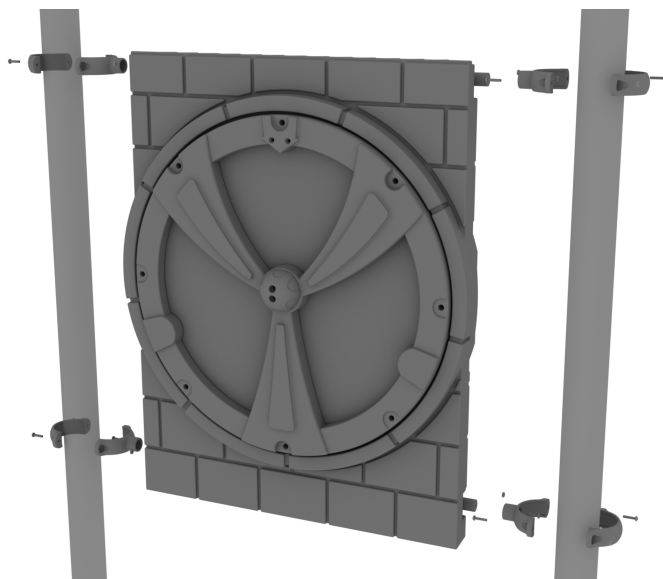

3.5-Inch Ball Maze Ground Panel Installation


Attach the Ball Maze Panel to the designated posts using four (4) tube clamps.

Please reference the Clamp Install Guide for detailed instructions on tube clamps.




3.5-Inch 4-Clamp Castle Flat Window Panel Installation

Attach the Castle Flat Window Panel to the designated posts using four (4) tube clamps and four (4) M4*25 Set Screws.

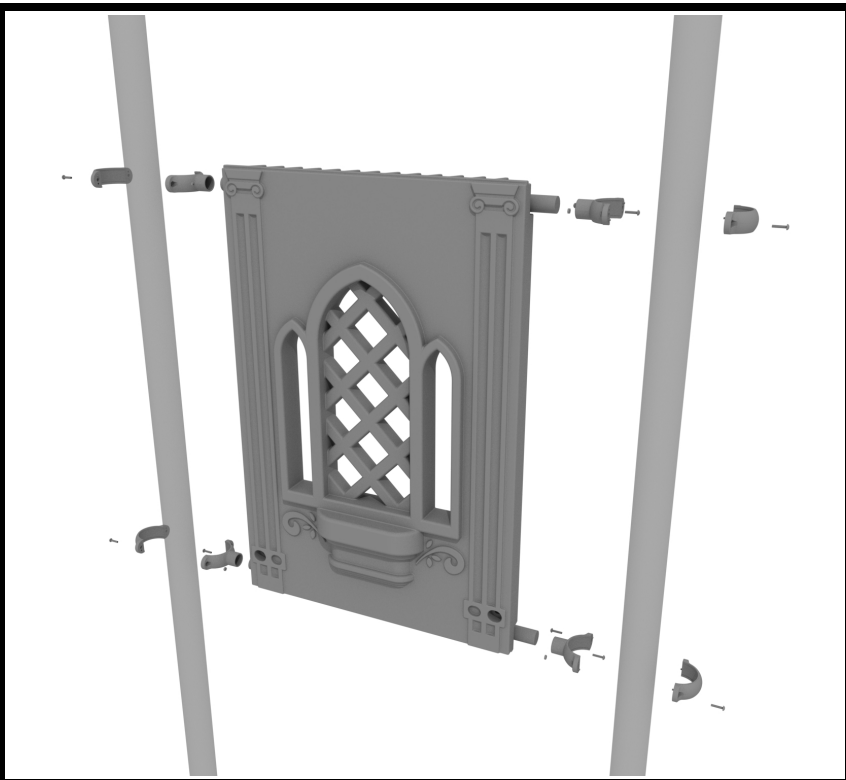


3.5-Inch 4-Clamp Castle Flat Brick Window Panel Installation

Attach the Castle Flat Window Panel to the designated posts using four (4) tube clamps and four (4) M4*25 Set Screws.

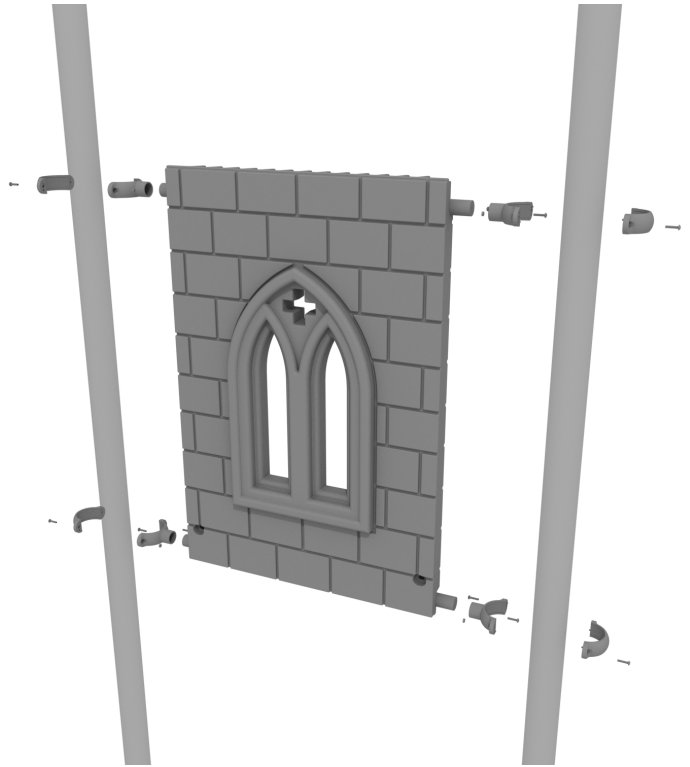

3.5-Inch Castle Arch Panel Installation

Attach the Roof Topper to the designated posts using two (2) tube clamps, two (2) flat clamps, and four (4) M4*25 Set Screws.

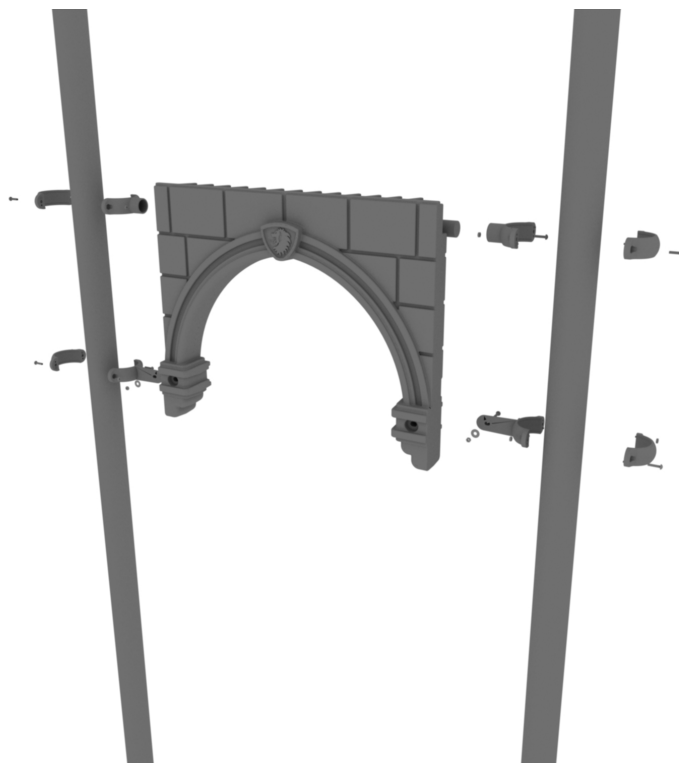

3.5-Inch Flat Castle Rampart Roof Panel Installation

Attach the Roof Topper to the designated posts using four (4) tube clamps four (4) M4*25 Set Screws.

