
# **Inground Post/Mount Installation**

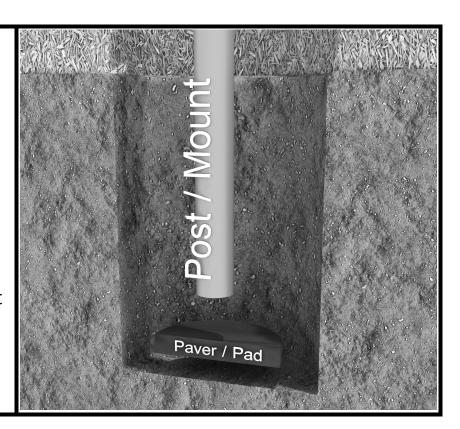

STEP: 1

# DO <u>NOT</u> CEMENT POSTS/MOUNTS INTO PLACE UNTIL THE ENTIRE STRUCTURE IS ASSEMBLED.

Refer to the General Installation guide footing size information and digging proper holes for the support posts/mounts.



10859 E Washington St. Suite 200 Indianapolis, IN 46229 1-800-667-0097

Created By: Gage Brown


Date: 04/26/2018

# 5.0-inch Clamp Installation Guide



## 5.0-inch Tube Clamp

Insert Bar on Component into one half of the Tube Clamp and attach with M4\*25 Set Screw. Then, using the other half of the tube clamp and the hardware provided in the clamp hardware bag, attach the other half of the tube clamp around the post.

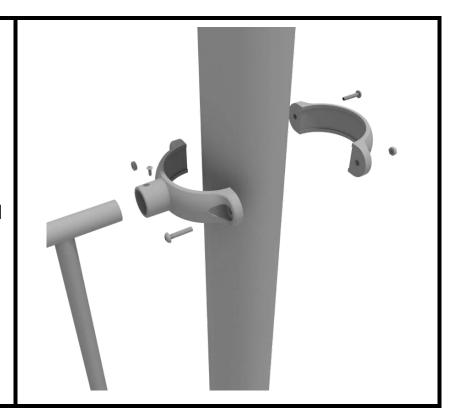

10859 Washington St. Suite 200, Indianapolis, IN 1-800-667-0097


Created By: Derick H Date: 09/10/2018

# **Treehouse Tube Bridge Installation**




STEP: 1

Take both sections of the tube bridge and attach them together using ten (10) M8\*30 bolts, twenty (20) M8 washers, and ten (10) M8 lock nuts.

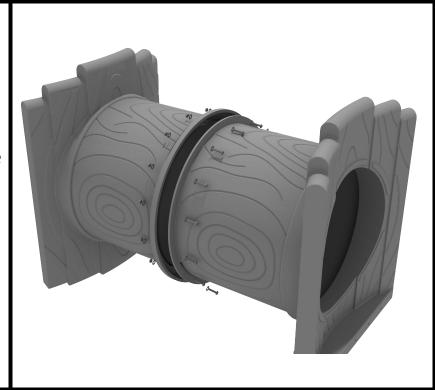

#### STEP: 2

Attach the top and bottom of the tube bridge to the posts using one (1) tube clamp, one (1) M8\*40 bolt, one (1) M8 washer, and one (1) M8 lock nut for each post attachment point.

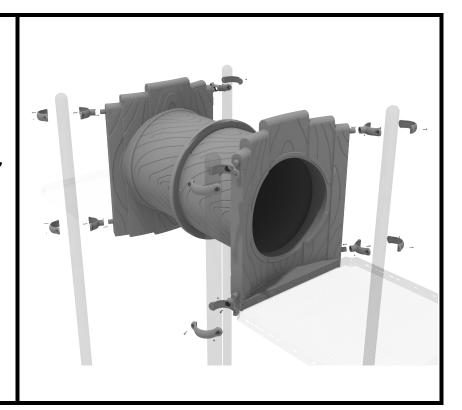

10859 Washington St. Suite 200, Indianapolis, IN 1-800-667-0097

Created By: Aaron Price


Date: 03/22/2018

## **Treehouse Tube Bridge Installation**



STEP: 3

See general installation guide regarding footing information for the tube bridge support. Loosen the set screw pre-attached to the tube support bracket and insert the L-shaped support. Then screw the set screws back into place.

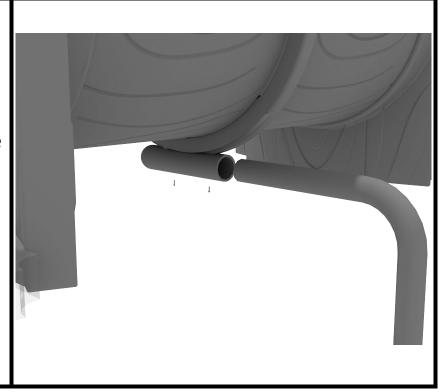

10859 Washington St. Suite 200, Indianapolis, IN 1-800-667-0097

Created By: Aaron Price

Date: 03/22/2018


## **Treehouse Stump Window Panel Installation**



STEP: 1

Align the Treehouse Stump Window Panel with the intended posts. The posts have a threaded insert that must be lined up correctly with the Treehouse Stump Window Panel.

Using the provided mounting brackets, attach the panel to the posts with eight (8) M8\*30 Bolts, eight (8) M8 Washers, and eight (8) M8 Spring Gaskets.

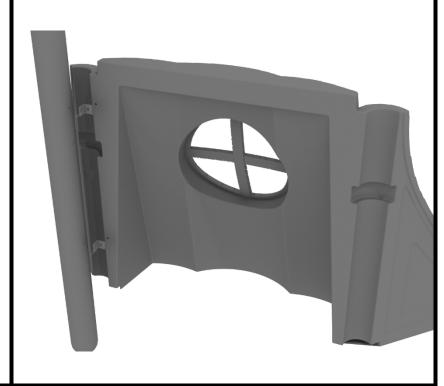

STEP: 2

The Treehouse Stump Window Panel can attach to a 2<sup>nd</sup> Treehouse Stump Window Panel using one (1) M8\*45 Bolt, and one (1) M10\*45 Inner Hex Nut.

This step does not apply in cases where there is only 1 Treehouse Stump Window Panel.



10859 Washington St. Suite 200, Indianapolis, IN 1-800-667-0097


Created By: Derick H Date: 08/10/2018

## **Treehouse Club House Roof Installation**

STEP: 1




Place the Club House roof on to the top of the posts of the appropriate deck.

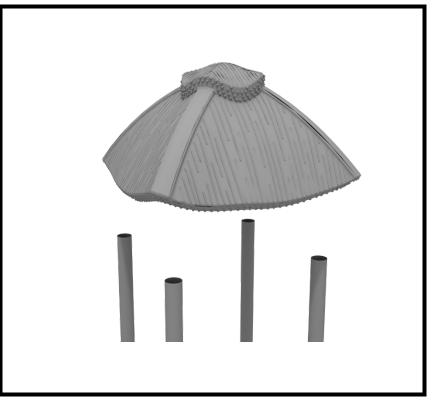

#### STEP: 1

Install the Club House roof by using four (4) M4\*50 Self Tapping screws, and four (4) M8 Washers.

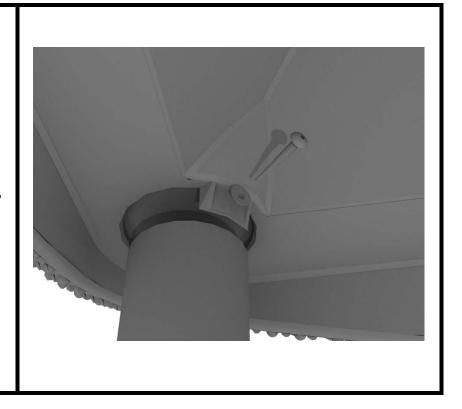

10859 Washington St. Suite 200, Indianapolis, IN 1-800-667-0097

Created By: Derick H
Date Modified: 09/12/18