


Inground Post/Mount Installation



STEP: 1


**DO NOT CEMENT POSTS/MOUNTS
INTO PLACE UNTIL THE ENTIRE
STRUCTURE IS ASSEMBLED.**

Refer to the General Installation
guide footing size information and
digging proper holes for the support
posts/mounts.

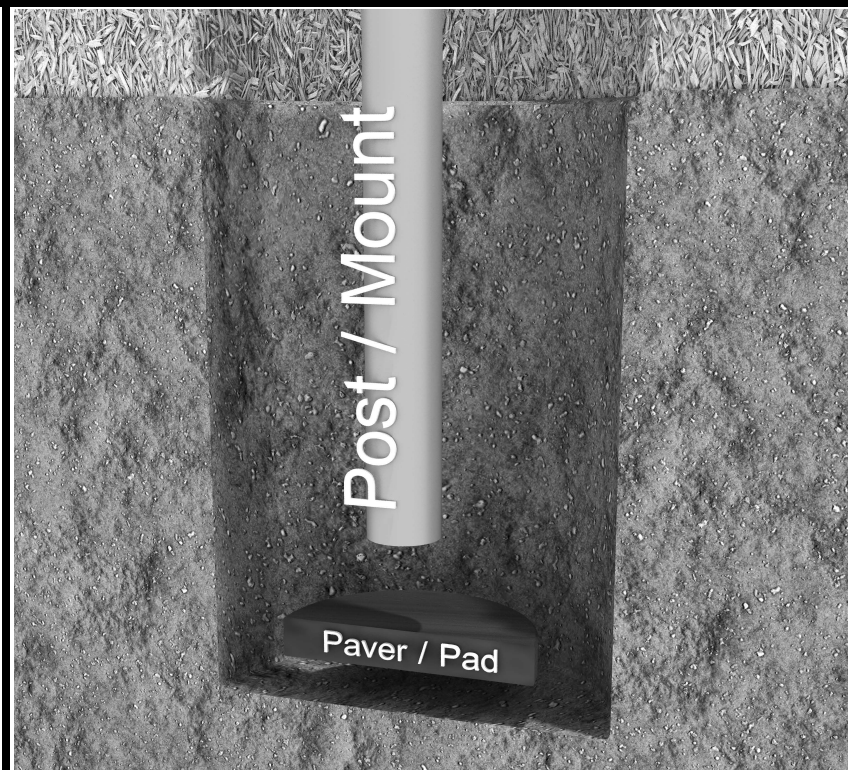



Mount Installation

Item Name	ID	Quantity
Mount	Cmpnt	1
M10*60 Bolt	1	4
M10 Washer	2	8
M10 Lock Nut	3	4

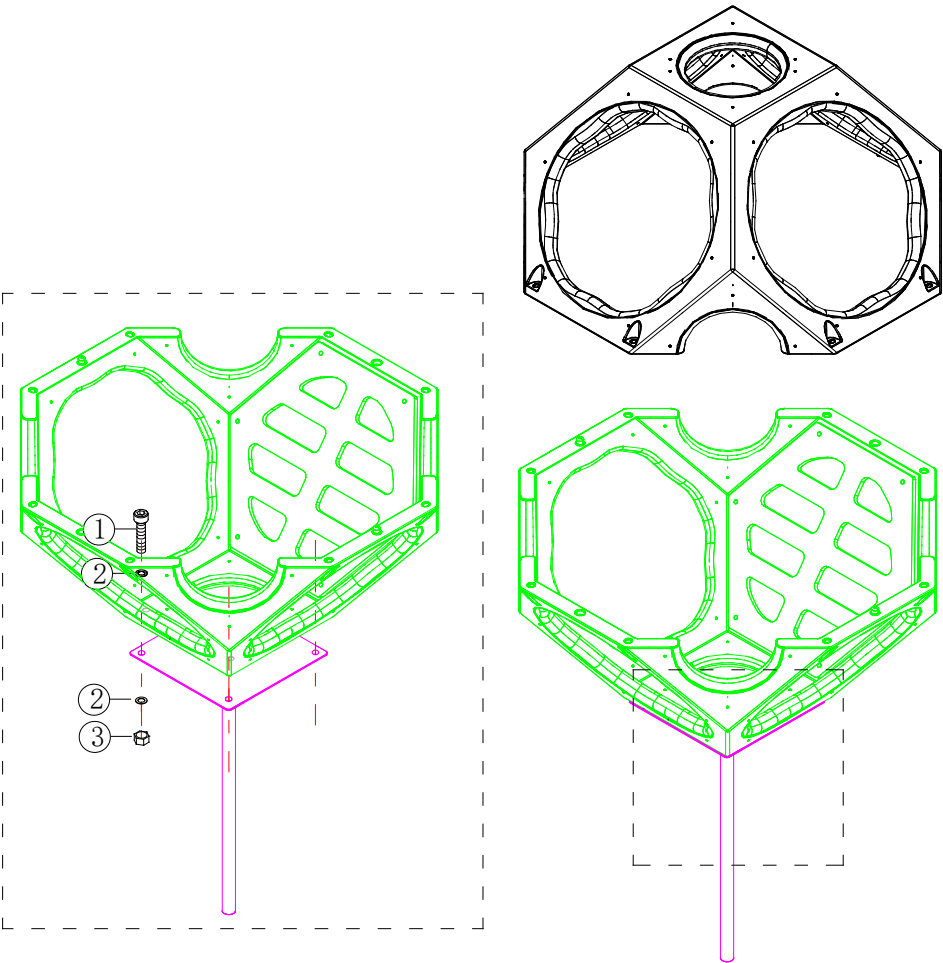


Plastic Installation - (100mm Square Post)

Item Name	ID	Quantity
Plastic	Cmpnt	1
M10*60 Bolt	1	8
M10 Washer	2	16
M10 Lock Nut	3	8

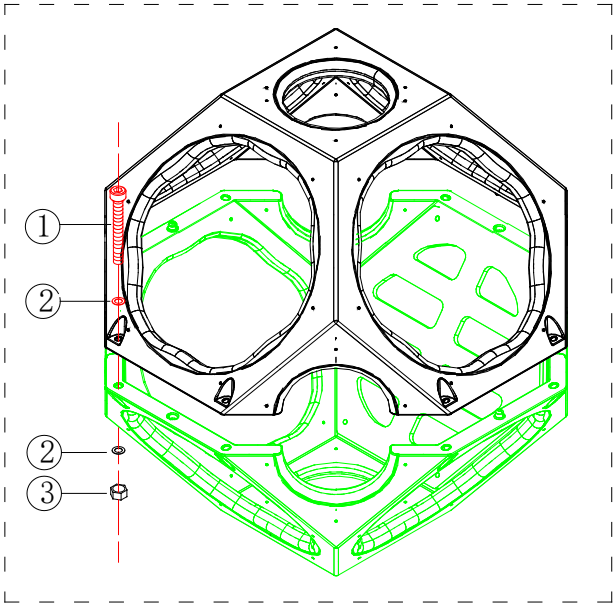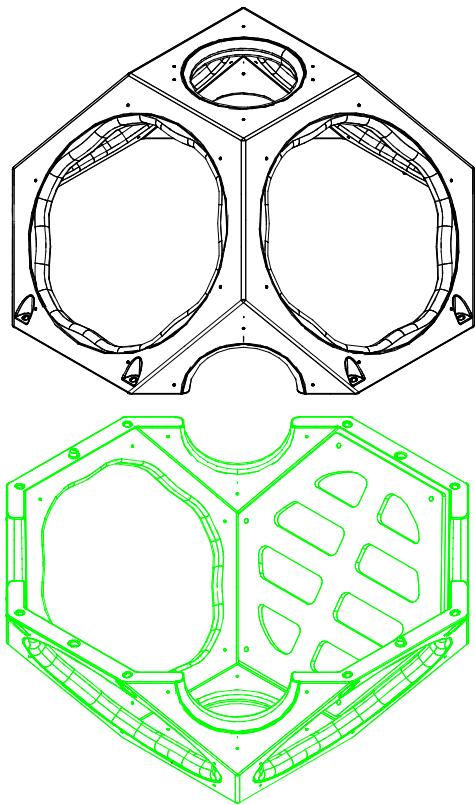

Plastic Installation - (100mm Square Post)

Item Name	ID	Quantity
Plastic	Cmpnt	1
M10*105 Bolt	1	6
M10 Washer	2	12
M10 Lock Nut	3	6

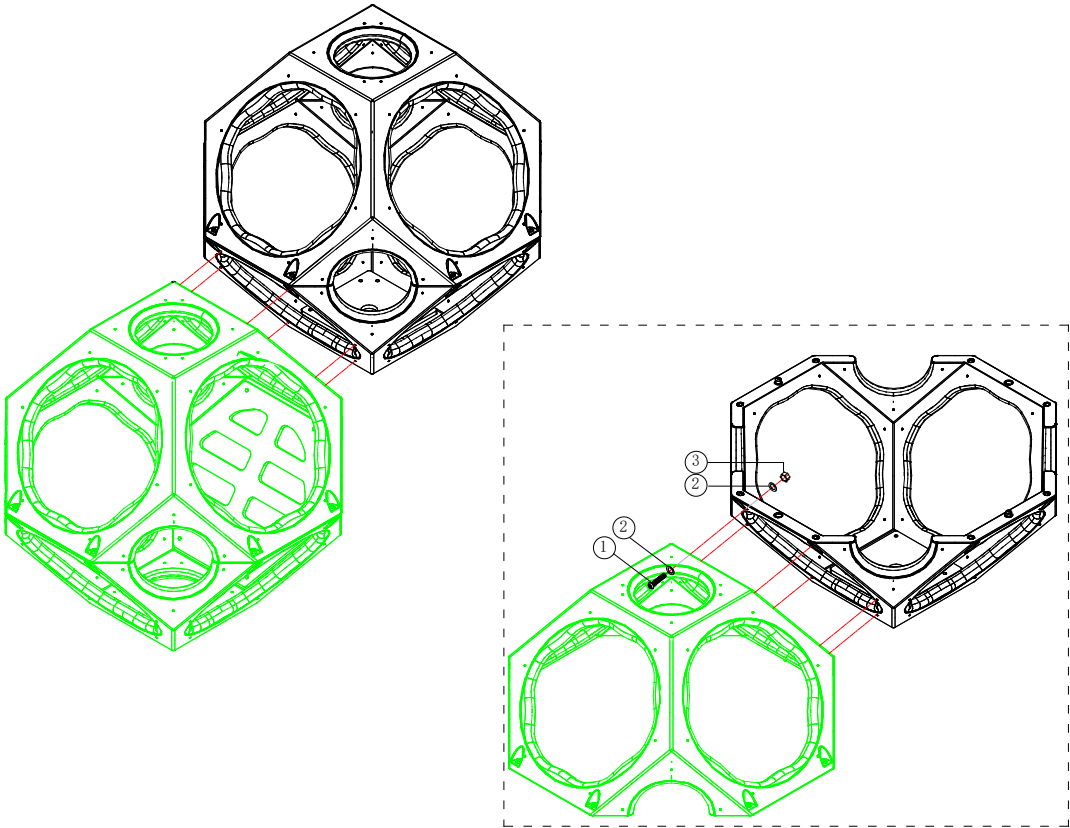

Plastic Installation

Item Name	ID	Quantity
Plastic	Cmpnt	1
M10*90 Bolt	1	4
M10 Washer	2	8
M10 Lock Nut	3	4

