






Freestanding Gear Panel Packing List



1 Playground Drive
Greenfield, IN 46140
1-800-667-0097


Freestanding Gear Panel Packing List

| | | | |
|--|---|--|---|
| <p>(3.5) Post</p> |  | <p>(4.5) Gear Panel</p> |  |
| <p>Brick Red</p> | | <p>Sunglow Yellow</p> | |
| <p>QTY: 2</p> | | <p>QTY: 1</p> | |
| <p>Complete <input type="checkbox"/></p> | | <p>Complete <input type="checkbox"/></p> | |
| <p>(3.5) Tube Clamp</p> |  | <p>M8x30 Bolt</p> |  |
| <p>Brick Red</p> | | | |
| <p>QTY: 4</p> | | <p>QTY:12</p> | |
| <p>Complete <input type="checkbox"/></p> | | <p>Complete <input type="checkbox"/></p> | |
| <p>M8 Lock Nut</p> |  | | |
| <p></p> | | | |
| <p>QTY: 8</p> | | | |
| <p>Complete <input type="checkbox"/></p> | | | |

STEP: 1


**DO NOT CEMENT POSTS INTO PLACE
UNTIL THE ENTIRE STRUCTURE IS
ASSEMBLED.**

Refer to the General Installation
guide footing information and dig
proper holes for the support posts.

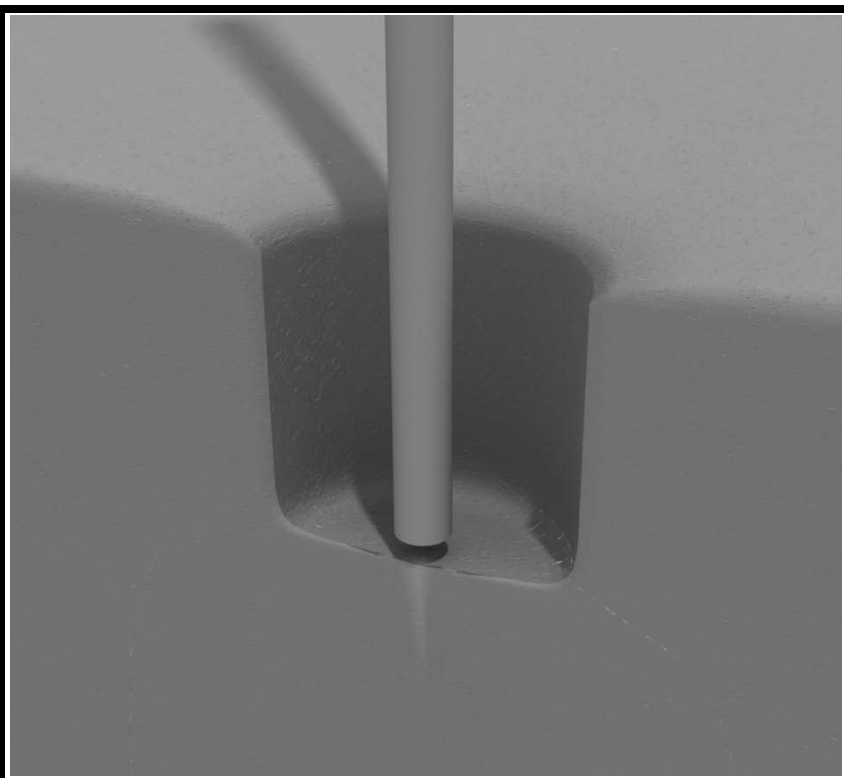

3.5-inch Clamp Installation

Connect the Gear panel to the designated post using four (4) 3.5-inch tube clamps.

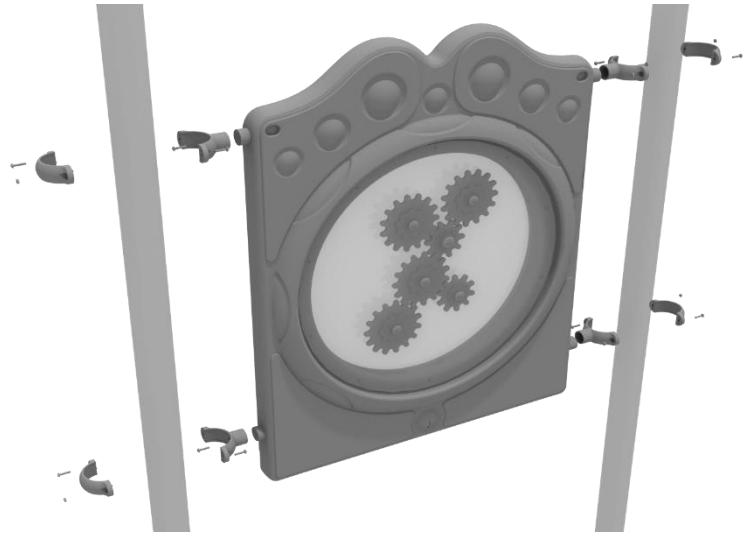

Connect half of the tube clamp to the component using one (1) M8*30 bolt. Then, using the other half of the flat clamp and the hardware provided in the clamp hardware bag, attach the backside of the flat clamp around the post.

