


3 Foot Boulder Climber Installation

STEP: 1

See general installation guide regarding footing information for the Rock Hole climber. Using two (2) M10*20 bolts, two (2) M10 spring gaskets, and two (2) M10 washers, attach the bottom of the boulder climber to the climber support posts.

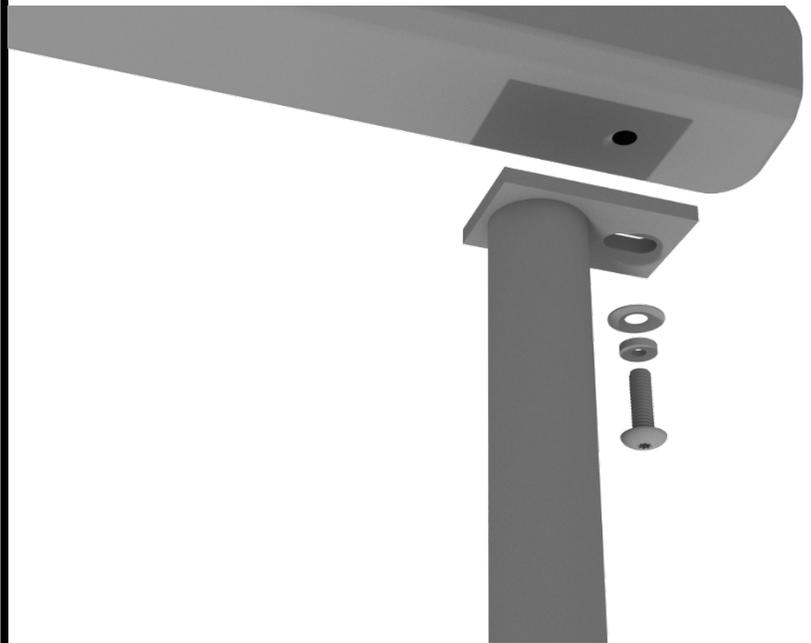

STEP: 1

Align the Boulder Climber next to the appropriate Deck. This climber does not attach directly to the structure.

