


# Inground Post/Mount Installation

## STEP: 1

**DO NOT CEMENT POSTS/MOUNTS INTO PLACE UNTIL THE ENTIRE STRUCTURE IS ASSEMBLED.**

Refer to the General Installation guide footing size information and digging proper holes for the support posts/mounts.

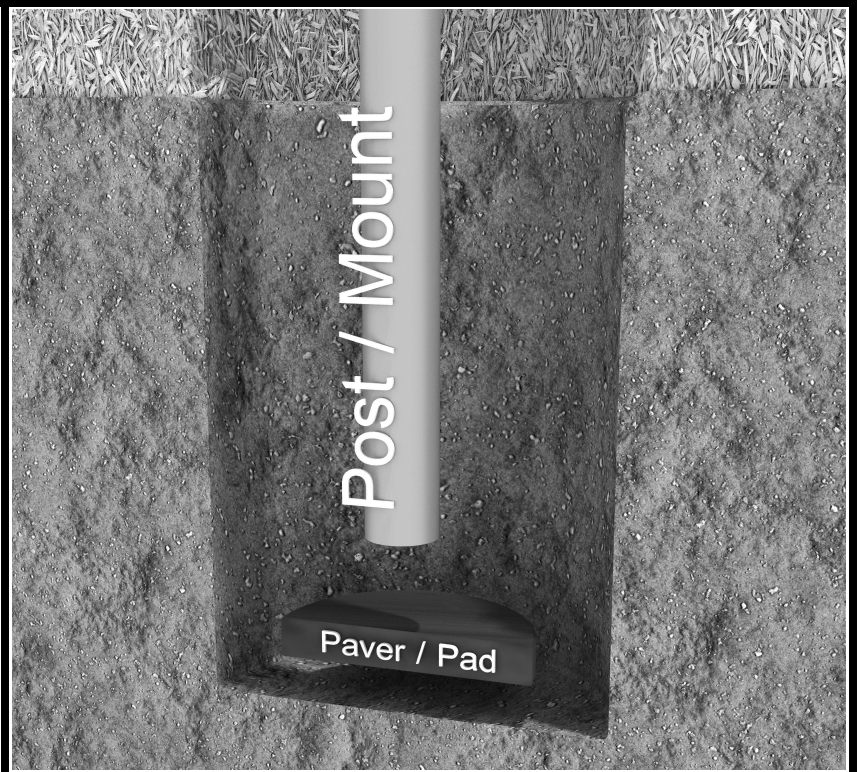

10859 E Washington St. Suite 200  
Indianapolis, IN 46229  
1-800-667-0097

Created By: Gage Brown  
Date: 04/26/2018

# 3.5inch Chime Panel Installation

## STEP: 1

Attach the Chime Panel to the designated posts using two (2) 3.5-inch flat clamps, two (2) 3.5-inch tube clamps and four (4) M8\*25 bolts.

