


PFS060-Kings Carousel Install

STEP: 1

Attach spinner handlebars to base of spinner using three (3) M8*25 bolts, six (6) M8 washers and three (3) M8 Lock Nuts. Repeat for remaining connection points.

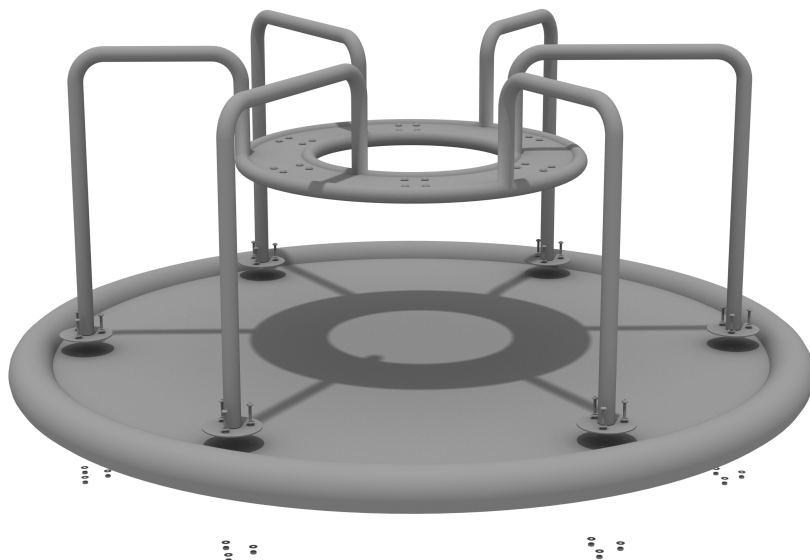

STEP: 2

Attach the in-ground mount support to center spinner mount using four (4) M10*35 bolts, four (8) M10 washers and four (4) M10 Lock Nuts. Repeat for remaining connection points.



PFS060-Kings Carousel Install

STEP: 3

Dig a 36" wide by 24" deep footing for the central post of the Kings Carousel. Install into footing using concrete.

For additional footing information see the General Installation document.

