


STEP: 1

**DO NOT CEMENT POSTS INTO PLACE
UNTIL THE ENTIRE STRUCTURE IS
ASSEMBLED.**


Refer to the General Installation
guide footing information and dig
proper holes for the support posts.

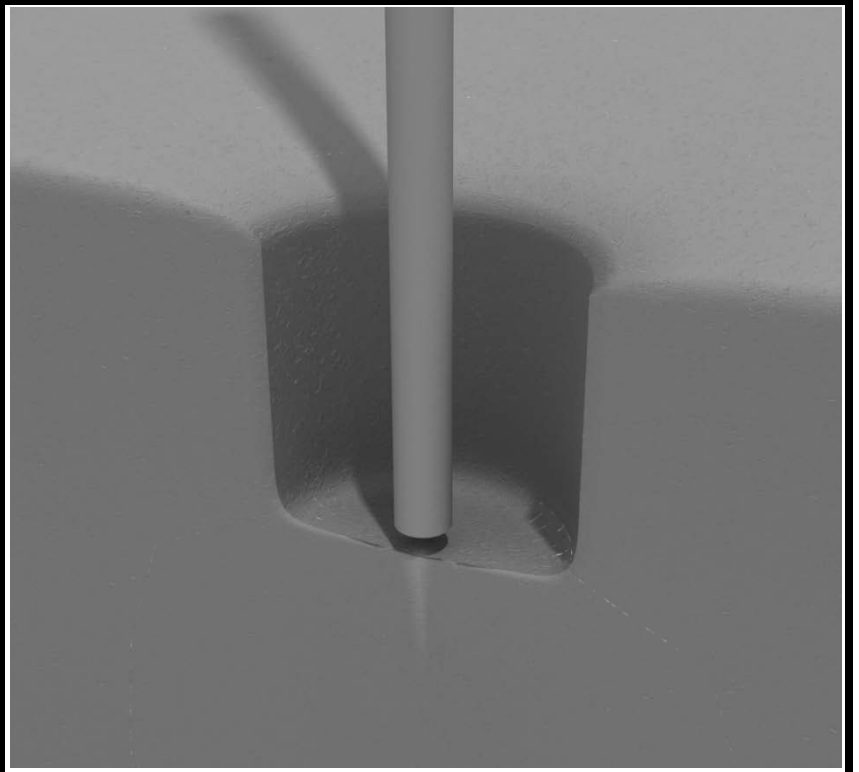

Get Physical Series – Standard Attachment Point Installation


STEP: 1

Most components of a Get Physical series structure attach using this standard attachment point. Use three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts.

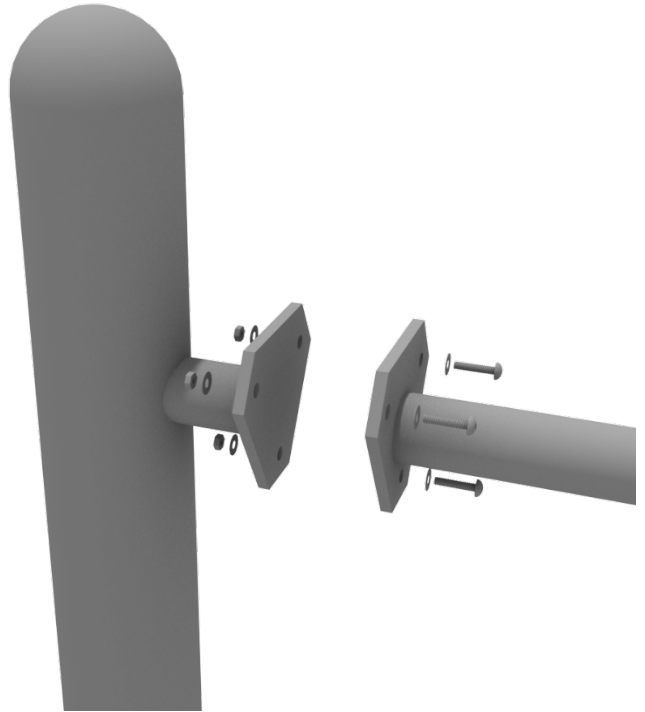

STEP: 2


Each of these attachment points has a rubber cover to protect the bolts. Attach the cover and secure using the pre-attached M8*40 bolt and M8 lock nut.

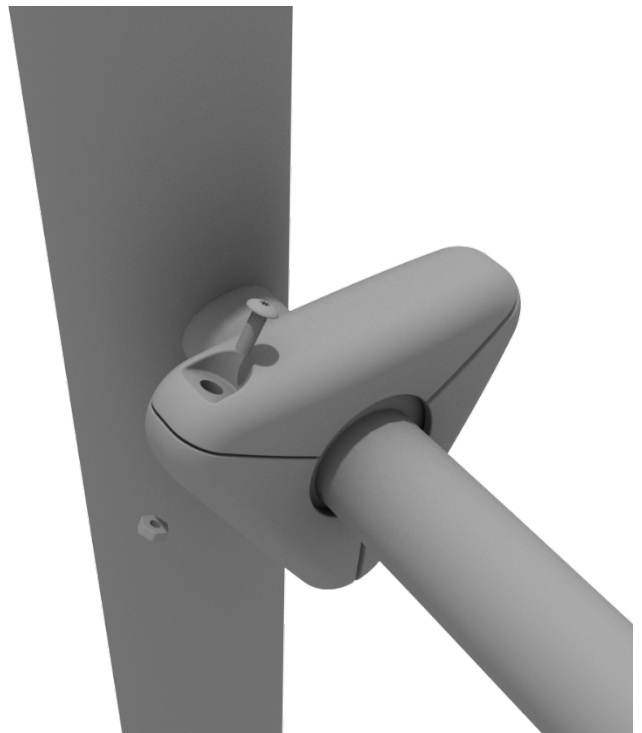

STEP: 1

For footing information on the Tri Ladder Hub, refer to the general installation guide section on climber footings.

The Tri Ladder Hub is compatible with both the Craggy Straight Sections and Craggy Turn Sections. Each connection point uses ten (10) M12 bolts, ten (10) M8*60 inner hex screws, ten (10) M12 washers, and ten (10) M8 washers.

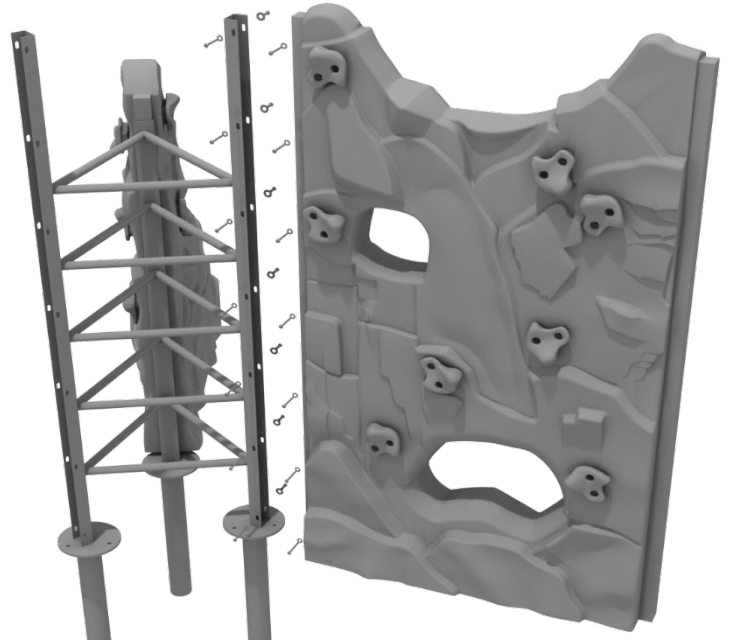


Craggy Climber Straight Section Installation

STEP: 1

Refer to the General Installation Instructions footing section for information on climber footings.

The Craggy Climber Straight Section attaches on both ends. Each connection point uses ten (10) M12 bolts, ten (10) M8*60 inner hex screws, ten (10) M12 washers, and ten (10) M8 washers.

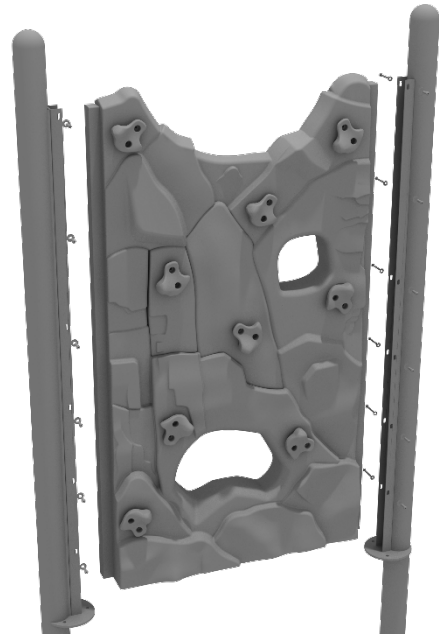


Craggy Climber End and Turn Installation

STEP: 1

Connect the Craggy End and Craggy Turn sections together using the craggy climber short bracket. The craggy climber short bracket uses ten (10) M12 bolts, ten (10) M8*60 inner hex screws, ten (10) M12 washers, and ten (10) M8 washers.

See the General Install Instructions document regarding footing information for climbers.

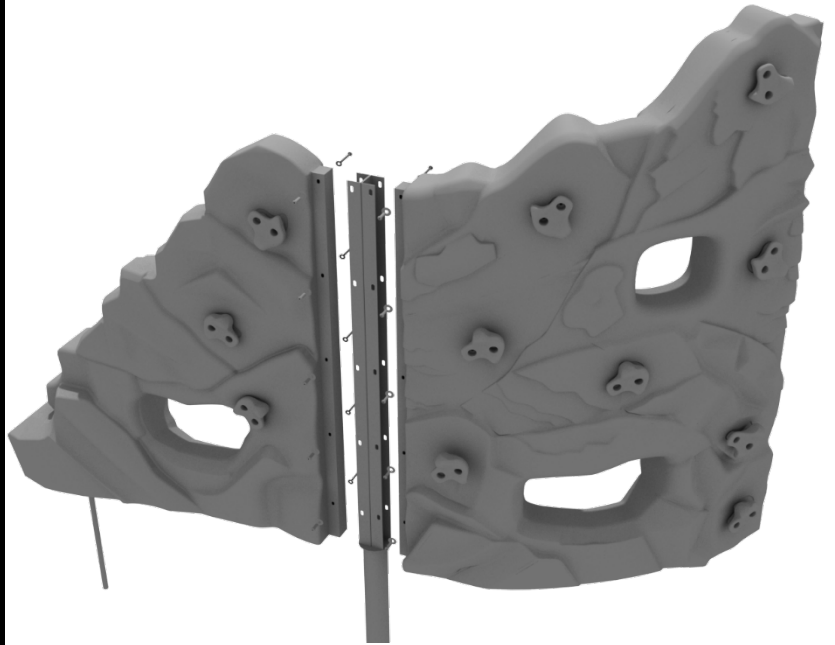


STEP: 1

Connect the Sunrise Climber Attachment to the appropriate post via the Standard Attachment Points.

Please refer to the Standard Attachment Point Install section for more detailed information.

Dig footings and install the bottom legs into the ground using the footing information about climbers in the General Installation document.

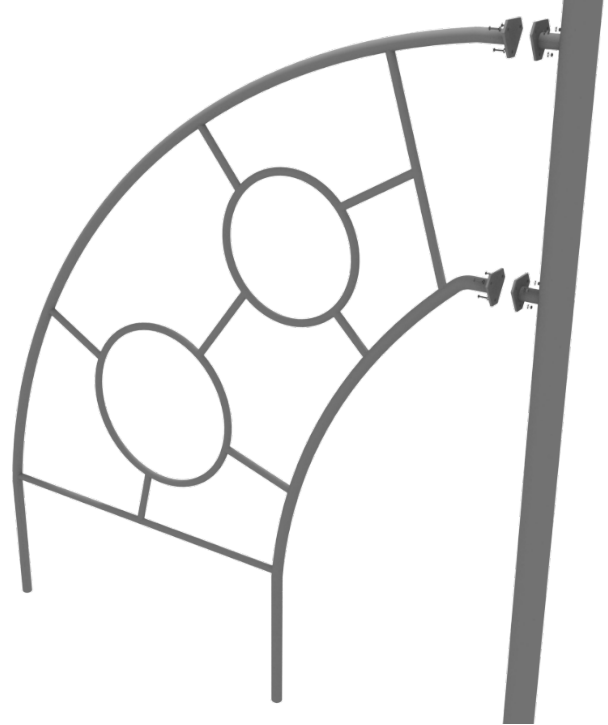


Connect the Square Net Climber to the appropriate posts via the Standard Attachment Points. Please refer to the Standard Attachment Point Install section for more detailed information.



Get Physical Series – Zig Zag Challenge Bridge Install


STEP: 1

Connect each of the crossbars for the Saddle slide to the appropriate posts using 4.5" tube clamps and one (1) M8 set screw for each clamp.

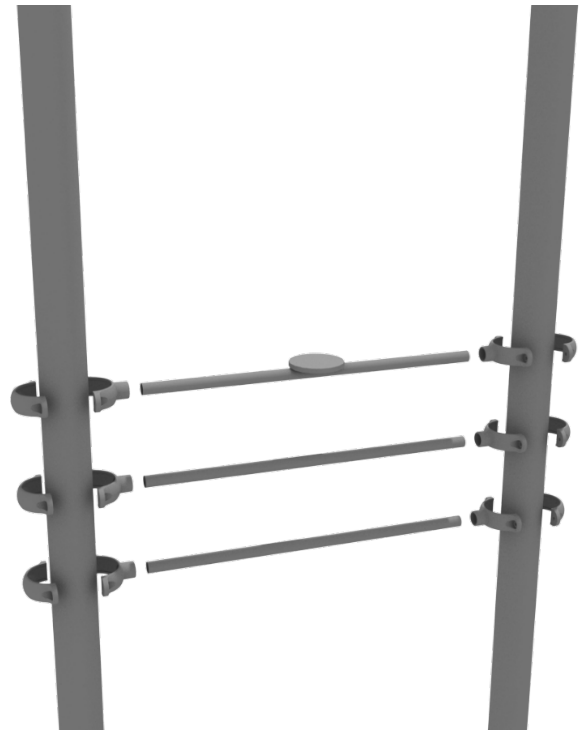

STEP: 2

See general installation guide regarding footing information for the slide end mount. Using two (2) M8*20, two (M8) spring washers. And two (2) M8 washers, attach the slide to the slide support post. Attach the slide to the support using two (2) M8*20, two (M8) spring washers. And two (2) M8 washers.

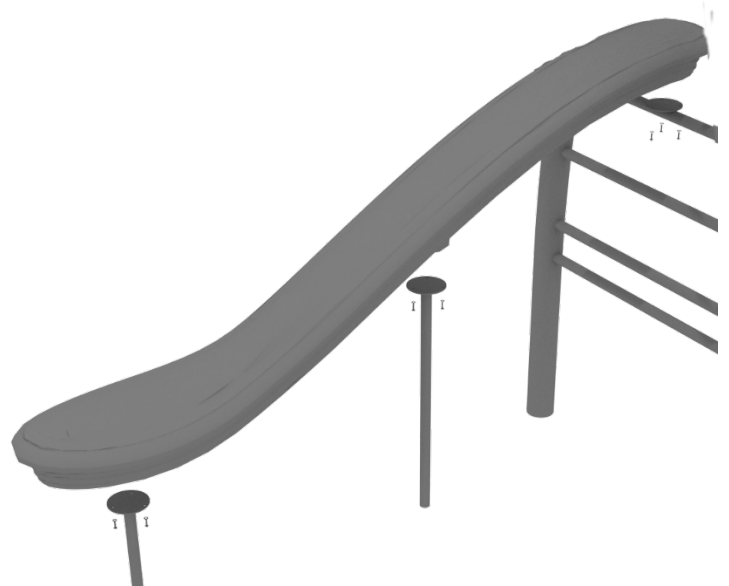

Get Physical Series – 3-Wheel Overhead Spinner Install

STEP: 1

Connect the 3-Wheel Overhead Spinner to the appropriate posts via the Standard Attachment Point.

Refer to the Standard Attachment Point install section for more detailed information.




Get Physical Series – Tilted Pebble Bridge Install

STEP: 1


Connect the Tilted Pebble Bridge top rail to the appropriate posts via the Standard Attachment Point.

Refer to the Standard Attachment Point install section for more detailed information.

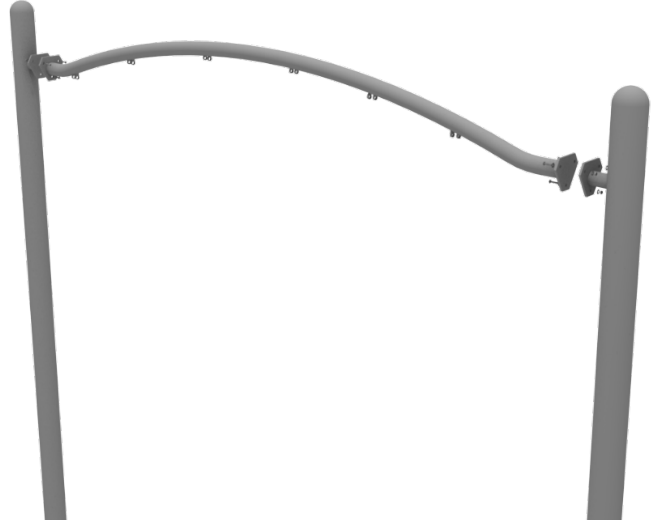

STEP: 2

Dig suitable footings for each of the pebble steps. Please refer to the footing section for climbers in the General Installation Instructions document.

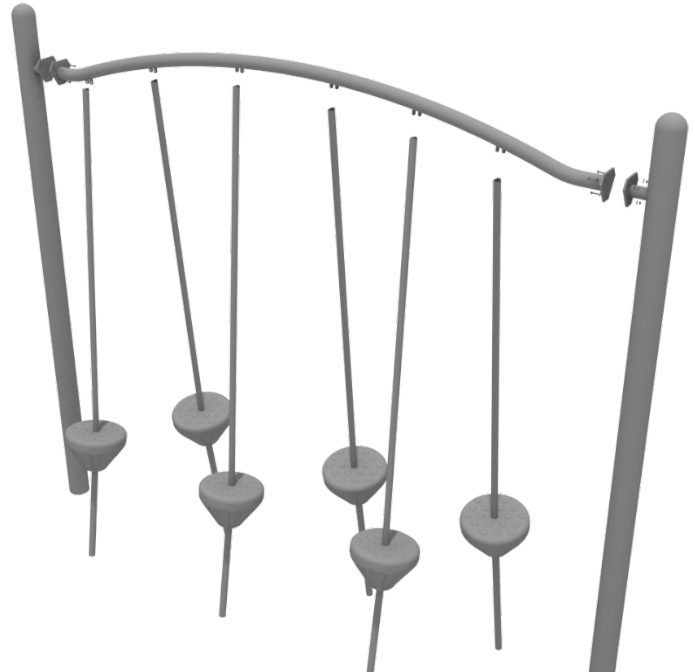

STEP: 3


Each of the pebble steps will attach to the top rail using one (1) M10*55 bolt, two (2) M10 washers, and one (1) M10 lock nut.



STEP: 1

Connect the bottom of the Zig Zag Challenge Bridge to the appropriate posts via the Standard Attachment Points.


Refer to the Standard Attachment Point install section for more detailed information.

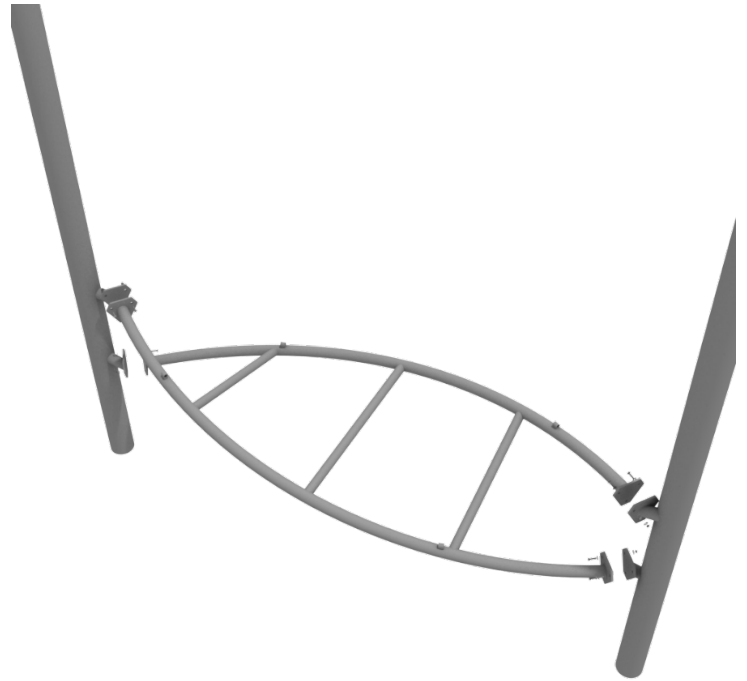

STEP: 2

Connect the top rail of the Zig Zag Challenge Bridge to the appropriate posts via the Standard Attachment Points.

Refer to the Standard Attachment Point install section for more detailed information.

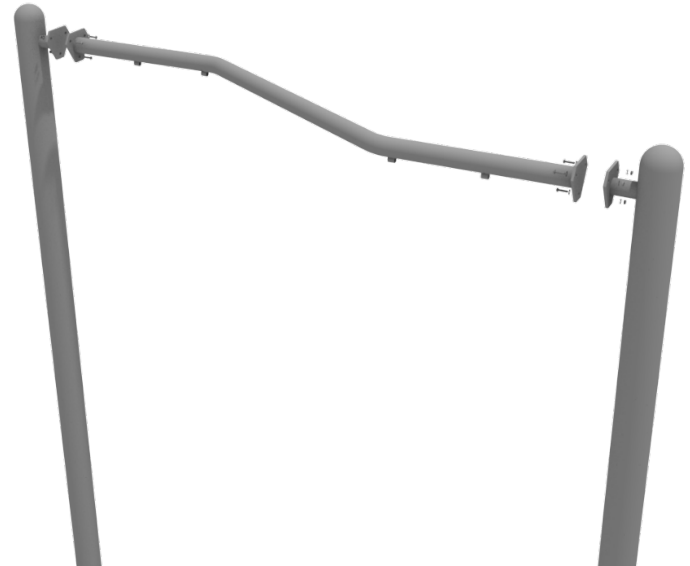

STEP: 3

There are vertical supports for the Zig Zag Challenge Bridge that connect the top rail to the bottom piece.



STEP: 4

The vertical supports connect using one (1) M10*55 bolt, two (2) M10 washers, one (1) plastic spacer, and one (1) M10 lock nut for each connection point.

