
#### **Inground Post/Mount Installation**



STEP: 1

# DO <u>NOT</u> CEMENT POSTS/MOUNTS INTO PLACE UNTIL THE ENTIRE STRUCTURE IS ASSEMBLED.

Refer to the General Installation guide footing size information and digging proper holes for the support posts/mounts.

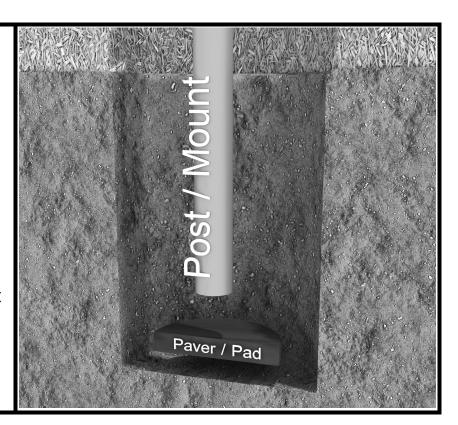

10859 E Washington St. Suite 200 Indianapolis, IN 46229 1-800-667-0097

Created By: Gage Brown


Date: 04/26/2018

### **Get Physical Series – PGS003 Standard Attachment Point Installation**

STEP: 1




Most components of a Get Physical series structure attach using this standard attachment point. Use three (3) M10\*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts.

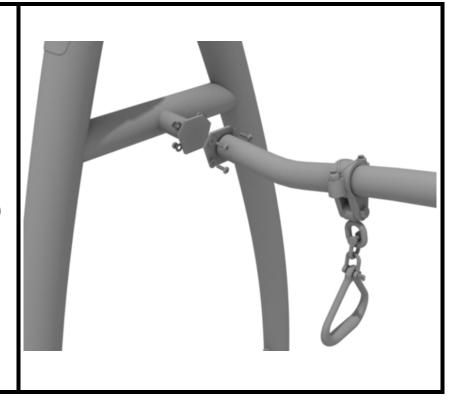

#### STEP: 2

Repeat step 1 and connect the opposite side.

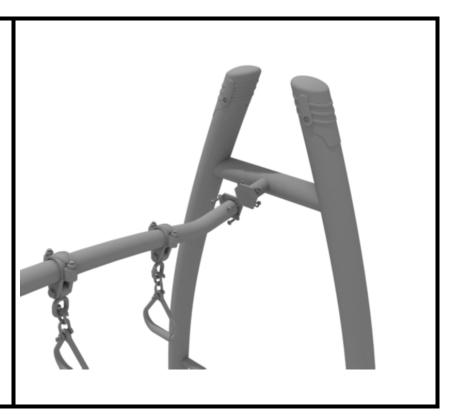

10859 Washington St. Suite 200, Indianapolis, IN 1-800-667-0097

Created By: Matt N Date: 9/11/2023


## **Get Physical Series – Standard Attachment Point Installation**



STEP: 3

Each of these attachment points has a rubber cover to protect the bolts.

Attach the cover and secure using the pre-attached M8\*40 bolt and M8 lock nut.

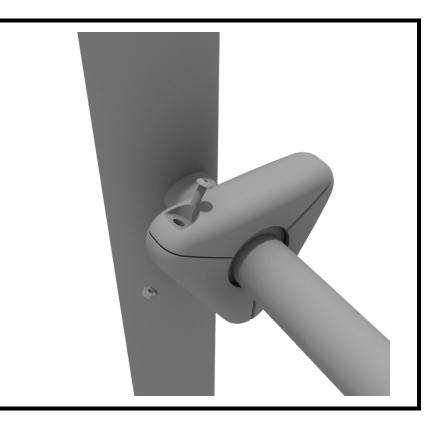

10859 Washington St. Suite 200, Indianapolis, IN 1-800-667-0097

Created By: Matt N Date: 9/11/2023