


**DO NOT CEMENT POSTS INTO PLACE
UNTIL THE ENTIRE STRUCTURE IS
ASSEMBLED.**

Refer to the General Installation
guide footing information and dig
proper holes for the support posts.

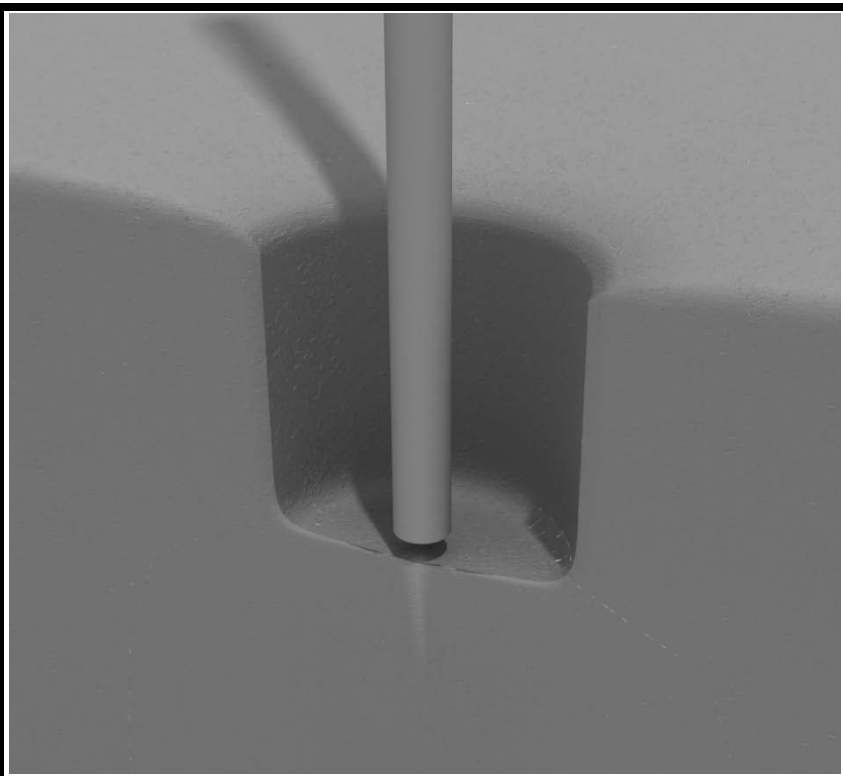


Single Post with Cantilever Install

For easy installation it is recommended to assemble swing frame and lower onto footers. Once frame is assembled and leveled with hardware installed on top rail, cement into place. Follow guidelines from Concrete manufacturer for amount / time of curing, etc. It is also recommended the use of ratchet straps along with stakes / anchor spike to stabilize frame while cement cures.


Attach end post to top rail using two (2) 6-1/4" bolts, four (4) washers, two (2) lock nuts and two (2) bolt covers with cap.

Cantilever Extension: Repeat previous step.

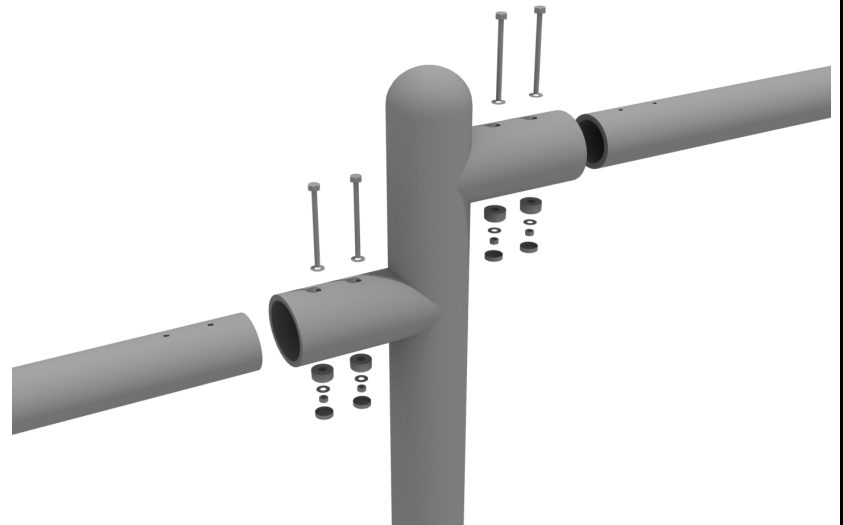

Single Post with Cantilever Install

Loosen and attach swing hanger on to top rail. Spacing hangers with a minimum distance of 20" between each other.

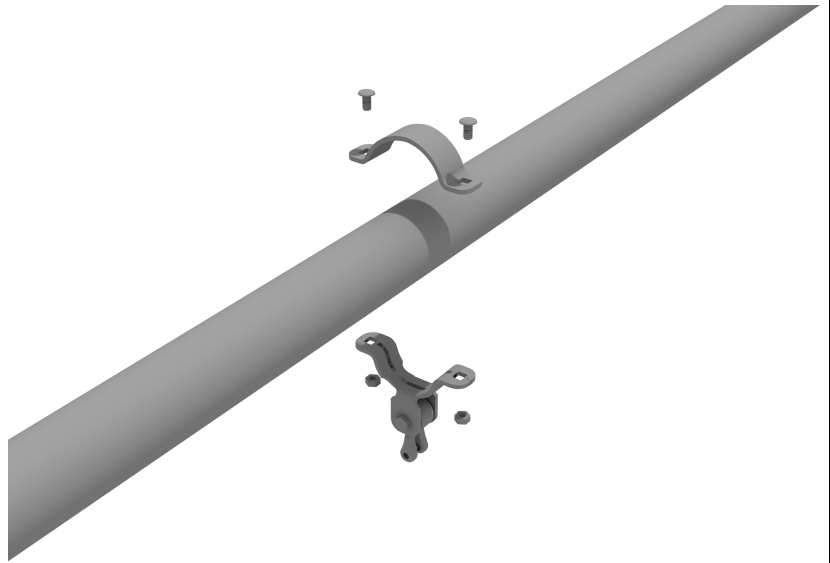

Loosen hardware on swing hanger pendulum and attach chain.



Loosen single clevis hardware and attach belt seat. Re-tighten single clevis hardware.

