


Model # SV-R32RB



#### **SAFETY WARNINGS & EQUIPMENT INSPECTION**

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Replace all worn S-hooks. S-hooks must be completely closed. Failure to close S-hooks can result in serious injury to the user. NEVER reuse S-hooks.
- Test for free movement of swing hanger and other moving attached parts.
- Check for worn chains and replace them.
- A soft resilient surface should be placed under all swings extending at least twice the height of the top rail both front and back.

### HARDWARE

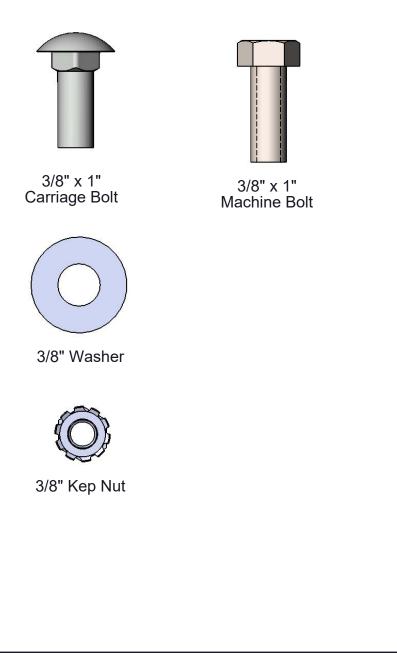






800-45-ULTRA


www.ultra-site.com

### **TOOLS REQUIRED**

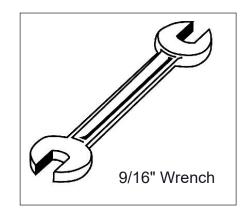

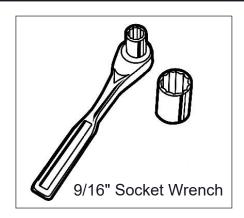

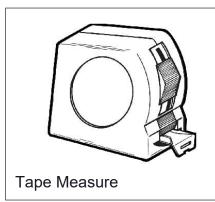

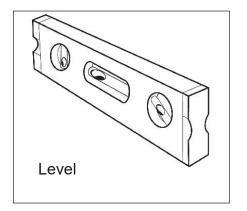



www.ultra-site.com

# ULTRA SITE PRODUCT SPECIFICATIONS

### SV-R32 32 GALLON TRASH RECEPTACLE

Material: Top and bottom are fabricated from 11 gauge steel flat plate. Sides are fabricated from 12 gauge steel flat plate with 5/8" cold rolled rods welded to specs. Frame is made of 2" square tubing. Surface mount plates are laser cut from 1/4" steel plate. Backing plate shall be formed from 18ga steel sheet.

Coating: Steel is sandblasted to near white condition and primered with a zinc rich epoxy primer. Then coated with electrostatic powder coat, oven cured.

Receptacle Dimensions: 28" square x 32" high x 32 gallon capacity.

Hardware: Mounting hardware not included.

#### RB-32-08 32 GALLON RAIN BONNET TOP

Material: Top plate shall be fabricated from 18 gauge steel flat, spun to form. Vertical posts are 1/2" diameter steel rods. Bonnet top shall be fabricated from 20 gauge steel flat, spun to form. All electrically MIG welded.

Coating: Steel is sandblasted to near white condition and primered with a zinc rich epoxy primer. Then coated with electrostatic powder coat, oven cured.

Receptacle Dimensions: Center opening shall be 8" inside diameter. The overall dimensions shall be 24" diameter x 11" high.

PL-32: Made of Heavy Duty Plastic.

Overall Dimensions Including Top: 28" Square x 40-5/8" High x 32 gallon capacity.



800-45-ULTRA

www.ultra-site.com

11/1/2019

Page 5 of 10

### COMPONENTS

QTY.

1

1

1

2

2

20

4

4

16

1

4

4

800-45-ULTRA

Optional Surface Mount Hardware: 3/8" x 3-1/2" Concrete Expansion Anchor Bolts (Not Included)

DESCRIPTION

32 Gal. Liner

Sav Receptacle Bottom Plate

Sv Flat Top Holder

Sav Receptacle 32 Frame RH

Sav Receptacle 32 Frame LH

3/8" Flat Washer (SS)

3/8" x 1" Carriage Bolt (SS)

3/8" Kep Nut (SS)

3/8" x 1" Machine Bolt (SS)

palmetto rod receptacle side panel

savannah receptacle inner backing plate

RBR-32-08 32 Gallon Rolled Rain Bonnet with a 8" opening

www.ultra-site.com

11/1/2019

ITEM NO.

1

2

3

4

5

6

7

8

9

10

11

12

PartNo

PL-32

01-05-0057

01-05-0056

**T-SV32-R** 

**T-SV32-L** 

33-02-0008


33-06-0042

33-03-0013

33-06-0056

01-05-0076


01-05-0226

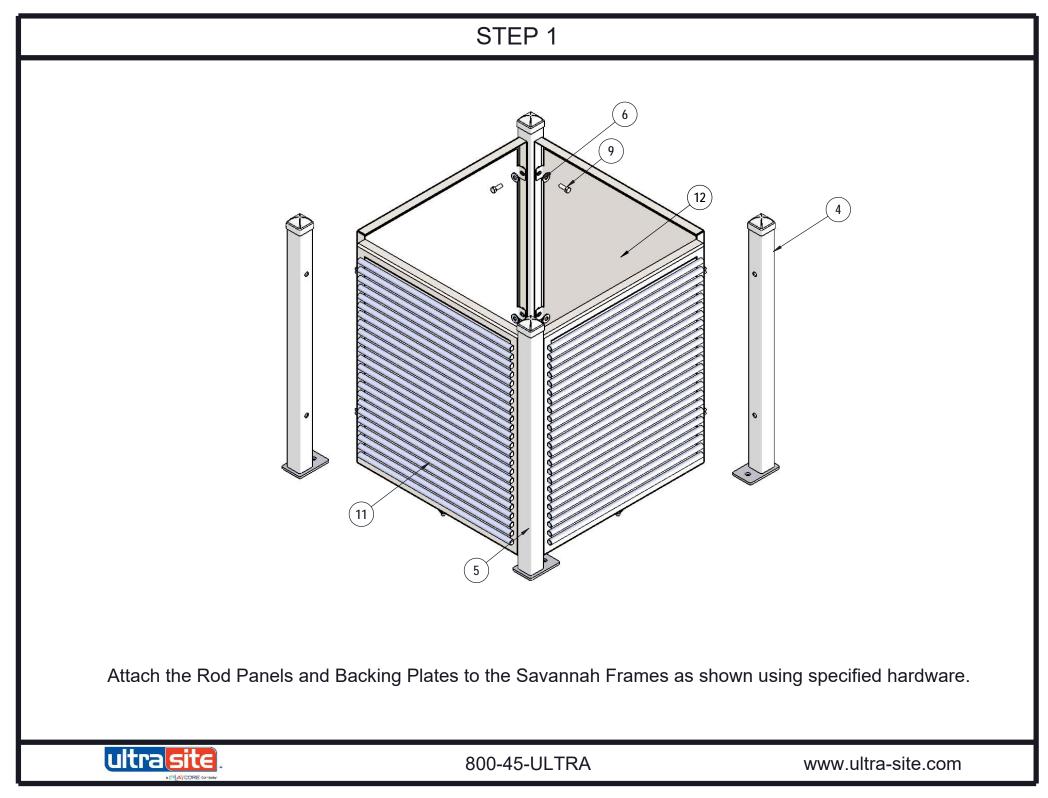

11/1/2019

Page 7 of 10

### STEP 2

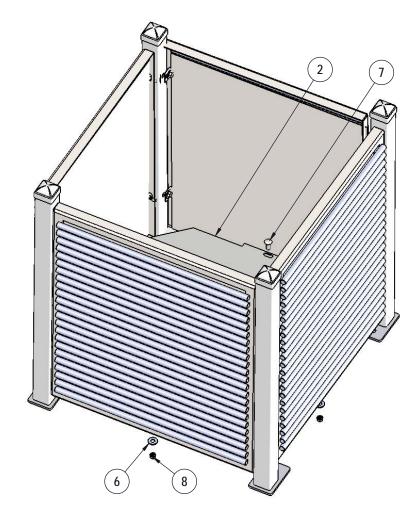

Insert the Savannah Bottom Plate into the assembly as shown and fasten using specified hardware.




800-45-ULTRA


www.ultra-site.com

11/1/2019

Page 8 of 10

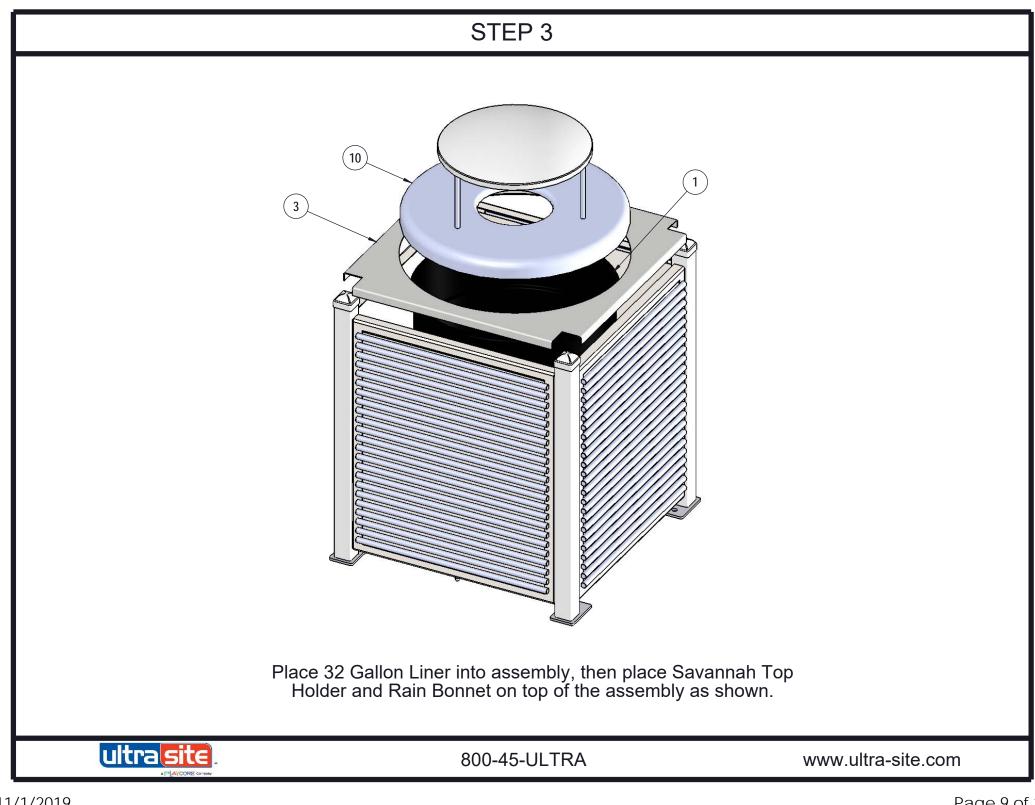

## OVERALL DIMENSIONS

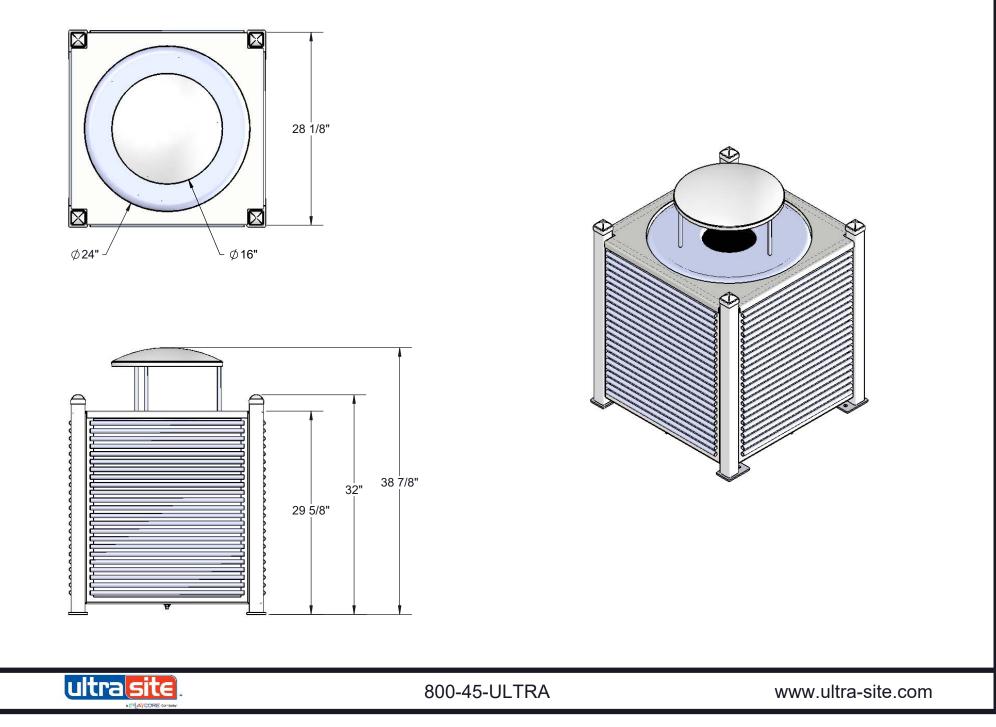

11/1/2019

Page 10 of 10