
Post Installation



STEP: 1

DO <u>NOT</u> CEMENT POSTS INTO PLACE UNTIL THE ENTIRE STRUCTURE IS ASSEMBLED.

Refer to the General Installation guide footing information and dig proper holes for the support posts.

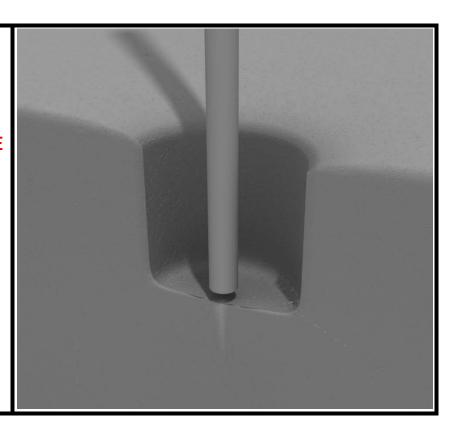

1 Playground Drive Greenfield, IN 46140 1-800-667-0097

Created By: Aaron Price


Date: 04/26/2018

5.0-inch Clamp Installation Guide



5.0-inch Tube Clamp

Insert Bar on Component into one half of the Tube Clamp and attach with M4*25 Set Screw. Then, using the other half of the tube clamp and the hardware provided in the clamp hardware bag, attach the other half of the tube clamp around the post.

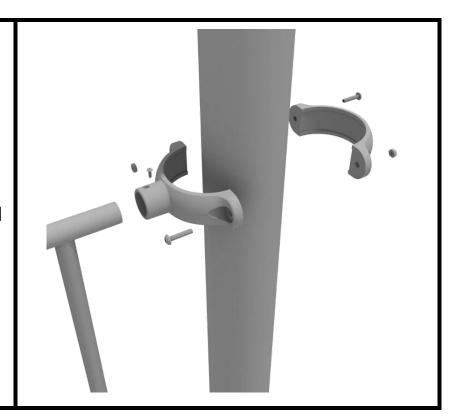


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 09/10/2018

5.0-inch 4-foot Transfer Station Install




STEP: 1

Using three (3) M10*25 Bolts, six (6) M10 Washers, and three (3) M10 Lock Nuts, attach the top of the stairs to the half hex deck.

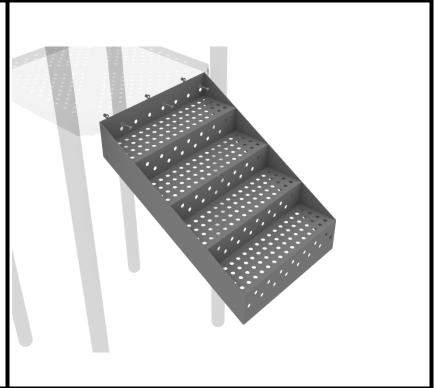

STEP: 2

Attach the ADA Transfer Stair
Handrails to the posts using Tube
Clamps. Then using six (6) M10*25
Bolts, twelve (12) M10 Washers, and
six (6) M10 Lock Nuts, attach the
handrail to the bottom and side of
the stairs.

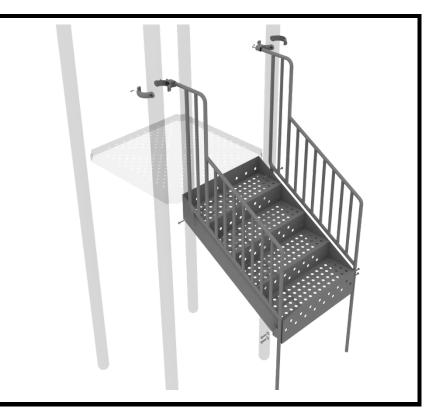


1 Playground Drive Greenfield, IN 46140 1-800-667-0097

5.0-inch 4-foot Transfer Station Install




STEP: 3

Using three (3) M10*25 Bolts, six (6) M10 Washers, and three (3) M10 Lock Nuts, attach the ADA transfer deck to the base of the 4-foot ADA transfer stair.

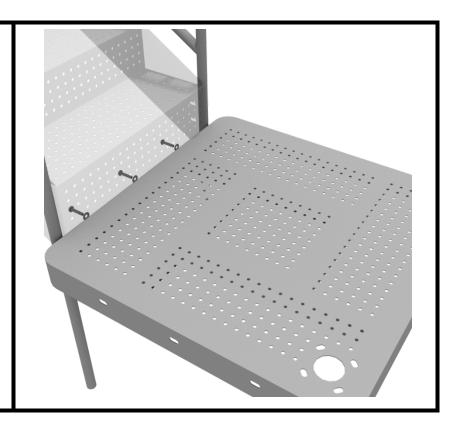

STEP: 4

See general installation guide regarding footing information for the transfer deck handrail. Using four (4) M10*25 Bolts, eight (8) M10 Washers, and four (4) M10 Lock Nuts, attach each transfer deck handrail to the ADA transfer deck.

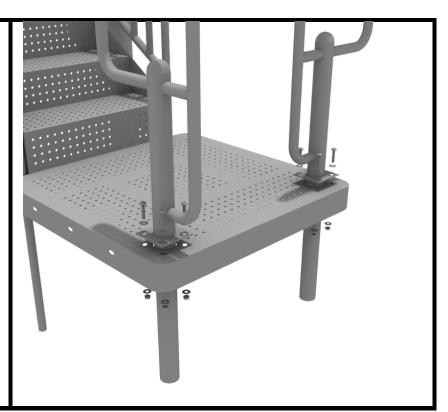

1 Playground Drive Greenfield, IN 46140 1-800-667-0097

5.0-inch 4-foot Transfer Station Install




STEP: 5

See general installation guide regarding footing information for the ADA transfer step mount. Using two (2) M10*25 Bolts, four (4) M10 Washers, and two (2) M10 Lock Nuts, attach the transfer step to each ADA transfer step mounts.



STEP: 6

Using three (3) M10*25 Bolts, six (6) M10 Washers, and three (3) M10 Lock Nuts, attach the top of the ADA transfer step to the ADA transfer deck.

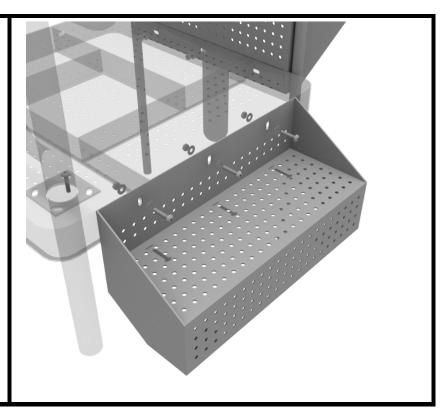

1 Playground Drive Greenfield, IN 46140 1-800-667-0097

ADA Step Install

STEP: 1




See general installation guide regarding footing information for the ADA transfer step mount. Using two (2) M10 bolts, four (4) M10 washers, and two (2) M10 lock nuts, attach the transfer step to each ADA transfer step mount.



STEP: 2

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 washers, attach the top of the ADA transfer step to the ADA transfer deck.

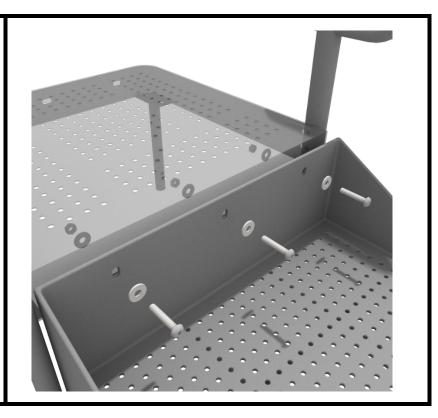

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price Date Modified: 3/13/18


Square Deck Installation



STEP: 1

After the posts are in place, using four (4) M10*35 Bolts, eight (8) M10 Washers, and four (4) M10 Lock Nuts, attach each square deck to each pre-attached deck clamp as shown in the image.

Deck clamps are pre-attached to the posts and should not be altered in any way.

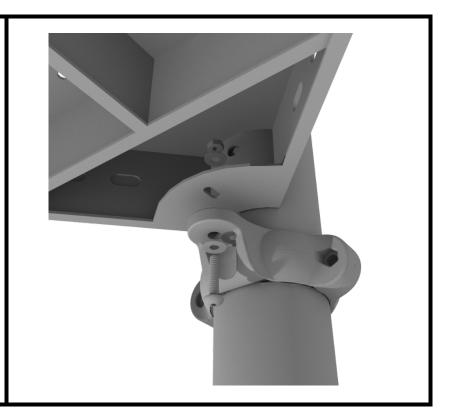

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 3/19/2018


Triangle Deck Installation



STEP: 1

After the posts are in place, using three (3) M10*35 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the triangle deck to each pre-attached deck clamp as shown in the image.

Deck clamps are pre-attached to the posts and should not be altered in any way.

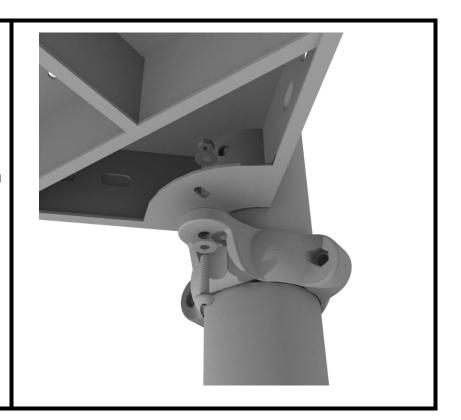

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/22/2018

Kickplate Install



STEP: 1

Using eight (8) M10*25 bolts, sixteen (16) M10 washers, and eight (8) M10 lock nuts, attach the kickplate to the proper decks.

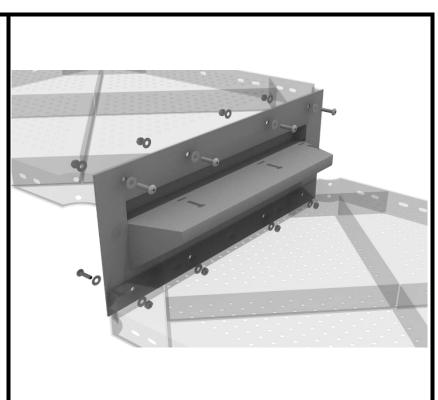


Covered Bones Bridge Install




STEP: 1

Using four (4) M10*30 bolts, eight (8) M10 washers, and four (4) M10 lock nuts, attach each bottom bones bridge to the proper decks.

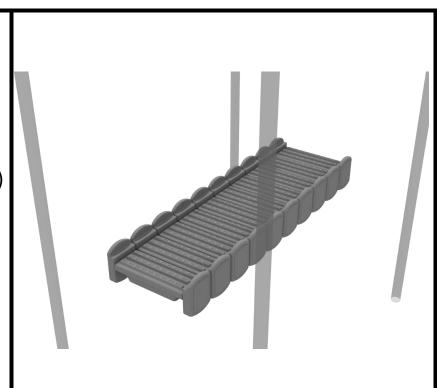

STEP: 2

Once the bridge is attached, connect half of each 4.5-inch tube clamp to the bridge handrail using one (1) M4*25 self-tapping screw. Then, using two (2) M10*25 bolts, four (4) M10 washers, and two (2) M10 lock nuts, attach the bottom of the bridge handrails to the deck. Repeat these steps for the remaining bones bridges and bridge handrails.

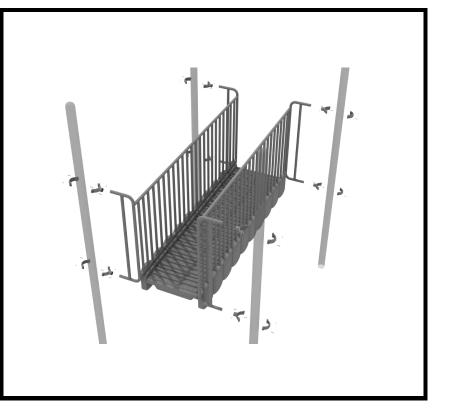

1 Playground Drive Greenfield, IN 46140 1-800-667-0097


Created By: Matt N
Date Modified:05/25/21

Covered Bones Bridge Install




STEP: 3

Place the Incline Bones Bridge Roof onto the railings.

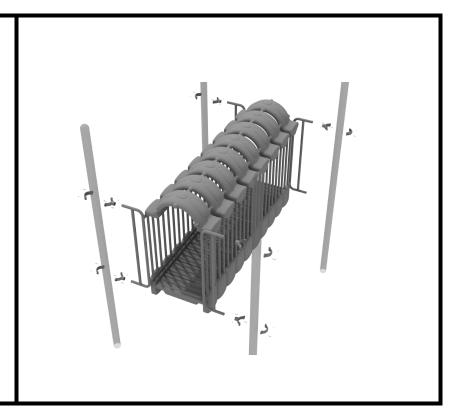

STEP: 4

Using four (4) M4*25 set screws, attach the Incline Bones Bridge Roof to the railings.

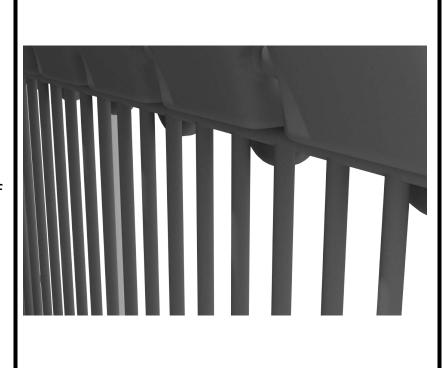


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Matt N
Date Modified:05/25/21

Bones Bridge Installation




STEP: 1

Attach each bones bridge rail to the proper deck slot using one (1) M10*25 bolt, one (1) M10 washer, and (1) M10 lock nut. Then, attach the top of rails to each post using one (1) 3.5-inch tube clamp, and one M8*30 bolt.

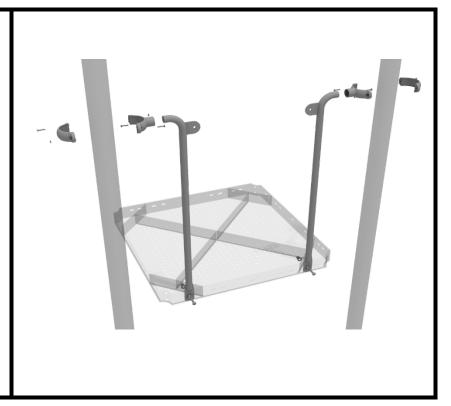

STEP: 2

Once the rails are attached, detach and set aside the pre-attached hardware on the bottom of the bones bridge. Attach the bottom of the bones bridge to each deck using one (1) M10*30 bolt, one (1) M10 spring gasket, and one (1) M10 washer. Then, attach the top of the bones bridge to each rail using one (1) M10*30 bolt, one (1) M10 spring gasket, and one (1) M10 washer.

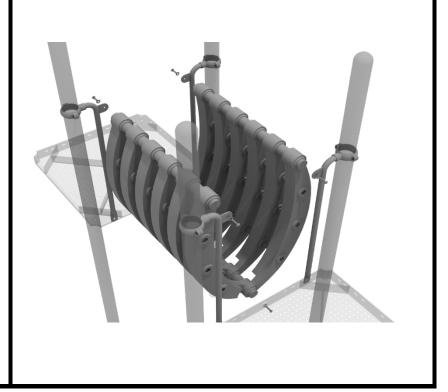

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/21/2018

Treehouse Tube Bridge with Window Installation



STEP: 1

Attach each side of the tube bridge to the proper deck using four (4) M10*50 bolts, eight (8) M10 washers, and four (4) M10 lock nuts. Then, attach the top of the tube bridge to the posts using one (1) tube clamp. View standard clamp attachment guide for more information.

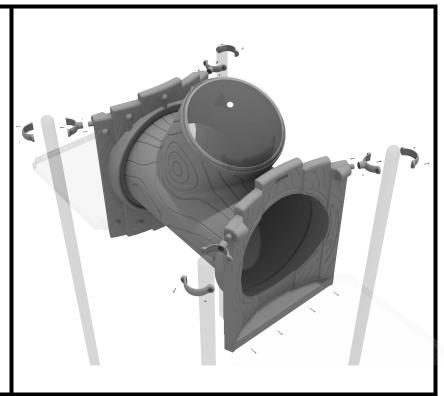

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 06/01/2018


Paw Print Climber Installation



See general installation guide regarding footing information for climbers.

Using two (2) M10*20 Bolts, two (2) M10 Spring Gaskets, and two (2) M10 Washers, attach the bottom of the Paw Print climber to the climber support posts.

Then, using three (3) M10*35 Bolts, three (3) M10 Spring Washers, and three (3) M10 Washers, attach the Paw Print climber to the deck.

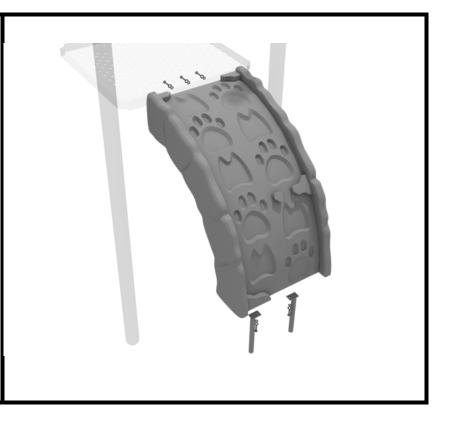


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Gene F. Date: 02/19/2018

Pod Climber Installation




STEP: 1

See general installation guide regarding footing information for the pod climber. Attach the circle end mount to the bottom of the climber using the pre-attached hardware. Each attachment uses three (3) M10*20 bolts, three (3) M10 spring gaskets, and one (3) M10 large gaskets.

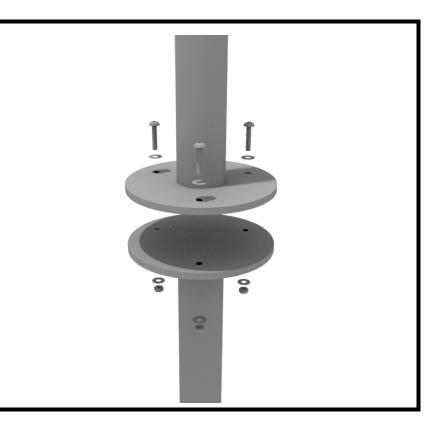

STEP: 2

Attach the top of the climber to the designated arch rail top bracket using one (1) M10*20 bolt, one (1) M10 spring washer, and one (1) M10 washer.

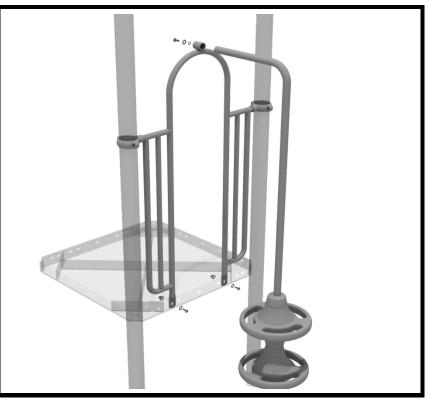

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/21/2018

Stump Climber Installation

STEP: 1




See general installation guide regarding footing information for climbers. Using two (2) M10*20 Bolts, two (2) M10 Spring Gaskets, and two (2) M10 Washers, attach the bottom of the rock whole climber to the climber support posts.

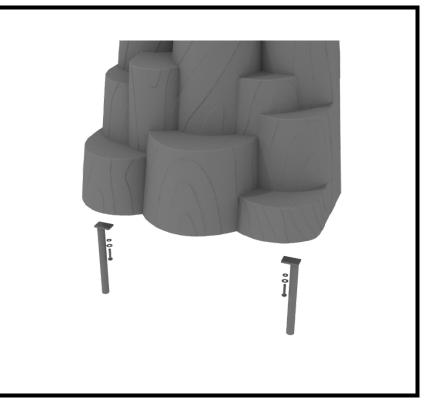

STEP: 1

Then, using three (3) M10*35 Bolts, three (3) M10 Spring Washers, and three (3) M10 Washers, attach the Rock hole climber to the deck.

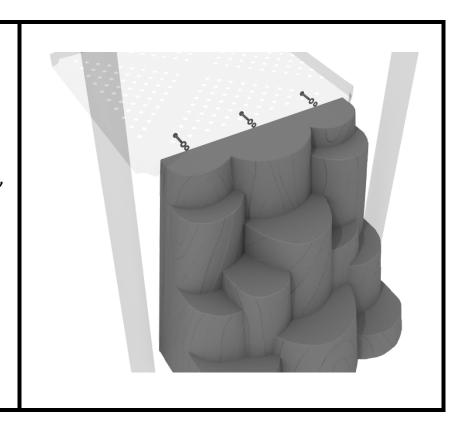

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 09/12/2018

4-foot Double Straight Slide Installation




TEP: 1

For the double slide, you will first need to attach the double slide deck extension. This will require four (4) M10*25 bolts, eight (8) M10 washers, and four (4) M10 lock nuts.



STEP: 2

Then, See general installation guide regarding footing information for the double slide end mounts. Using two (2) M8*20 bolts, two (2) M8 spring gaskets, and two (2) M8 washers, attach the slide end mounts to the double slide.

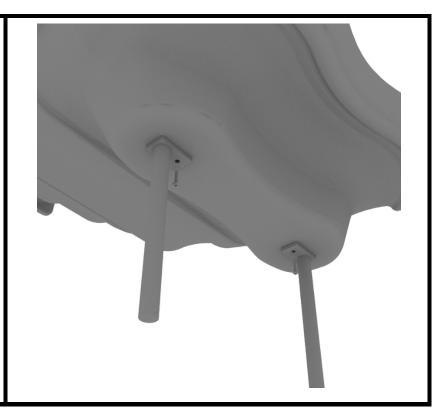

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly D. Date: 12/14/2020

4-foot Double Straight Slide Installation




STEP: 3

Then, See general installation guide regarding footing information for the double slide middle support. Attach the middle support to the slide using two (2) M8*20 bolts, two (2) M8 spring washers, and two M8 washers.



STEP: 4

Then, attach the slide to the deck extension using four (4) M10*45 bolts, eight (8) M10 washers, and four (4) M10 lock nuts.

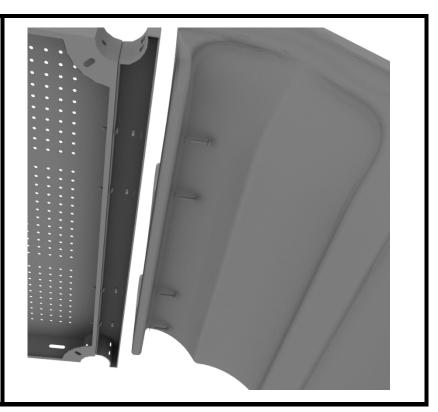


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly D. Date: 12/14/2020

4-foot Double Straight Slide Installation



STEP: 5

Once the slide is attached, take the double slide hood and insert it into the top of the slide, and then attach the top using two (2) double slide clamps, and two (2) M8*30 bolts.

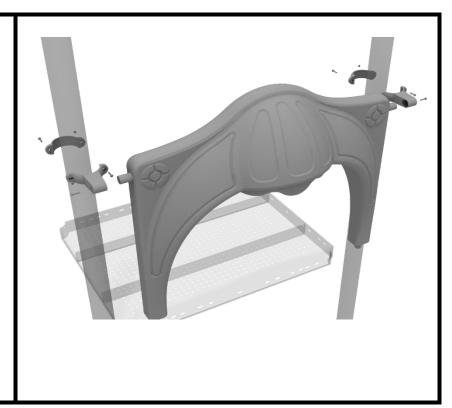


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly D. Date: 12/14/2020

4-foot Single Wave Slide Installation




STEP: 1

To attach the single slide hood to a deck, take two clamps and attach them to the posts using two (2) M4*25 self-tapping screws. Then, attach the hood to the deck using two (2) M10*50 bolts, four (4) M10 washers, and two (2) M10 lock nuts. Repeat this process for every single slide hood.

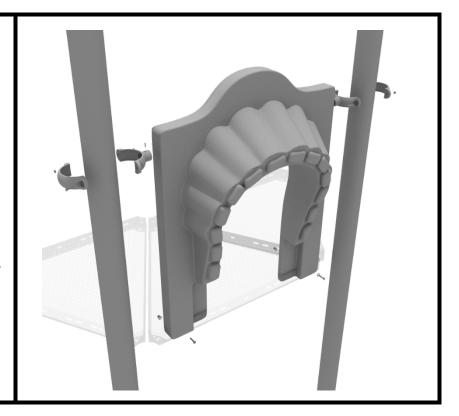

STEP: 2

See general installation guide regarding footing information for the slide end mount. Using two (2) M8*20, two (M8) spring gaskets. And two (2) M8 washers, attach the slide to the slide support post.

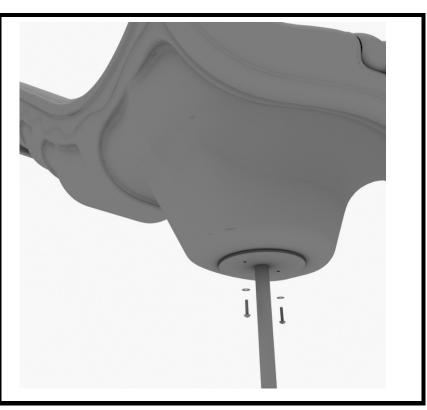

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/19/2018

4-foot Single Wave Slide Installation




STEP: 3

Using one (1) M10*45 bolt, two (2) M10 washers, and two (2) M10 lock nuts, attach one side of the slide to the deck.

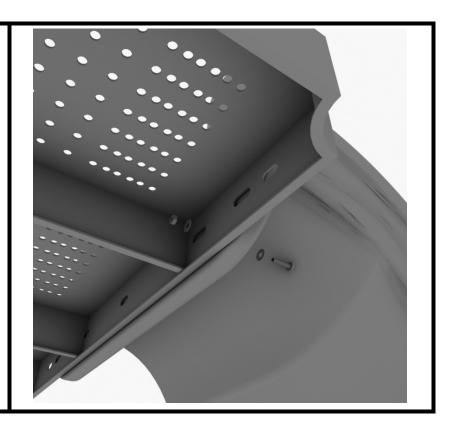

STEP: 4

Using one (1) M8*45 bolt, one (1) M8 washer, one (1) M12 washer, and one (1) M12 inner hex spiral nut, attach the slide to one side of the slide hood. Repeat this process for the other side of the slide.

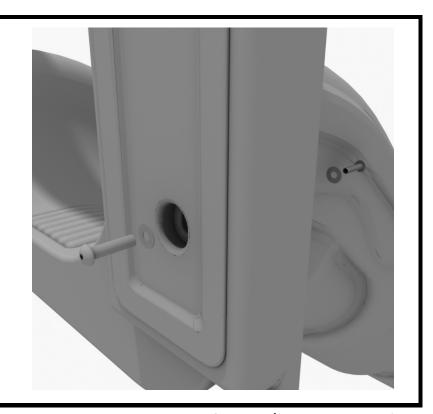

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price Date: 03/19/2018


Page 2 of 2 (4-foot Single Wave Slide Installation)

Spiral Slide Installation




STEP: 1

Attach the spiral slide kick plate to the proper square deck using four (4) M10*25 bolts, eight (8) M10 washers, four (4) M10 lock nuts.

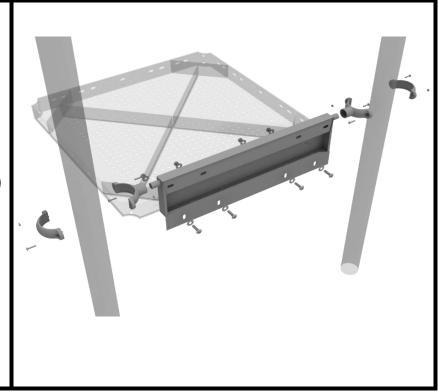

STEP: 2

Attach the spiral slide deck to the top of the spiral slide kick plate using four (4) M10*25 bolts, eight (8) M10 washers, and four (4) M10 lock nuts.

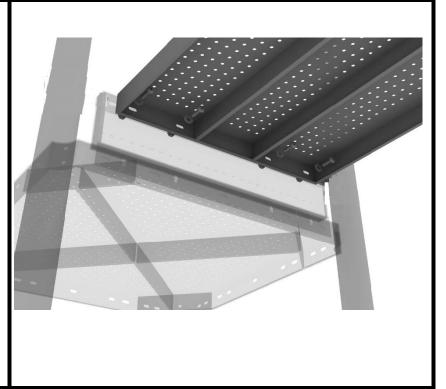

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 01/05/2020

Spiral Slide Installation

STEP: 3




Attach the Spiral Slide Deck Support Post to the Spiral Slide Deck using two (2) M10*25 Bolts, four (4) M10 Washers, and two (2) M10 Lock Nuts.



STEP: 4

Connect the Spiral Slide Mount to the bottom of the Spiral Slide using four (4) M10*20 Bolts, four (4) M10 Spring Gaskets, and four (4) M10 Washers. Refer to the General Installation Guide for information on slide footings.

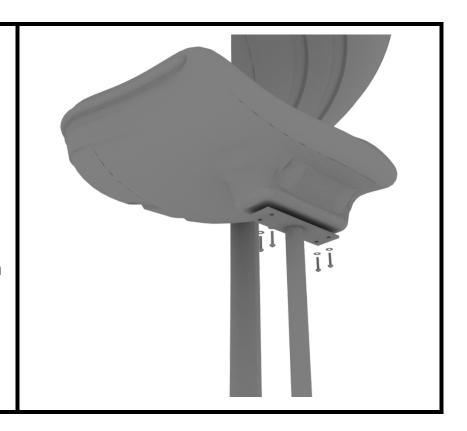


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 01/05/2020

Spiral Slide Installation

STEP: 5



See general installation guide regarding footing information for slides and support posts. Connect the Spiral Slide to the Spiral Slide Deck using three (3) M10*20 Bolts, three (3) M10 Spring Gaskets, and three (3) M10 Washers.

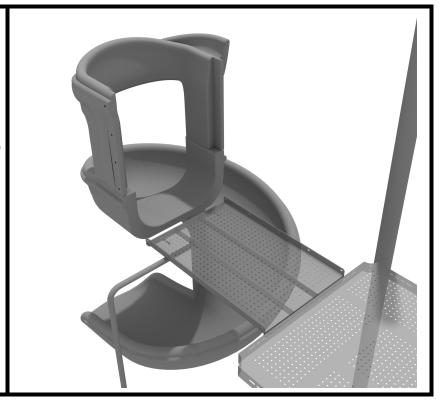


STEP: 6

Attach the Spiral Slide Handrail to the Spiral Slide Deck using five (5) M8*60 Bolts, five (5) M8 Washers, five (5) M12 Washers, and five (5) M12 Inner Hex Nuts. Connect spiral slide panels to slide using four (4) M10*50 bolts, four (4) M10 washers, four (4) M10 lock nuts for each panel.

Connect the handrails to the posts using two

(2) tube clamps. Repeat this process

for the other handrail.

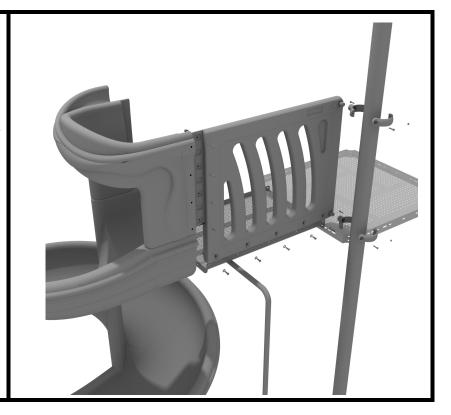


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 01/05/2020

Treehouse Tube Slide Installation




STEP: 1

Attach the slide end mount to the bottom of the slide using four (4) M10*20 bolts, four (4) M10 spring washers, and four (4) M10 washers.

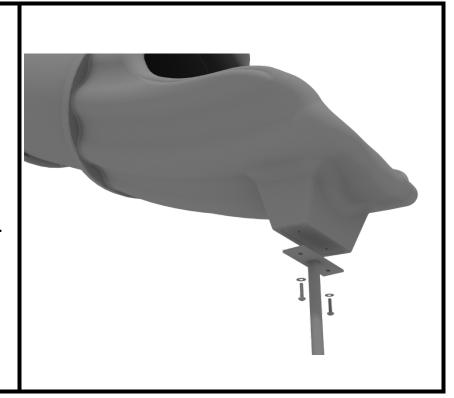

STEP: 2

Connect the tube slide together using ten (10) M8*30 bolts, ten (10) M8 washers, and ten (10) M8 lock nuts for each connection point.

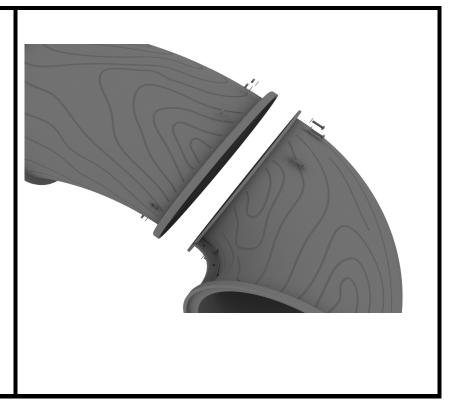


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 10/07/2020

Treehouse Tube Slide Installation



STEP: 3

Attach the tube slide supports to the slide support brackets by inserting the support into the designated slot under the slide, and tighten the set screws using the provided Allen wrench. Repeat this process for the other slide support post.

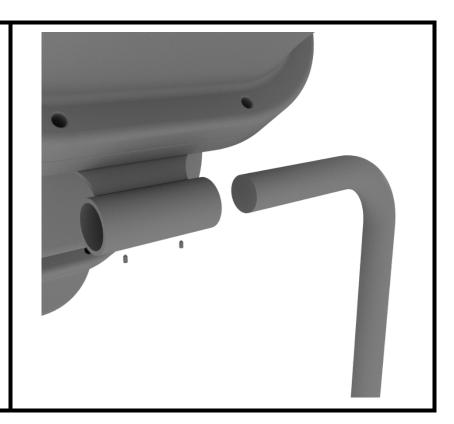

STEP: 4

Attention: Any hardware on preattached tube slide or tube bridge supports (not including set screws) are to be disposed. Use supplied bolts and appropriate lock nuts in hardware box to avoid any safety hazards or safety violations.




1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 10/07/2020

5.0-inch 2-Clamp Arch Rail Installation



STEP: 1

Attach the Arch Rail to the designated posts by connect half of the tube clamp to the arch rail using one (1) M8*30 bolt. Repeat this process for each post attachment point. Then, attach the rail to the deck using two (2) M10*25 bolts, four (4) M10 washers, and two (2) M10 lock nuts. Finally, attach the second half of the clamp around the post.

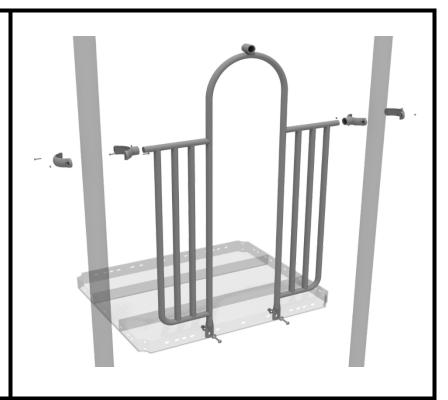

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/21/2018

5.0-inch 2-Clamp Arch Rail Installation



STEP: 1

Attach each two-clamp arch rail to the designated deck by using two 5.0-inch Tube Clamps. Then use two (2) M10*25 Bolts, four (4) M10 Washers, and two (2) M10 Lock Nuts to attach the panel to the deck.

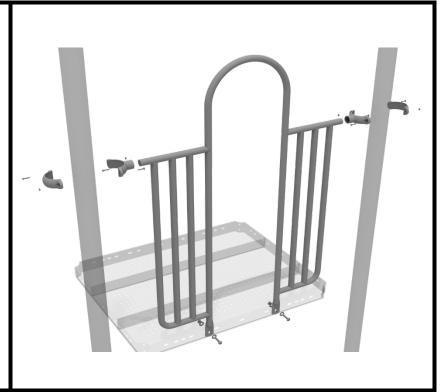

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 09/15/2018


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 09/15/2018

5.0-inch Metal Barrier Installation



STEP: 1

Attach two tube clamps to the metal barrier using two (2) M4*25 self-tapping screws and attach those clamps to the proper support posts. Then, attach the bottom of the metal barrier to the deck using two (2) M10*25 bolts, four (4) M10 washers, and two (2) M10 lock nuts.

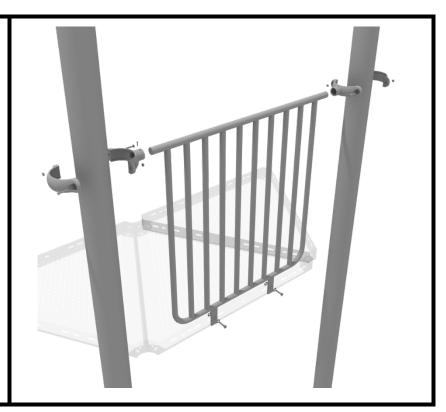

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/21/2018

5.0-inch Bamboo Panel Installation



STEP: 1

Attach the Bamboo Panel to the designated posts using two (2) tube clamps and two (2) M4*25 Set Screws. Then, attach the bottom of the panel to the deck using four (4) M10*20 Bolts, four (4) M10 Washers, and four (4) M10 Lock Nuts.

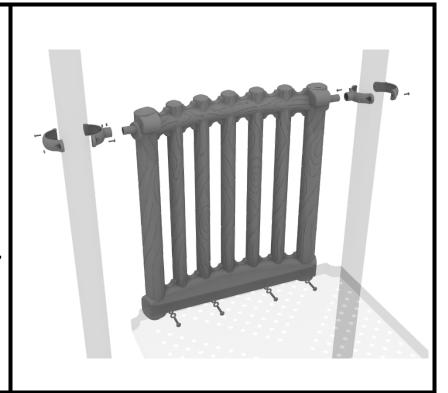

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 09/12/2018


Treehouse Stump Window Panel Installation



STEP: 1

Align the Treehouse Stump Window Panel with the intended posts. The posts have a threaded insert that must be lined up correctly with the Treehouse Stump Window Panel.


Using the provided mounting brackets, attach the panel to the posts with eight (8) M8*30 Bolts, eight (8) M8 Washers, and eight (8) M8 Spring Gaskets.

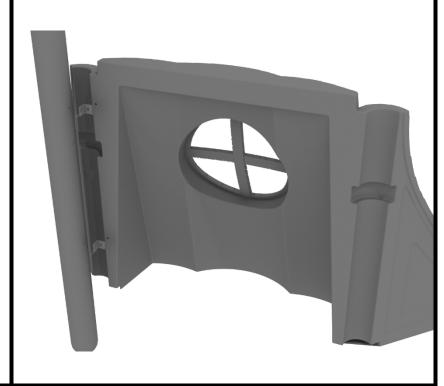

STEP: 2

The Treehouse Stump Window Panel can attach to a 2nd Treehouse Stump Window Panel using one (1) M8*45 Bolt, and one (1) M10*45 Inner Hex Nut.

This step does not apply in cases where there is only 1 Treehouse Stump Window Panel.

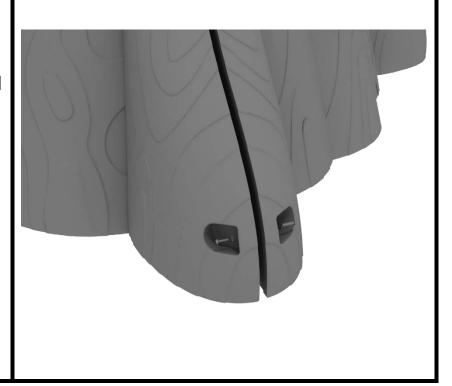


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 08/10/2018

5.0-inch Treehouse Bear Face Panel Installation



STEP: 1

Attach the Treehouse Bear Face
Panel to the designated posts using
two (2) tube clamps and two (2)
M4*25 Set Screws. Then, attach the
bottom of the panel to the deck
using four (4) M10*20 Bolts, four (4)
M10 Washers, and four (4) M10 Lock
Nuts.

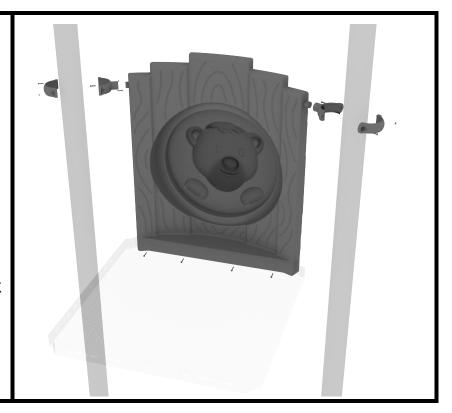


5.0-inch Treehouse Bubble Panel Installation



STEP: 1

Attach the Treehouse Bubble Panel to the designated posts using two (2) tube clamps and two (2) M4*25 Set Screws. Then, attach the bottom of the panel to the deck using four (4) M10*20 Bolts, four (4) M10 Washers, and four (4) M10 Lock Nuts.

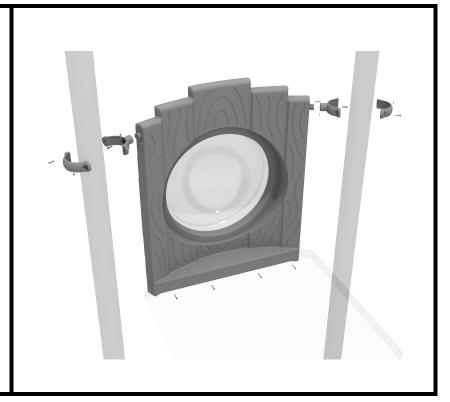


5.0-inch Treehouse Elephant Panel Installation



STEP: 1

Attach the Treehouse Elephant
Panel to the designated posts using
two (2) tube clamps and two (2)
M4*25 Set Screws. Then, attach the
bottom of the panel to the deck
using four (4) M10*20 Bolts, four (4)
M10 Washers, and four (4) M10 Lock
Nuts.

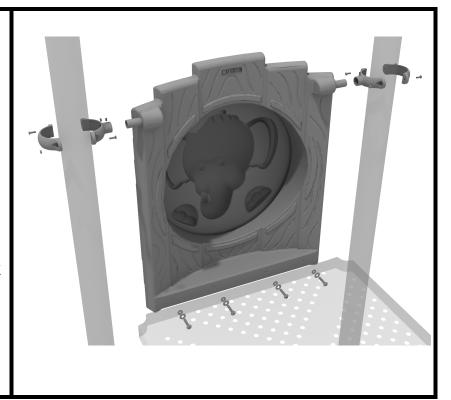


Created By: Derick H

5.0-inch Treehouse Finger Maze Panel Installation



STEP: 1

Attach the Treehouse Finger Maze
Panel to the designated posts using
two (2) tube clamps and two (2)
M4*25 Set Screws. Then, attach the
bottom of the panel to the deck
using four (4) M10*20 Bolts, four (4)
M10 Washers, and four (4) M10 Lock
Nuts.

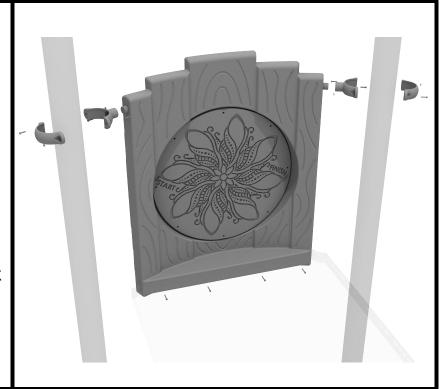


5.0-inch Treehouse Gear Panel Installation



STEP: 1

Attach the Treehouse Gear Panel to the designated posts using two (2) tube clamps and two (2) M4*25 Set Screws. Then, attach the bottom of the panel to the deck using four (4) M10*20 Bolts, four (4) M10 Washers, and four (4) M10 Lock Nuts.

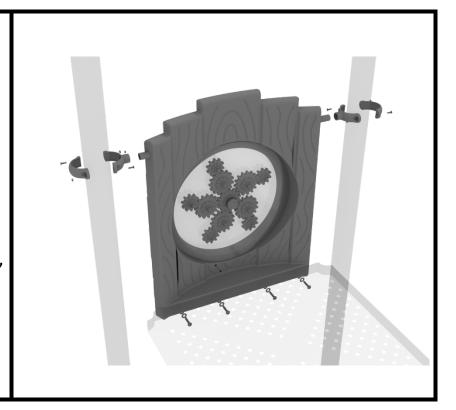


Created By: Derick H Date: 09/12/2018

5.0-inch Treehouse Tic Tac Toe Panel Installation



STEP: 1

Attach the Treehouse Tic Tac Toe
Panel to the designated posts using
two (2) tube clamps and two (2)
M4*25 Set Screws. Then, attach the
bottom of the panel to the deck
using four (4) M10*20 Bolts, four (4)
M10 Washers, and four (4) M10 Lock
Nuts.

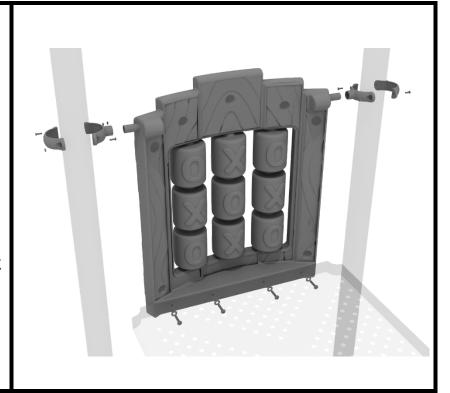

Bongos Installation




Detach half of the tube clamp connected to the Bongos, and reattach the clamp around the support post, as shown in the image.

Recommended install height is 20 to 36 inches above surfacing depending on age range.

We recommend using Threadlocking fluid on bolts connecting Bongos to clamp to prevent hardware from loosening over time.

(Thread-locker not supplied)

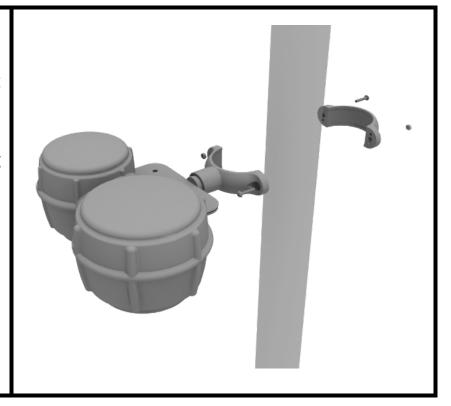

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 03/20/2018


Ships Wheel Installation



Detach half of the tube clamp connected to the Ships Wheel, and re-attach the clamp around the support post, as shown in the picture. Recommended install height is 20 to 36 inches above surfacing depending on age range.

We recommend using Threadlocking fluid on bolts connecting Ship's wheel to clamp to prevent hardware from loosening over time.

(Thread-locker not supplied)

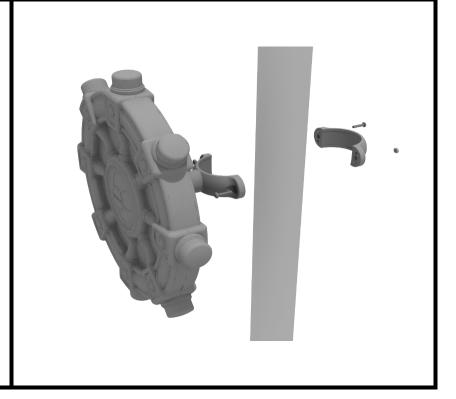


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 03/20/2018

5.0-inch Castle Wall Topper Installation



Attach the Castle Wall Topper to the designated posts using four (4) tube clamps four (4) M4*25 Set Screws.

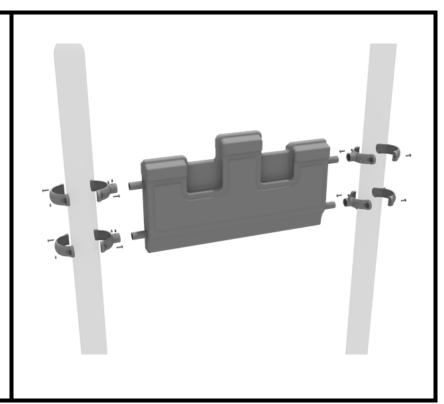


Created By: Gene F. Date: 02/19/2018

Palm Flower Face Topper Installation



STEP: 1

Place the Flower Face Topper onto the provided post. Use three (3) M8*35 set screws and three (3) M*8 Washers to attach the Flower Face Topper to the post.

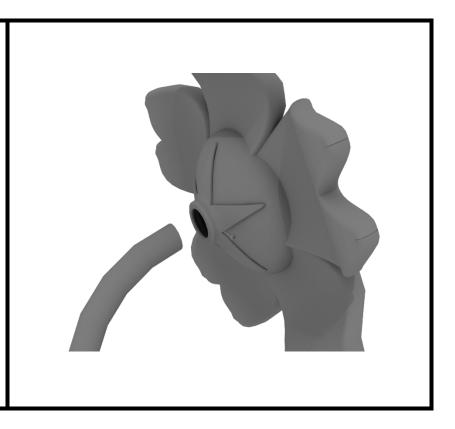


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 08/08/2018

Monkey Topper Installation



STEP: 1

The hardware and clamps come preattached to the Monkey Topper. To install undo the bolts holding the two halves of the Tube Clamps together, then place around the desired post and re-assemble the Tube Clamp.

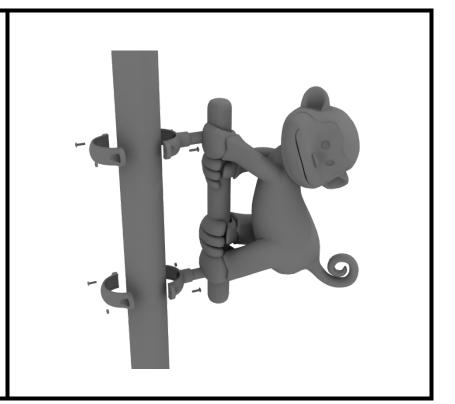


Tree Topper Installation



STEP: 1

Place the Tree Topper onto the desired post. Use three (3) M8*45 Set Screws to attach the Pine Tree Topper to the post.

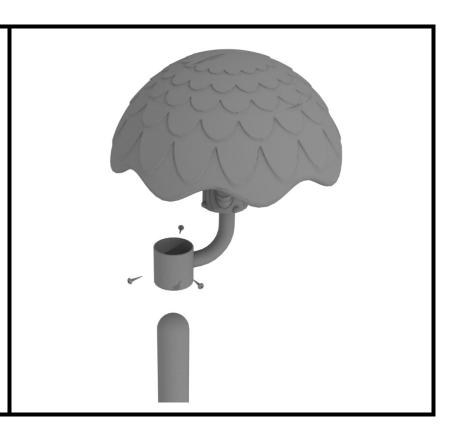


Treehouse Club House Roof Installation




STEP: 1

Place the Club House roof on to the top of the posts of the appropriate deck.

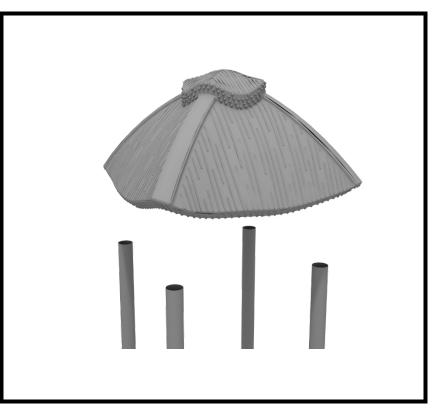

STEP: 1

Install the Club House roof by using four (4) M4*50 Self Tapping screws, and four (4) M8 Washers.

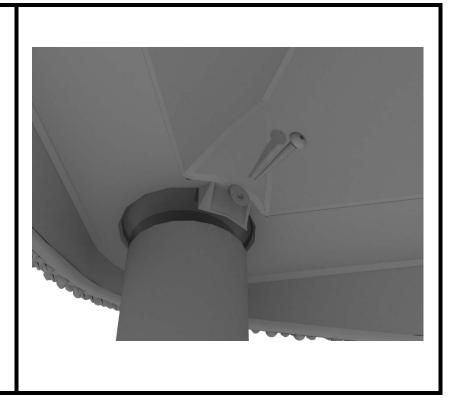


1 Playground Drive Greenfield, IN 46140 1-800-667-0097

Treehouse Gable Roof Installation






Place the Gable Roof on to the top of the posts of the appropriate deck.

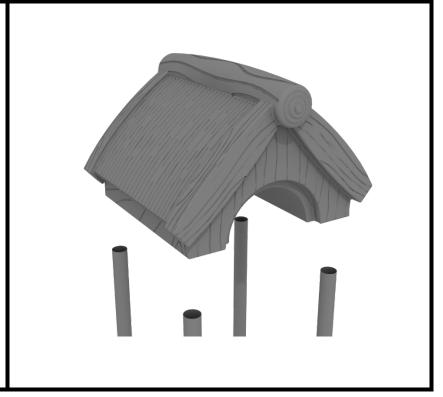

STEP: 1

Install the Gable Roof by using four (4) M4*50 Self Tapping screws, and four (4) M8 Washers.

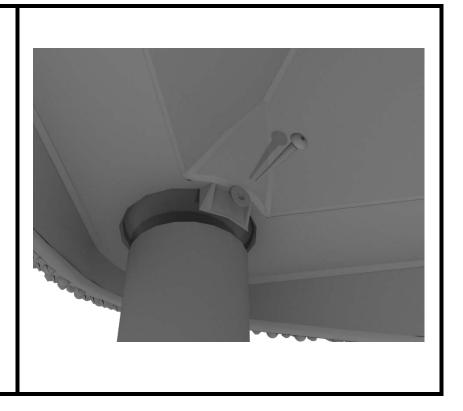

1 Playground Drive Greenfield, IN 46140 1-800-667-0097