
Post Installation



STEP: 1

DO <u>NOT</u> CEMENT POSTS INTO PLACE UNTIL THE ENTIRE STRUCTURE IS ASSEMBLED.

Refer to the General Installation guide footing information and dig proper holes for the support posts.

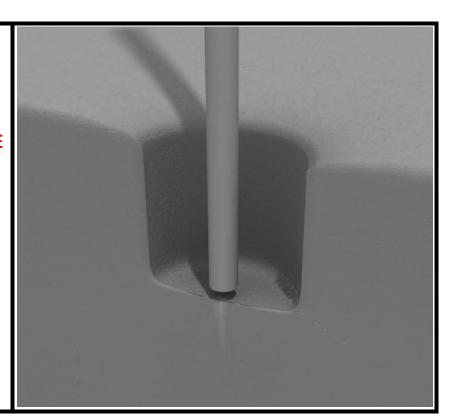

1 Playground Drive Greenfield, IN 46140 1-800-667-0097

Created By: Aaron Price

Date: 04/26/2018

4.5-inch Clamp Installation Examples




The following two pages will include examples of how to install some of the most common types of Clamps that are present on our structures that use 4.5-inch outside diameter posts. The structure that you are assembling might not require all the types of clamps listed in these examples.

The Install Guides for specific components that come later in this document might call for a specific type of clamp (a tube clamp for example), those sections will not include detailed instructions for the clamps and should direct you back to this section for more detailed information.

4.5-inch Flat Clamp Installation Example

Connect half of the flat clamp to the component using one (1) M8*30 bolt and Lock Nut. Then, using the other half of the flat clamp and the hardware provided in the clamp hardware bag, attach the backside of the flat clamp around the post.

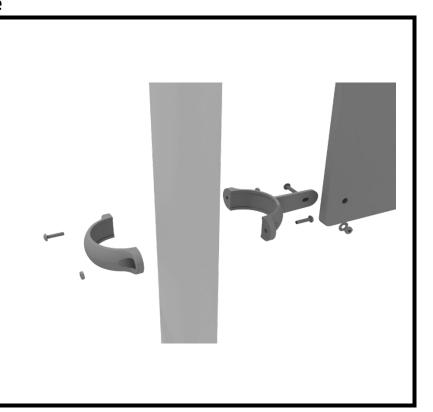


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 11/01/2018

4.5-inch Clamp Installation Examples

Playground Equipme nt


4.5-inch Tube Clamp Installation Example

Insert Bar on Component into one half of the Tube Clamp and attach with M4*25 Set Screw. Then, using the other half of the tube clamp and the hardware provided in the clamp hardware bag, attach the backside of the tube clamp around the post.

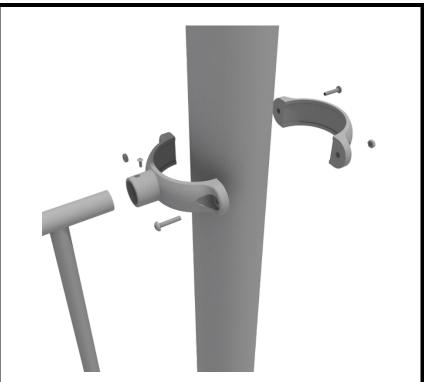

4.5-inch Double Slide Clamp Installation Example

Connect half of the double slide clamp to the double slide hood using one (1) M8*30 bolt. Then, using the other half of the clamp and the hardware provided in the clamp hardware bag, attach the backside of the double slide clamp around the post.

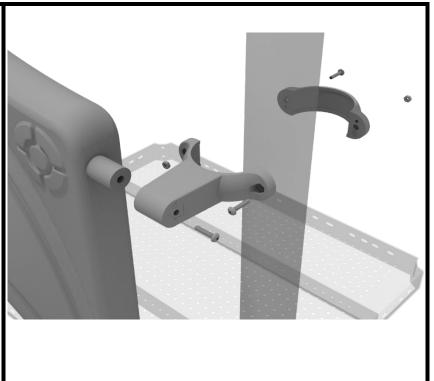


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 11/01/2018

4.5-inch 3-foot Transfer Station Install




STEP: 1

Connect half of a tube clamp to the ADA transfer handrail using one (1) M4*25 self-tapping screw. Set the handrail into place, then attach the second half of the clamp using the hardware provided in the clamp bag. Repeat this process for the other handrail.

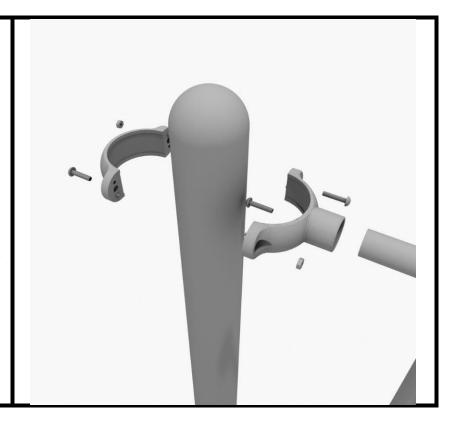

STEP: 2

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the top of the stairs to the half hex deck. Then using four (4) M10*30 bolts, eight (8) M10 washers, and four (4) M10 lock nuts, attach the handrail to the bottom of the stairs. Then, using two (2) M10*25 bolts, four (4) M10 washers, and two (2) M10 lock nuts, attach the handrails to the deck.

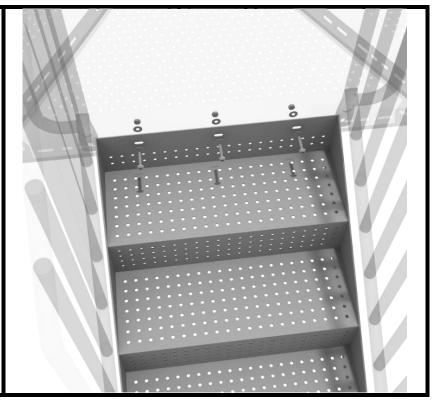


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price Date Modified: 04/25/18

4.5-inch 3-foot Transfer Station Install




STEP: 3

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the ADA transfer deck to the base of the 4-foot ADA transfer stair.

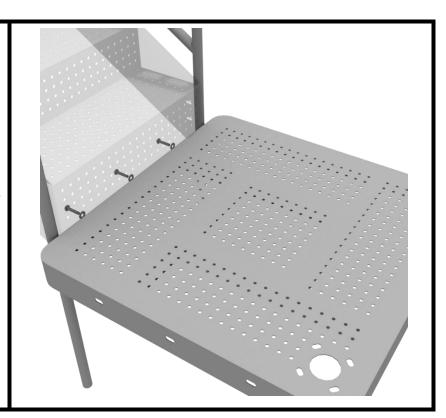

STEP: 4

See general installation guide regarding footing information for the transfer deck handrail. Using four (4) M10*25 bolts, eight (8) M10 washers, and four (4) M10 lock nuts, attach each transfer deck handrail to the ADA transfer deck.

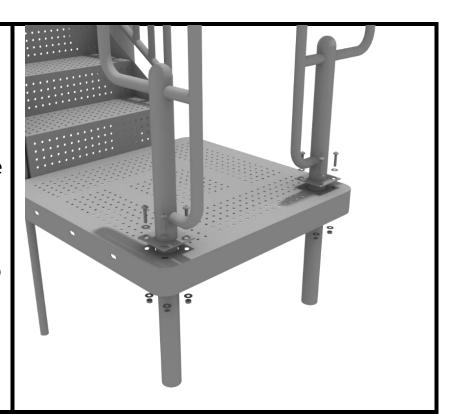

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price Date Modified: 04/25/18

4.5-inch 3-foot Transfer Station Install




STEP: 5

See general installation guide regarding footing information for the ADA transfer step mount. Using two (2) M10*25 bolts, four (4) M10 washers, and two (2) M10 lock nuts, attach the transfer step to each ADA transfer step mounts.



STEP: 6

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 washers, attach the top of the ADA transfer step to the ADA transfer deck.

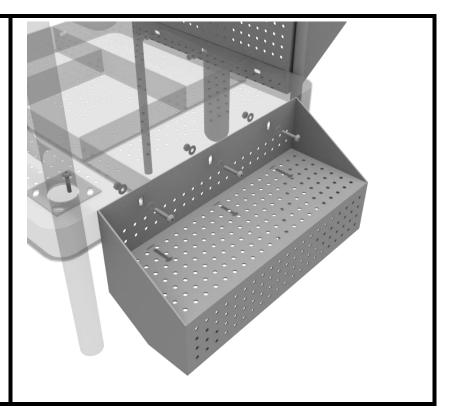

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price Date Modified: 04/25/18


Square Deck Installation



STEP: 1

After the posts are in place, using four (4) M10*35 Bolts, eight (8) M10 Washers, and four (4) M10 Lock Nuts, attach each square deck to each pre-attached deck clamp as shown in the image.

Deck clamps are pre-attached to the posts and should not be altered in any way.

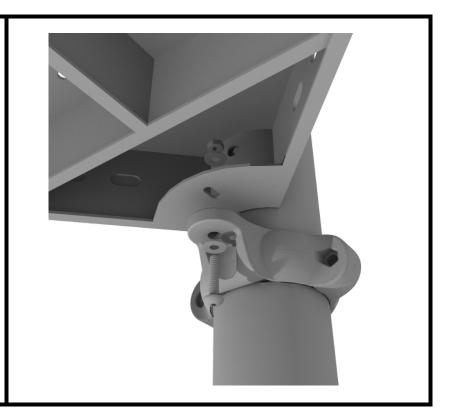

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 3/19/2018


Quarter Octo Deck Installation



STEP: 1

After the posts are in place, using four (4) M10*35 bolts, eight (8) M10 washers, and four (4) M10 lock nuts, attach the rectangle deck to each pre-attached deck clamp as shown in the image.

Deck clamps are pre-attached to the posts and should not be altered in any way.

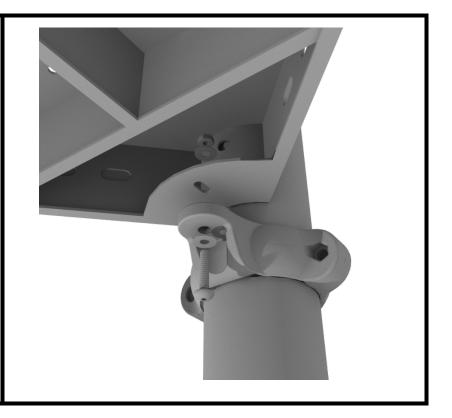

10859 Washington St. Suite 200, Indianapolis, IN 1-800-667-0097

Created By: Nic Moss

Date: 02/9/2022

5-foot Stair Install




STEP: 1

Connect one 5-foot Handrail to the designated post using one (1) tube clamp, and one (1) M8*30 bolt.


Attach the handrail to the deck using one (1) M10*25 bolt, two (2) M10 washers, and one (1) M10 lock nut.

See the general installation guide regarding footing information for the handrails and set them into the ground.

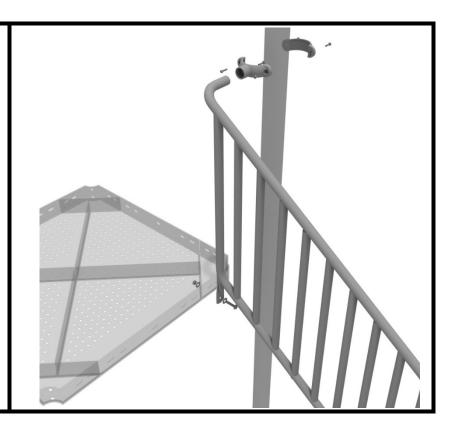

STEP: 2

Repeat step 1 for the other half of the 5-foot handrail.

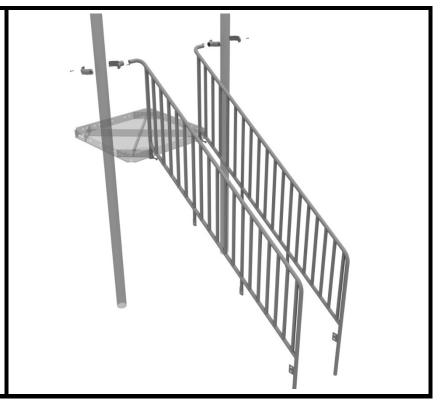


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly Dininger Date Modified: 11/03/20

5-foot Stair Install



STEP: 3

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the top of the stairs to the deck.

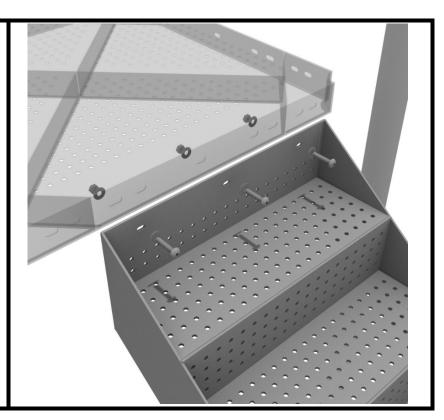

STEP: 4

Attach the handrails to the stairs using eight (8) M10*25 bolts, sixteen (16) M10 washers, and eight (8) M10 lock nuts.




1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly Dininger Date Modified: 11/03/20

4.5-inch 2-Foot Middle Stair Install

STEP: 1




Using eight (8) M10*25 Bolts, sixteen (16) M10 Washers, and eight (8) M10 Lock Nuts, connect the middle stair from one deck to the next.

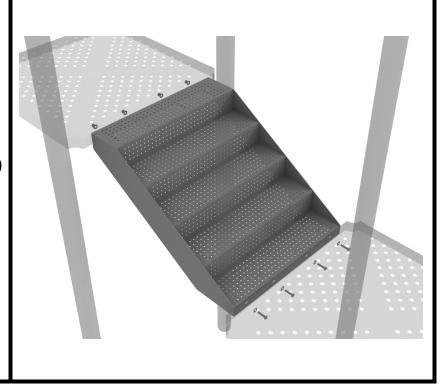

STEP: 2

Connect half of each 4.5-inch tube clamp to the middle handrail using one (1) M8*35 Bolt. Set the handrail into place, then attach the second half of the clamp using the hardware provided in the clamp bag. Repeat this process for the other handrail. Then, using two (2) M10*25 Bolts, four (4) M10 Washers, and two (2) M10 Lock Nuts, attach the bottom of the handrail to the side of the stair.

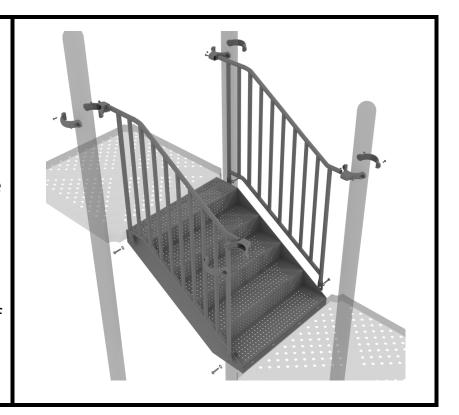


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly D. Date Modified: 12/15/20

5-foot Vertical Ladder Installation



STEP: 1

See general installation guide regarding footing information for the 5-foot Vertical Ladder. Attach the ladder to the deck using two (2) M10*25 bolts, two (2) M10 spring washers, and two (2) M10 washers.

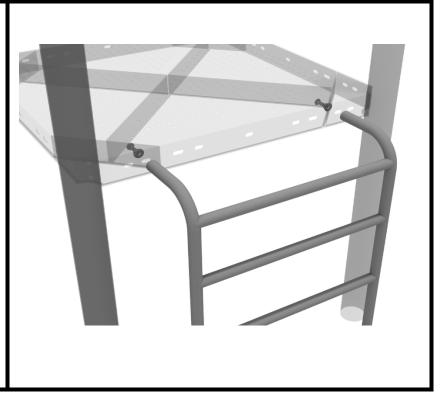

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/20/2018

3 Foot Boulder Climber Installation




STEP: 1

See general installation guide regarding footing information for the Rock Hole climber. Using two (2) M10*20 bolts, two (2) M10 spring gaskets, and two (2) M10 washers, attach the bottom of the boulder climber to the climber support posts.

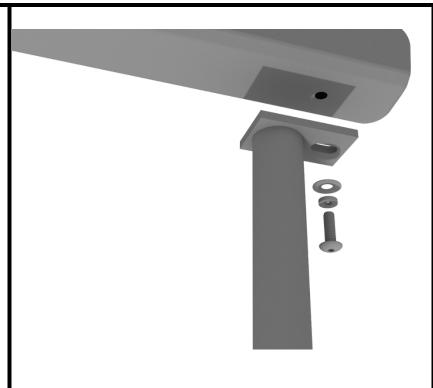

STEP: 1

Align the Boulder Climber next to the appropriate Deck. This climber does not attach directly to the structure.

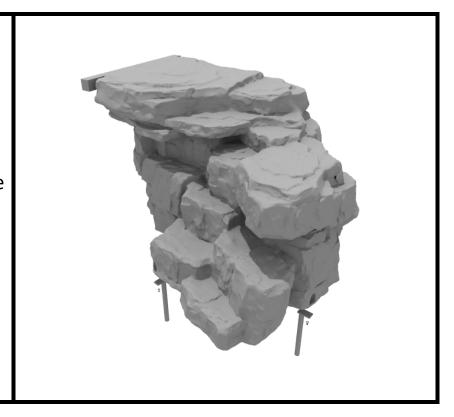

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/22/2018

Pod Climber Installation



STEP: 1

See general installation guide regarding footing information for the pod climber. Attach the circle end mount to the bottom of the climber using the pre-attached hardware. Each attachment uses three (3) M10*20 bolts, three (3) M10 spring gaskets, and one (3) M10 large gaskets.

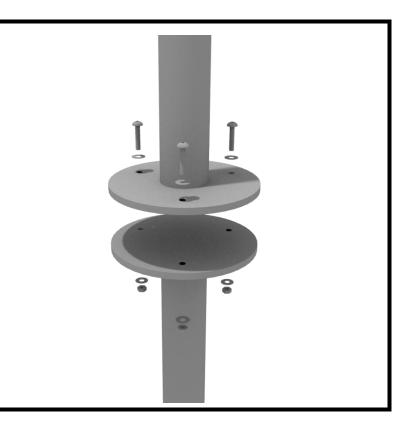

STEP: 2

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the pod climber to the deck.



1 Playground Drive

Created By: Aaron Price

Greenfield, IN 46140 1-800-667-0097 Date: 03/20/2018

Rock Hole Climber Installation




STEP: 1

See general installation guide regarding footing information for the Rock Hole climber. Using two (2) M10*20 bolts, two (2) M10 spring gaskets, and two (2) M10 washers, attach the bottom of the rock whole climber to the climber support posts.



STEP: 1

Then, using three (3) M10*20 bolts, three (3) M10 spring washers, and three (3) M10 washers, attach the Rock hole climber to the deck.

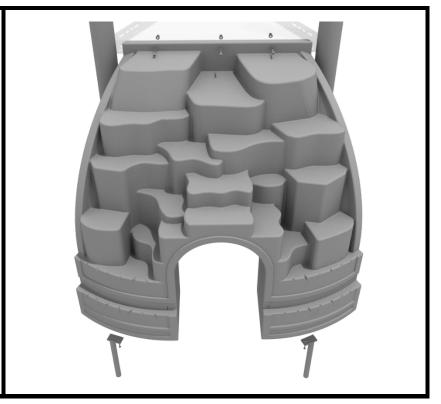

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/22/2018

Snake Climber Installation



STEP: 1

See general installation guide regarding footing information for the snake climber. Attach the top of the climber to the designated arch rail top bracket using one (1) M10*20 bolt, one (1) M10 spring washer, and one (1) M10 washer.

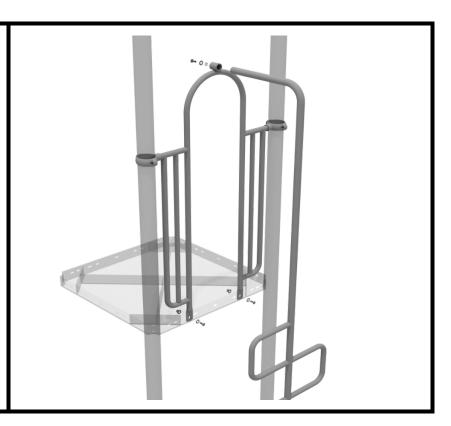

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 04/20/2018

3-Foot Double Straight Slide Installation




TEP: 1

For the double slide, you will first need to attach the double slide deck extension. This will require four (4) M10*25 bolts, eight (8) M10 washers, and four (4) M10 lock nuts.

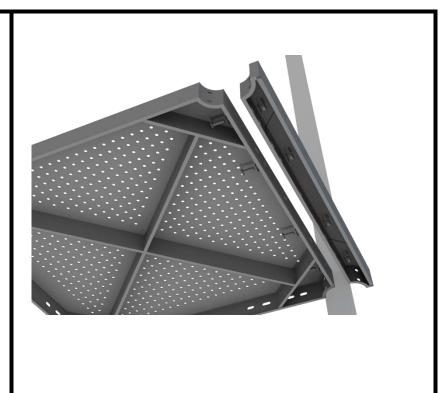

STEP: 2

Then, See general installation guide regarding footing information for the double slide end mounts. Using two (2) M8*20 bolts, two (2) M8 spring gaskets, and two (2) M8 washers, attach the slide end mounts to the double slide.

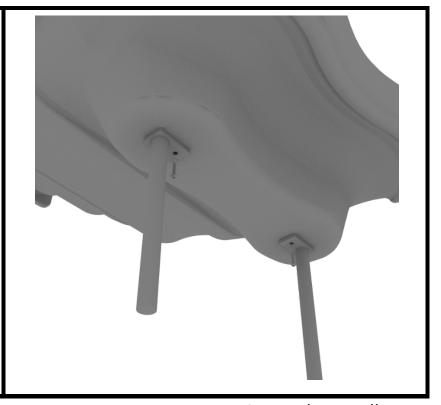

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly D. Date: 12/14/2020

3-Foot Double Straight Slide Installation




STEP: 3

Then, See general installation guide regarding footing information for the double slide middle support. Attach the middle support to the slide using two (2) M8*20 bolts, two (2) M8 spring washers, and two M8 washers.



STEP: 4

Then, attach the slide to the deck extension using four (4) M10*45 bolts, eight (8) M10 washers, and four (4) M10 lock nuts.

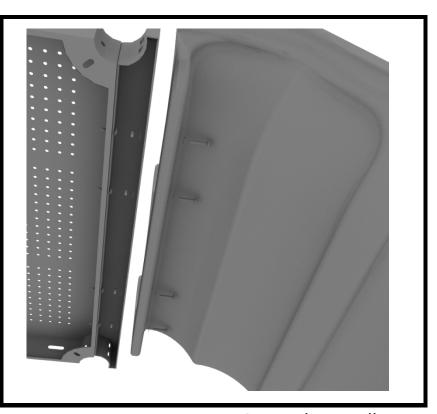


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly D. Date: 12/14/2020

3-Foot Double Straight Slide Installation



STEP: 5

Once the slide is attached, take the double slide hood and insert it into the top of the slide, and then attach the top using two (2) double slide clamps, and two (2) M8*30 bolts.

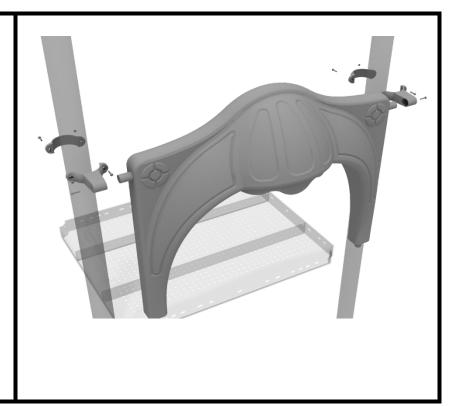


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly D. Date: 12/14/2020

5-foot Single Wave Slide Installation




STEP: 1

To attach the single slide hood to a deck, take two clamps and attach them to the posts using two (2) M4*25 self-tapping screws. Then, attach the hood to the deck using two (2) M10*50 bolts, four (4) M10 washers, and two (2) M10 lock nuts. Repeat this process for every single slide hood.

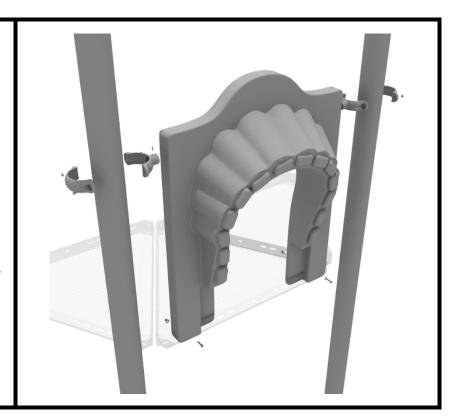

STEP: 2

See general installation guide regarding footing information for the slide end mount. Using two (2) M8*20, two (M8) spring washers. And two (2) M8 washers, attach the slide to the slide support post.

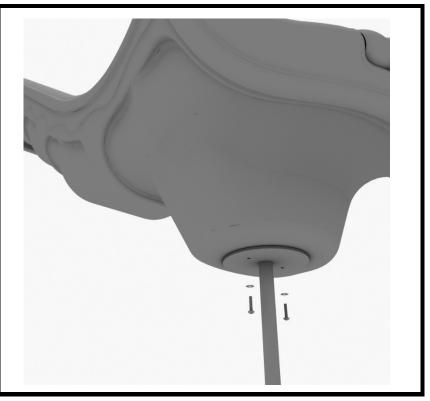

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 04/10/2018

5-foot Single Wave Slide Installation




STEP: 3

See general installation guide regarding footing information for the middle slide support. Using two (2) M8*20 bolts, two (2) M8 spring washers, and two (2) M8 washers, attach the middle slide support post. Repeat the process for each middle slide mount.

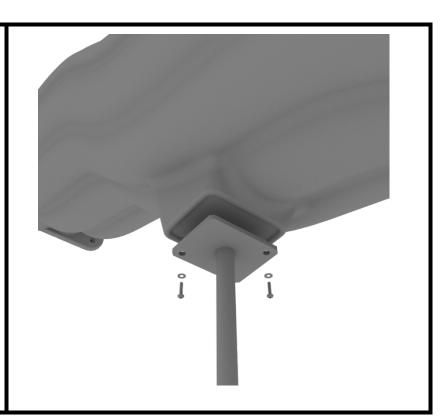

STEP: 4

To attach a single slide to a deck, use two (2) M10*45 bolts, four (4) M10 washers, and two (2) M10 lock nuts. Repeat this process for the other side of the slide. Repeat this process for each single slide.

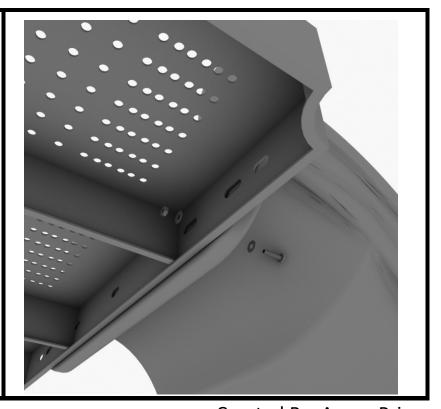

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 04/10/2018

5-foot Single Wave Slide Installation



STEP: 5

Using two (2) M8*45 bolts, two (2) M8 washer, two (2) M12 washers, and one (1) M12 inner hex spiral nut, attach the slide to the slide hood. Repeat this process for the other side of the slide.



1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 04/10/2018

4.5-inch 2-Clamp Arch Rail Installation



STEP: 1

Attach the Arch Rail to the designated posts by connect half of the tube clamp to the arch rail using one (1) M8*30 bolt. Repeat this process for each post attachment point. Then, attach the rail to the deck using two (2) M10*25 bolts, four (4) M10 washers, and two (2) M10 lock nuts. Finally, attach the second half of the clamp around the post.

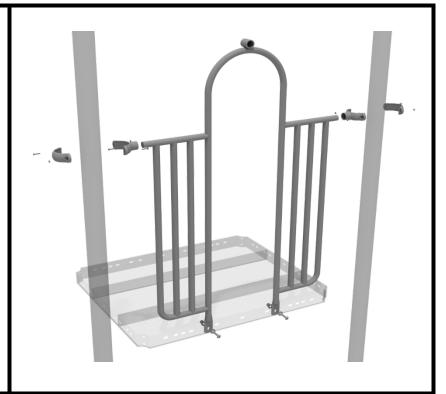

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 03/21/2018

4.5-inch 2-Clamp Arch Rail Installation



STEP: 1

Attach each two-clamp arch rail to the designated deck by using two (2) tube clamps, and two (2) M4*25 self-tapping screws to attach the top of the panel to the posts. Then use two (2) M10*25 bolts, four (4) M10 washers, and two (2) M10 lock nuts to attach the panel to the deck.



1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/21/2018

4.5-inch 4-Clamp Arch Rail Installation



STEP: 1

Attach the Arch Rail to the designated posts by connect half of the tube clamp to the arch rail using one (1) M8*30 bolt. Repeat this process for each attachment point. Set the arch rail into place, then attach the second half of the clamp around the post. The gap between the deck and the bottom of the rail should be no more than 3 inches.

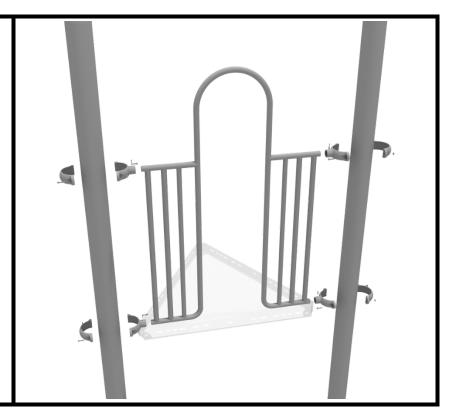

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/20/2018

4.5-inch Balcony Panel with Ships Wheel Installation



STEP: 1

Connect the bottom of the panel to the deck using five (5) M10*50 bolts, ten (10) M10 washers, and five (5) M10 lock nuts. Then attach the top of the panel to the posts using two (2) tube clamps.

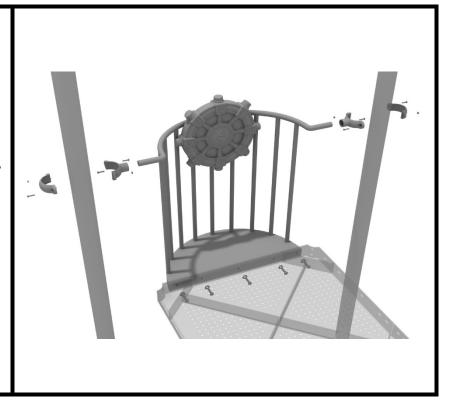


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Kelly D. Date: 12/28/2020

4.5-inch Bench Installation



STEP: 1

Connect the bench panel to the designated post using four (4) 4.5-inch tube clamps.

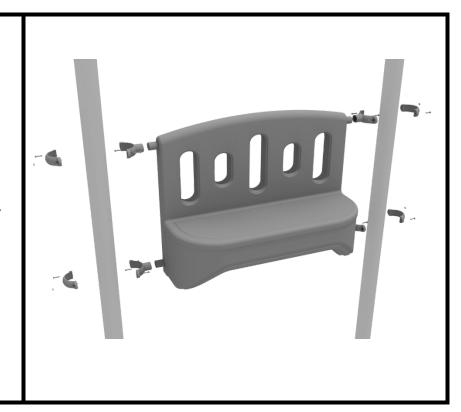

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/29/2018

4.5-Inch Elephant Panel Installation



STEP: 1

Attach the Elephant Panel to the designated posts using four (4) 4.5-inch flat clamps, and four (4) M8*25 bolts.

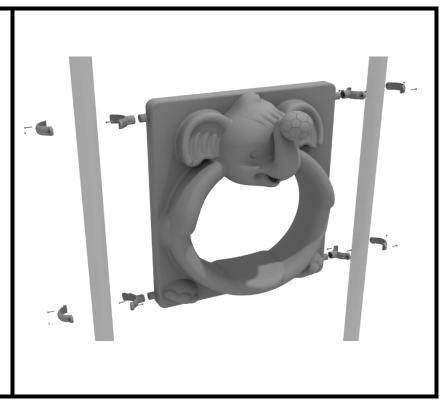

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/21/2018

4.5-inch Gear Panel Installation



STEP: 1

Attach two tube clamps to the Gear Panel using two (2) M4*25 selftapping screws and attach those clamps to the proper support posts. Then, attach the bottom of the metal barrier to the deck using two (2) M10*50 bolts, four (4) M10 washers, and two (2) M10 lock nuts.

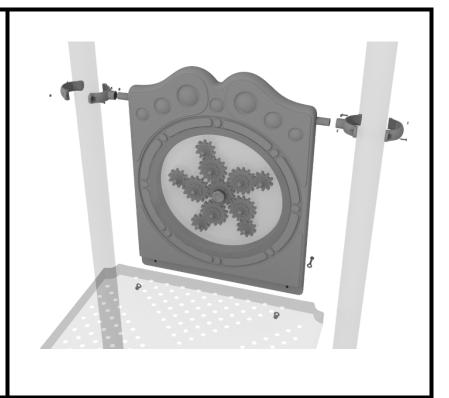


Created By: Derick H Date: 08/09/2018

4.5-inch Metal Barrier Installation



STEP: 1

Attach two tube clamps to the metal barrier using two (2) M4*25 self-tapping screws and attach those clamps to the proper support posts. Then, attach the bottom of the metal barrier to the deck using two (2) M10*25 bolts, four (4) M10 washers, and two (2) M10 lock nuts.

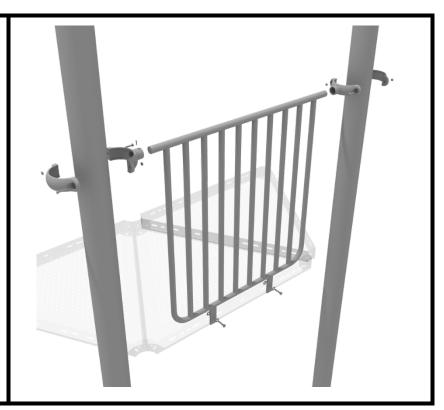

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 03/21/2018

Bongos Installation




Detach half of the tube clamp connected to the Bongos, and reattach the clamp around the support post, as shown in the image.

Recommended install height is 20 to 36 inches above surfacing depending on age range.

We recommend using Threadlocking fluid on bolts connecting Bongos to clamp to prevent hardware from loosening over time.

(Thread-locker not supplied)

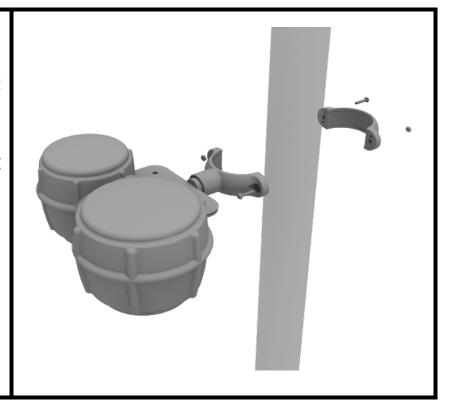

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 03/20/2018


Single Drum Installation



Detach half of the tube clamps connected to the Single Drum, and re-attach the clamps around the support post, as shown in the image. Recommended install height is 20 to 36 inches above surfacing depending on age range.

We recommend using Threadlocking fluid on bolts connecting Single Drum to clamp to prevent hardware from loosening over time.

(Thread-locker not supplied)

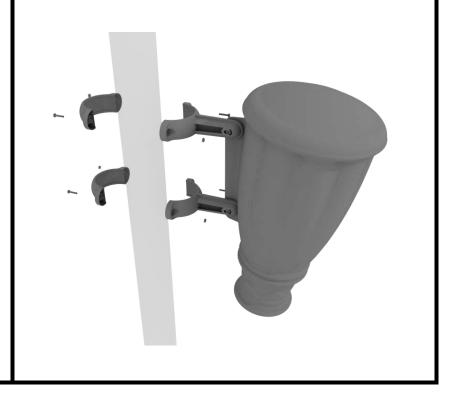

10859 Washington St. Suite 200, Indianapolis, IN 1-800-667-0097

Created By: Jordan B Date: 02/09/2022

Rain Wheel Installation




Detach half of the tube clamp connected to the Rain Wheel, and reattach the clamp around the support post, as shown in the picture.

Recommended install height is 20 to 36 inches above surfacing depending on age range.

We recommend using Thread-locking fluid on bolts connecting Rain wheel to clamp to prevent hardware from loosening over time.

(Thread-locker not supplied)

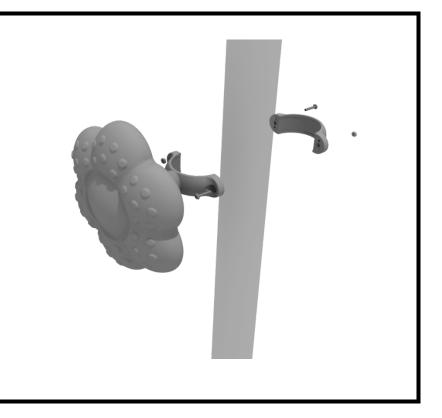

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 03/29/2018