
Post Installation



STEP: 1

DO <u>NOT</u> CEMENT POSTS INTO PLACE UNTIL THE ENTIRE STRUCTURE IS ASSEMBLED.

Refer to the General Installation guide footing information and dig proper holes for the support posts.

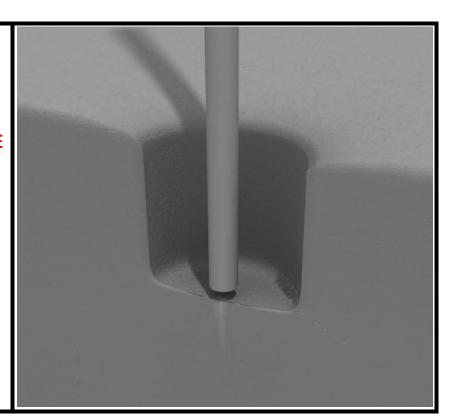

1 Playground Drive Greenfield, IN 46140 1-800-667-0097

Created By: Aaron Price

Date: 04/26/2018


Square Deck Installation



STEP: 1

After the posts are in place, using four (4) M10*35 bolts, eight (8) M10 washers, and four (4) M10 lock nuts, attach each square deck to each preattached deck clamp as shown in the image.

Deck clamps are pre-attached to the posts and should not be altered in any way.

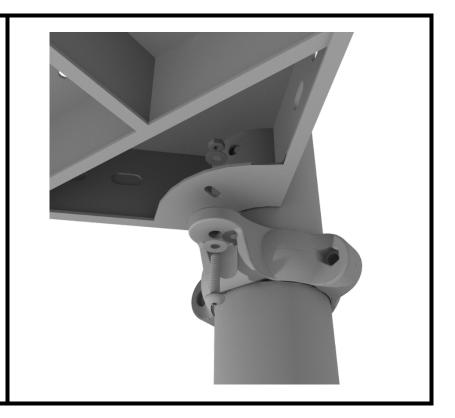


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

3.5-inch Clamp Installation Guide




3.5-inch Flat Clamp

Connect half of the flat clamp to the component using one (1) M8*40 bolt. Then, using the other half of the flat clamp and the hardware provided in the clamp hardware bag, attach the other half of the tube clamp around the post.

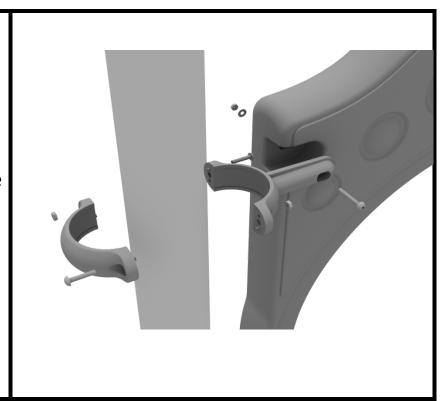

3.5-inch Tube Clamp

Connect half of the clamp to the component using one (1) M8*30 bolt. Then, using the other half of the tube clamp and the hardware provided in the clamp hardware bag, attach the other half of the tube clamp around the post.

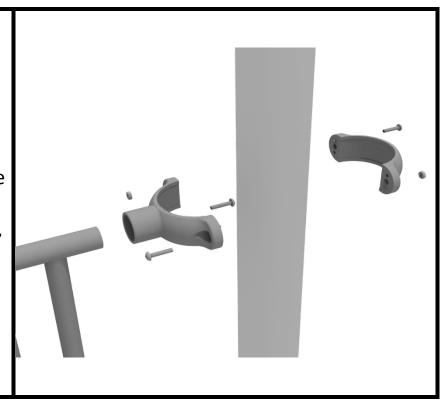

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/28/2018

3.5-inch Clamp Installation Guide




3.5-inch 90-Degree Flat Clamp

Connect half of the flat clamp to one panel using one (1) M8*40 bolt. Then, using the other half of the flat clamp and the hardware provided in the clamp hardware bag, attach the other half of the tube clamp around the post. Then, attach the next panel to the other side of the clamp using the same process.

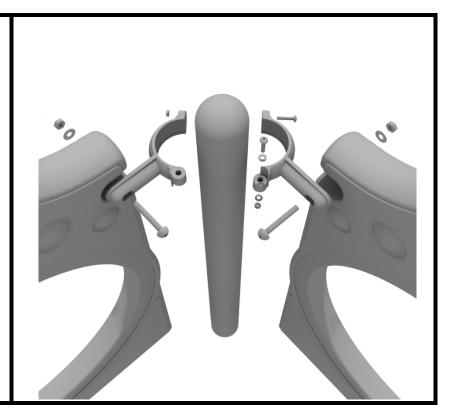

3.5-inch Double Slide Clamp

Connect half of the double slide clamp to the double slide hood using one (1) M8*30 bolt. Then, using the other half of the clamp and the hardware provided in the clamp hardware bag, attach the other half of the tube clamp around the post.

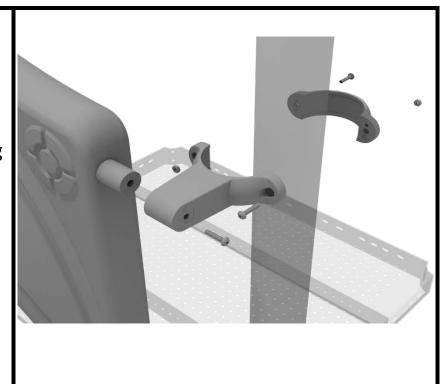


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 03/28/2018




STEP: 1

Connect half of the 3.5-inch tube clamp to the handrail using one (1) M8*30 bolt. Set the handrail into place, then attach the second half of the clamp using the hardware provided in the clamp bag. Repeat this process for the other handrail.

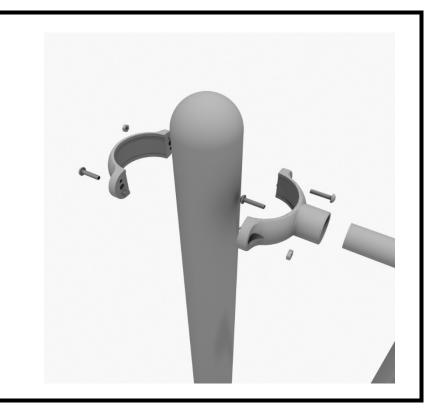

STEP: 2

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the top of the stairs to the square deck.

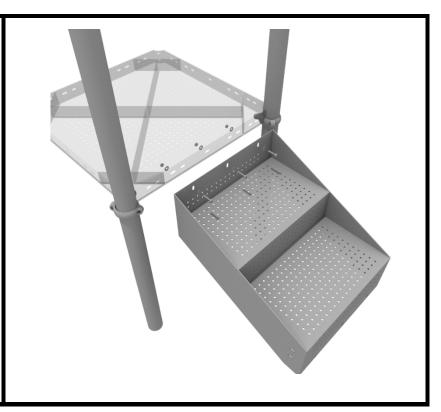


1 Playground Drive Greenfield, IN 46140 1-800-667-0097




STEP: 3

Using four (4) M10*25 bolts, eight (8) M10 washers, and four (4) M10 lock nuts, connect the bottom of the handrails to the bottom of the 3-foot transfer stair.

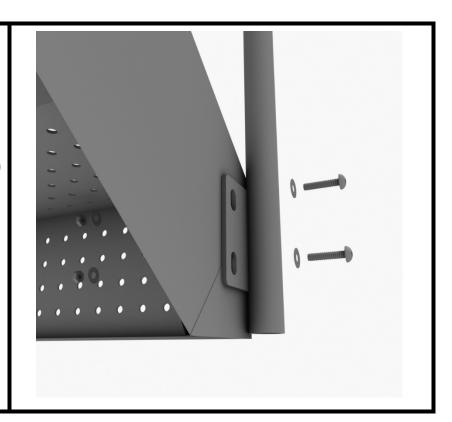

STEP: 4

Using two (2) M10*25 bolts, four (4) M10 washers, two (2) lock nuts, attach the handrail to the square deck.

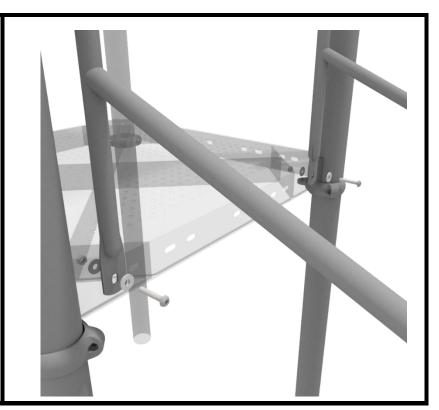


1 Playground Drive Greenfield, IN 46140 1-800-667-0097




STEP: 5

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the ADA transfer deck to the base of the 3-foot ADA transfer stair.

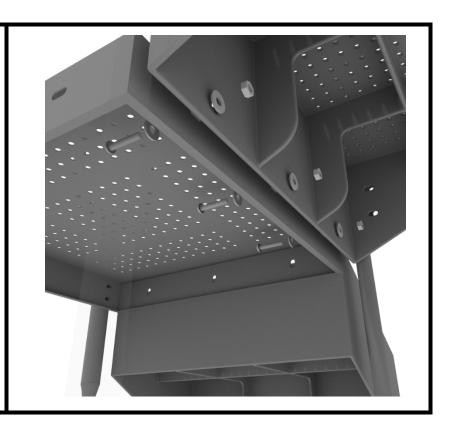

STEP: 6

See general installation guide regarding footing information for the transfer deck handrail & mount.
Using two (2) M10*65 bolts, four (4) M10 washers, and two (2) M10 lock nuts, attach the transfer handrail to the ADA transfer deck.

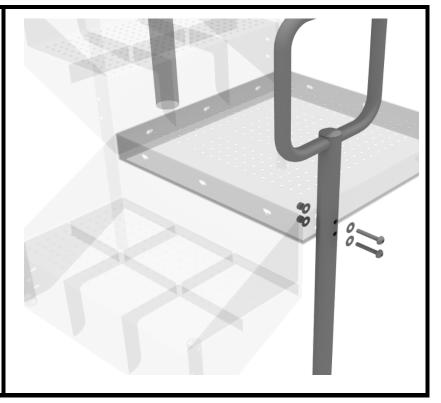


1 Playground Drive Greenfield, IN 46140 1-800-667-0097



STEP: 7

Using two (2) M10*25 bolts, four (4) M10 washers, and two (2) lock nuts, attach the transfer deck mount to the ADA transfer deck.

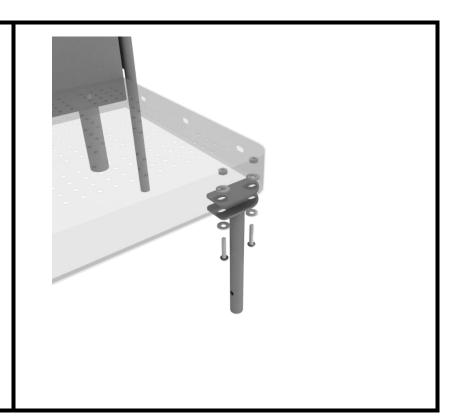

STEP: 8

See general installation guide regarding footing information for the ADA transfer step mount. Using two (2) M10 bolts, four (4) M10 washers, and two (2) M10 lock nuts, attach the transfer step to each ADA transfer step mount.




1 Playground Drive Greenfield, IN 46140 1-800-667-0097



STEP: 9

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 washers, attach the top of the ADA transfer step to the ADA transfer deck.

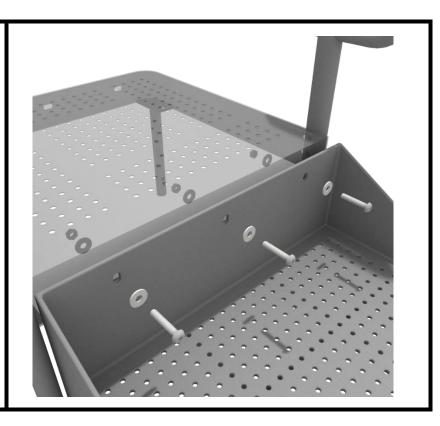


1 Playground Drive Greenfield, IN 46140 1-800-667-0097

3-foot Left Turn Slide Installation



STEP: 1

Take one (1) 3.5-inch flat clamp, and loosely attach it around a post using the bolts and nuts provided in the clamp hardware bag. Repeat this process on the other post. Then, use one (1) M8*40 bolt, one (1) M8 washer, and one (1) M8 lock nut to attach each side of the slide hood to each clamp. Leave bolts loose until slide is in place.

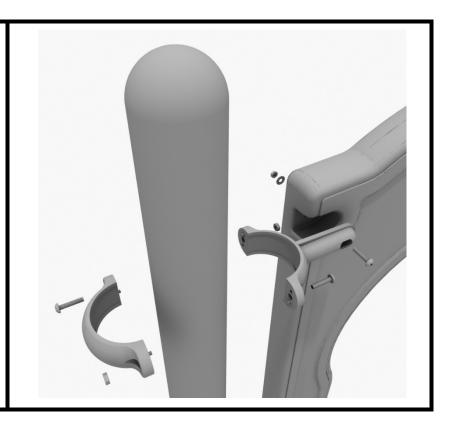

STEP: 2

See general installation guide regarding footing information for the slide end mount. Using two (2) M8*20, two (M8) spring washers. And two (2) M8 washers, attach the slide to the slide support post.




1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

3-foot Left Turn Slide Installation




STEP: 3

See general installation guide regarding footing information for the middle slide support. Using two (2) M8*20 bolts, two (2) M8 spring washers, and two (2) M8 washers, attach the middle slide support post.

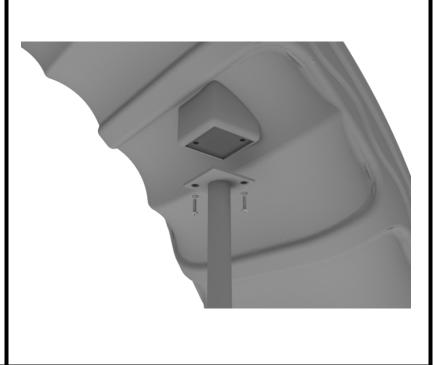

STEP: 4

Using one (1) M10*45 bolt, two (2) M10 washers, and two (2) M10 lock nuts, attach one side of the slide to the deck.

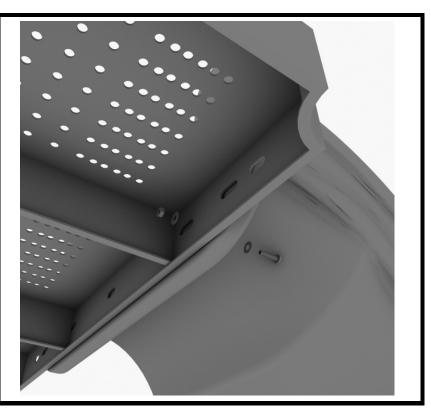


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

3-foot Left Turn Slide Installation



STEP: 5

Using one (1) M8*45 bolt, one (1) M8 washer, one (1) M12 washer, and one (1) M12 inner hex spiral nut, attach the slide to one side of the slide hood. Repeat this process for the other side of the slide.

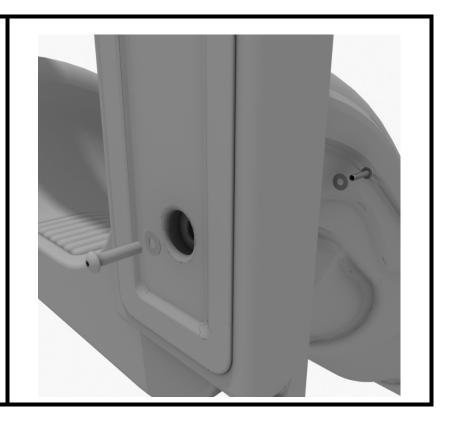


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Pod Climber Installation




STEP: 1

See general installation guide regarding footing information for the pod climber. Attach the circle end mount to the bottom of the climber using the pre-attached hardware. Each attachment uses three (3) M10*20 bolts, three (3) M10 spring gaskets, and one (3) M10 large gaskets.

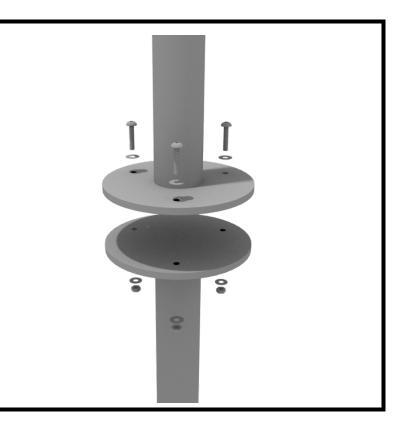

STEP: 2

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the pod climber to the deck.

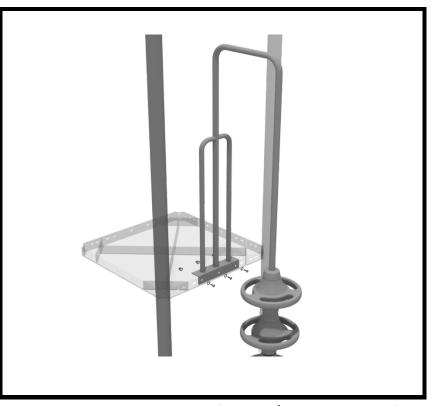

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/20/2018

3-foot Right Turn Slide Installation




STEP: 1

Take one (1) 3.5-inch flat clamp, and loosely attach it around a post using the bolts and nuts provided in the clamp hardware bag. Repeat this process on the other post. Then, use one (1) M8*40 bolt, one (1) M8 washer, and one (1) M8 lock nut to attach each side of the slide hood to each clamp. Leave bolts loose until slide is in place.

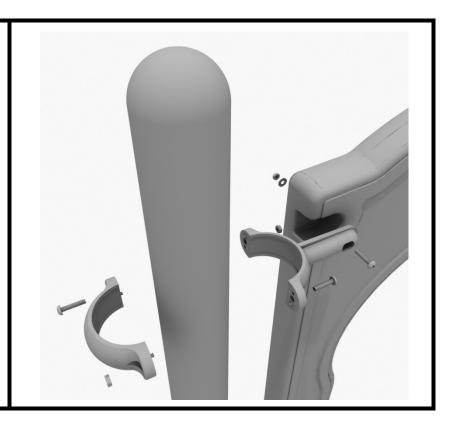

STEP: 2

See general installation guide regarding footing information for the slide end mount. Using two (2) M8*20, two (M8) spring washers. And two (2) M8 washers, attach the slide to the slide support post.

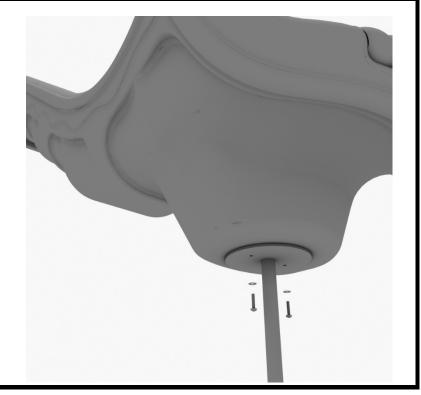


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

3-foot Right Turn Slide Installation




STEP: 3

See general installation guide regarding footing information for the middle slide support. Using two (2) M8*20 bolts, two (2) M8 spring washers, and two (2) M8 washers, attach the middle slide support post.

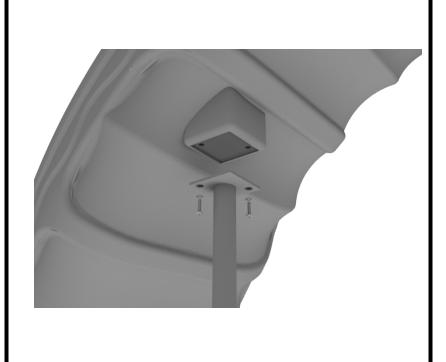

STEP: 4

Using one (1) M10*45 bolt, two (2) M10 washers, and two (2) M10 lock nuts, attach one side of the slide to the deck.

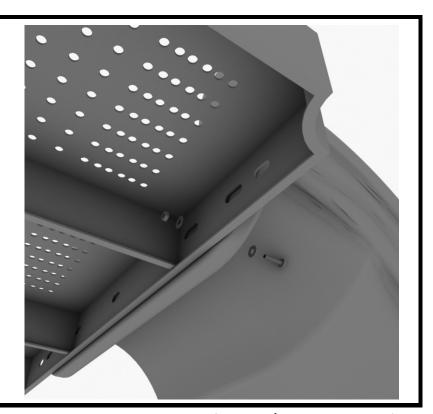

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price Date: 03/19/2018


Page 2 of 3 (3-foot Right Turn Slide Installation)

3-foot Right Turn Slide Installation



STEP: 5

Using one (1) M8*45 bolt, one (1) M8 washer, one (1) M12 washer, and one (1) M12 inner hex spiral nut, attach the slide to one side of the slide hood. Repeat this process for the other side of the slide.

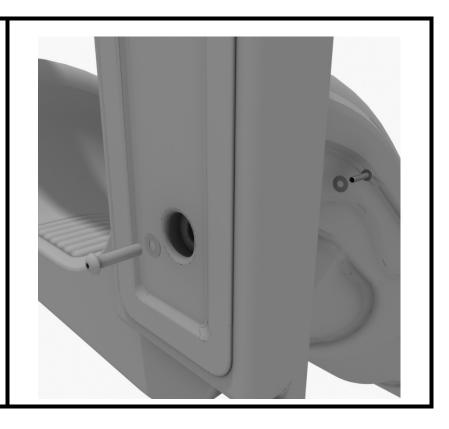


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Line Roof Installation



STEP: 1

Set the line roof on top of the posts. Take four (4) self-tapping screws and drill them through the notch at each corner of the roof, into the support posts.

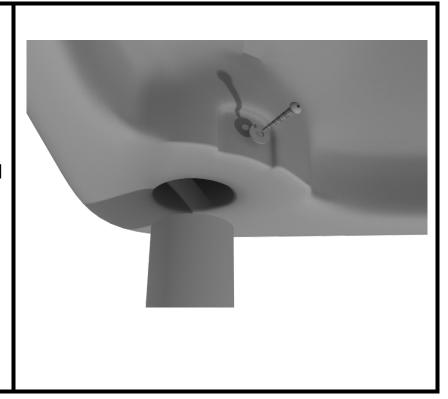

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Bongos Installation



STEP: 1

Detach half of the tube clamp connected to the Bongos, and reattach the clamp around the support post, as shown in the image.

Recommended install height is 20 to 36 inches above surfacing depending on age range.

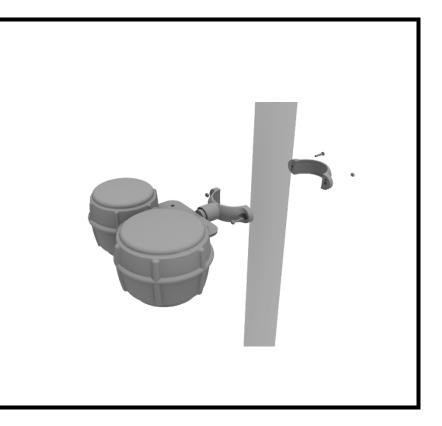

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/20/2018

Ships Wheel Installation



STEP: 1

Detach half of the tube clamp connected to the Ships Wheel, and re-attach the clamp around the support post, as shown in the picture. Recommended install height is 20 to 36 inches above surfacing depending on age range.

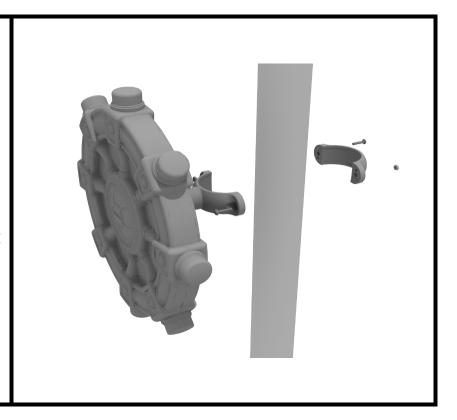

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 03/20/2018