
Post Installation



STEP: 1

DO <u>NOT</u> CEMENT POSTS INTO PLACE UNTIL THE ENTIRE STRUCTURE IS ASSEMBLED.

Refer to the General Installation guide footing information and dig proper holes for the support posts.

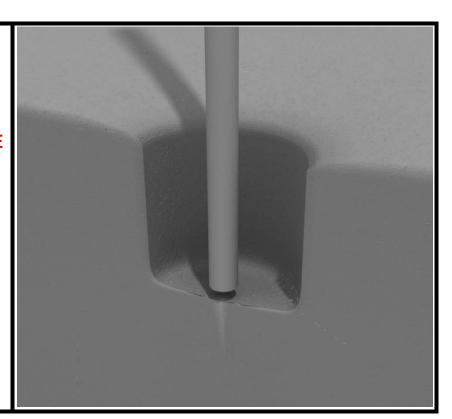

1 Playground Drive Greenfield, IN 46140 1-800-667-0097

Created By: Aaron Price

Date: 04/26/2018


Square Deck Installation



STEP: 1

After the posts are in place, using four (4) M10*35 Bolts, eight (8) M10 Washers, and four (4) M10 Lock Nuts, attach each square deck to each pre-attached deck clamp as shown in the image.

Deck clamps are pre-attached to the posts and should not be altered in any way.

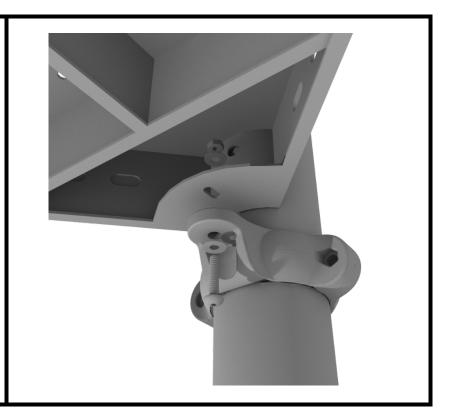

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 3/19/2018

3.5-inch Clamp Installation Examples




The following three pages will include examples of how to install some of the most common types of Clamps that are present on our structures that use 3.5-inch outside diameter posts. The structure that you are assembling might not require all the types of clamps listed in these examples.

The Install Guides for specific components that come later in this document might call for a specific type of clamp (a tube clamp for example), those sections will not include detailed instructions for the clamps and should direct you back to this section for more detailed information.

3.5-inch Flat Clamp Install Example

Connect half of the flat clamp to the component using one (1) M8*40 bolt. Then, using the other half of the flat clamp and the hardware provided in the clamp hardware bag, attach the backside of the flat clamp around the post.

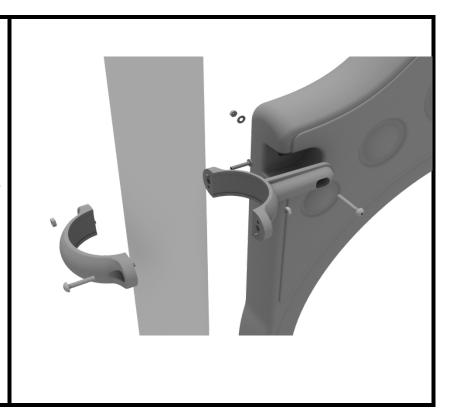


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 11/01/2018

3.5-inch Clamp Installation Examples




3.5-inch Tube Clamp Install Example

Connect half of the clamp to the component using one (1) M8*30 bolt. Then, using the other half of the tube clamp and the hardware provided in the clamp hardware bag, attach the backside of the tube clamp around the post.

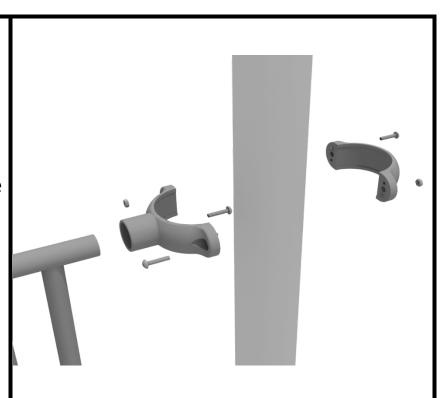

3.5-inch 90-Degree Flat Clamp Install Example

Connect half of the flat clamp to one panel using one (1) M8*40 bolt. Then, using the other half of the flat clamp and the hardware provided in the clamp hardware bag, attach the other half of the tube clamp around the post. Then, attach the next panel to the other side of the clamp using the same process.

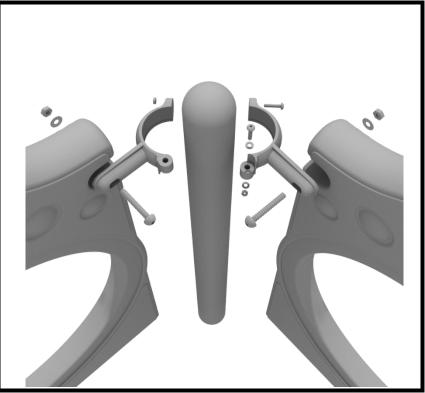


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 11/01/2018

3.5-inch Clamp Installation Examples



3.5-inch Double Slide Clamp Install Example

Connect half of the double slide clamp to the double slide hood using one (1) M8*30 bolt. Then, using the other half of the clamp and the hardware provided in the clamp hardware bag, attach the backside of the double slide clamp around the post.

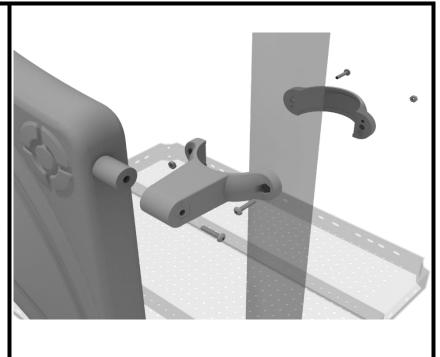


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 11/01/2018




STEP: 1

Connect half of the 3.5-inch tube clamp to the handrail using one (1) M8*30 bolt. Set the handrail into place, then attach the second half of the clamp using the hardware provided in the clamp bag. Repeat this process for the other handrail.

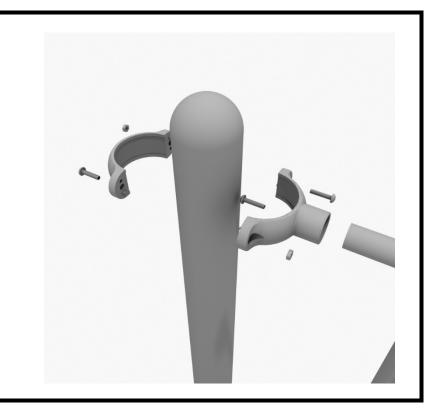

STEP: 2

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the top of the stairs to the square deck.

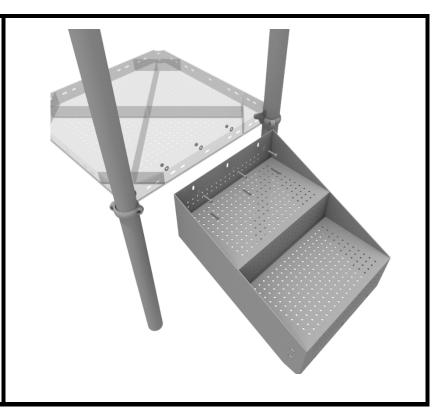


1 Playground Drive Greenfield, IN 46140 1-800-667-0097




STEP: 3

Using four (4) M10*25 bolts, eight (8) M10 washers, and four (4) M10 lock nuts, connect the bottom of the handrails to the bottom of the 3-foot transfer stair.

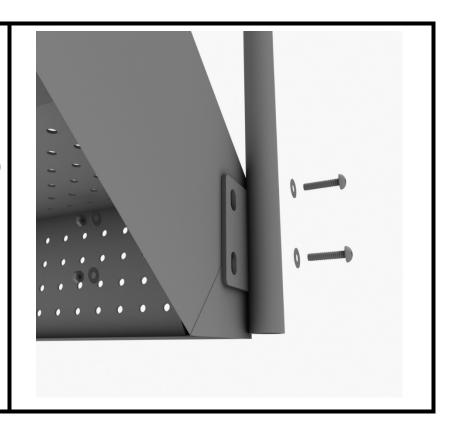

STEP: 4

Using two (2) M10*25 bolts, four (4) M10 washers, two (2) lock nuts, attach the handrail to the square deck.

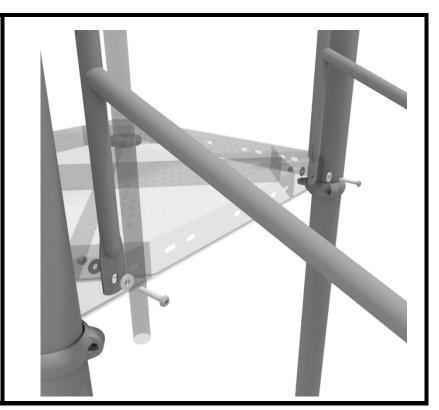


1 Playground Drive Greenfield, IN 46140 1-800-667-0097




STEP: 5

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 lock nuts, attach the ADA transfer deck to the base of the 3-foot ADA transfer stair.

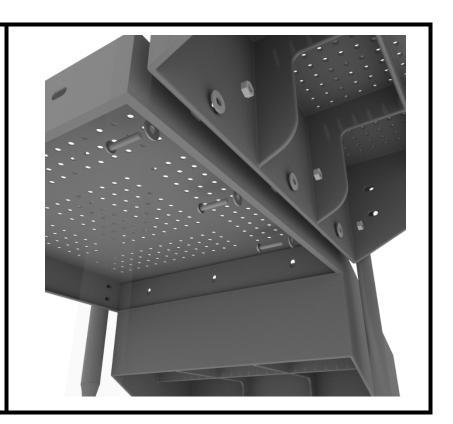

STEP: 6

See general installation guide regarding footing information for the transfer deck handrail & mount.
Using two (2) M10*65 bolts, four (4) M10 washers, and two (2) M10 lock nuts, attach the transfer handrail to the ADA transfer deck.

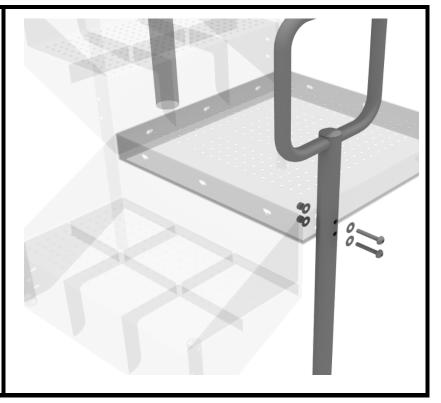


1 Playground Drive Greenfield, IN 46140 1-800-667-0097



STEP: 7

Using two (2) M10*25 bolts, four (4) M10 washers, and two (2) lock nuts, attach the transfer deck mount to the ADA transfer deck.

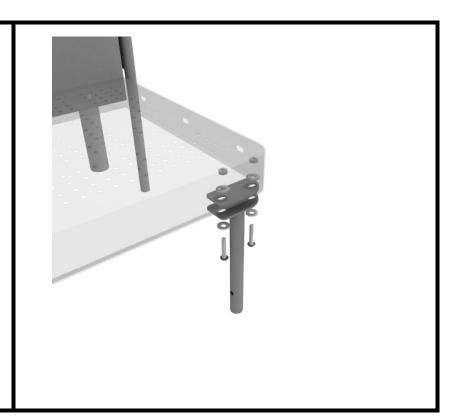

STEP: 8

See general installation guide regarding footing information for the ADA transfer step mount. Using two (2) M10 bolts, four (4) M10 washers, and two (2) M10 lock nuts, attach the transfer step to each ADA transfer step mount.




1 Playground Drive Greenfield, IN 46140 1-800-667-0097



STEP: 9

Using three (3) M10*25 bolts, six (6) M10 washers, and three (3) M10 washers, attach the top of the ADA transfer step to the ADA transfer deck.

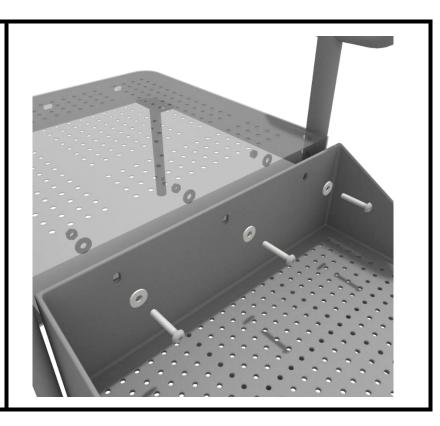


1 Playground Drive Greenfield, IN 46140 1-800-667-0097

3-foot Single Wave Slide Installation




STEP: 1

Take one (1) 3.5-inch flat clamp, and loosely attach it around a post using the bolts and nuts provided in the clamp hardware bag. Repeat this process on the other post. Then, use one (1) M8*40 bolt, one (1) M8 washer, and one (1) M8 lock nut to attach each side of the slide hood to each clamp. Leave bolts loose until slide is in place.

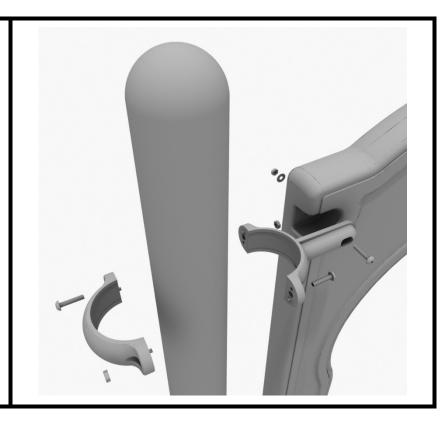

STEP: 2

See general installation guide regarding footing information for the slide end mount. Using two (2) M8*20, two (M8) spring washers. And two (2) M8 washers, attach the slide to the slide support post.

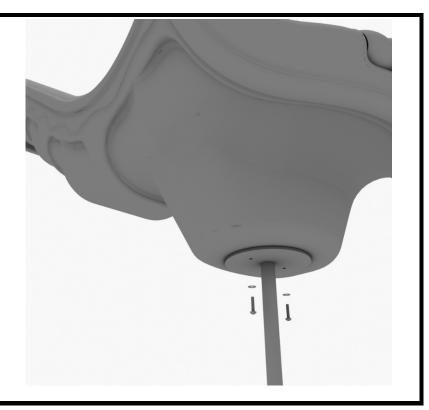

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 3/19/2018

3-foot Single Wave Slide Installation




STEP: 3

To attach a single slide to a deck, use two (2) M10*45 bolts, four (4) M10 washers, and two (2) M10 lock nuts. Repeat this process for the other side of the slide. Repeat this process for each single slide.

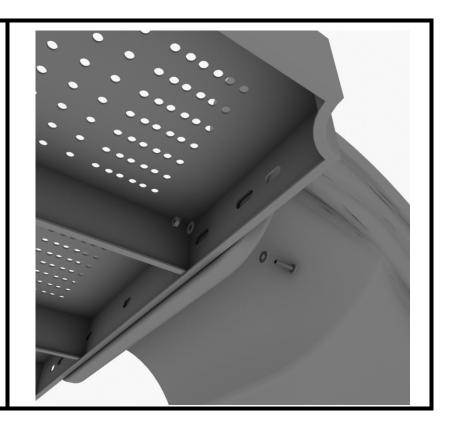

STEP: 4

Using two (2) M8*45 bolts, two (2) M8 washer, two (2) M12 washers, and one (1) M12 inner hex spiral nut, attach the slide to the slide hood. Repeat this process for the other side of the slide.

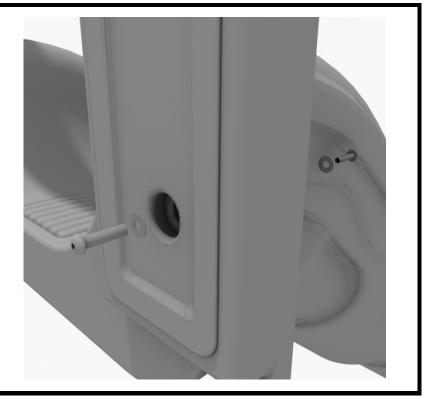

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 3/19/2018

3.5-inch 4-Clamp Arch Rail Installation



STEP: 1

Attach the Arch Rail to the designated posts by connect half of the tube clamp to the arch rail using one (1) M8*30 bolt. Repeat this process for each attachment point. Set the arch rail into place, then attach the second half of the clamp around the post. The gap between the deck and the bottom of the rail should be no more than 3 inches.

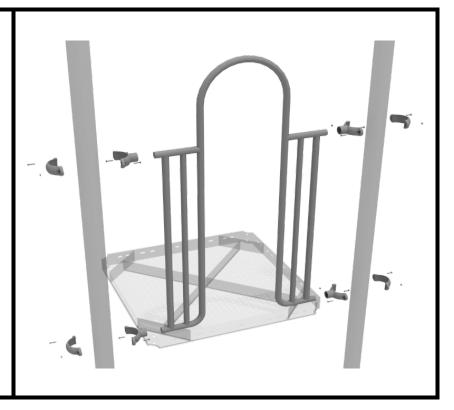

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/20/2018

Jungle Climber Installation




STEP: 1

First, detach the pre-attached bracket on the end of the climber that has four (4) Bolts attached, and attach it to the designated deck.

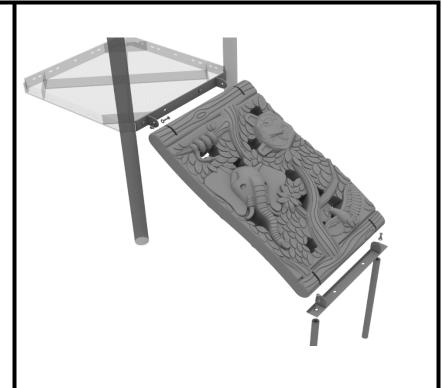

STEP: 2

Then, attach the provided support mounts to the other side of the Jungle Climber using the preattached bolt. See general installation guide regarding footing information for the figure climber.

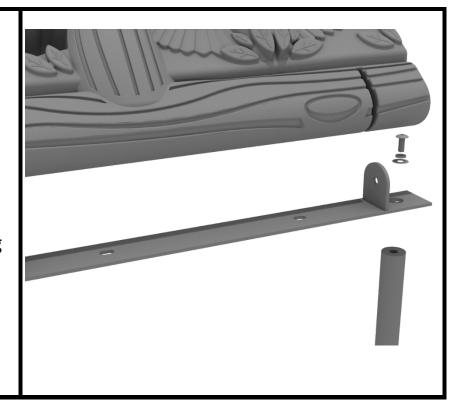


1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Derick H Date: 09/12/2018

Jungle Climber Installation



STEP: 3

Finally, re-attach the climber back to the mounting plate using the original pre-attached hardware.

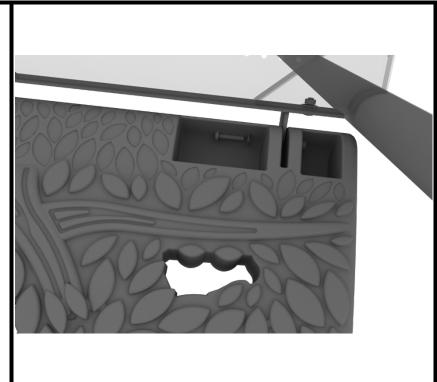


3.5-inch Tic Tac Toe Panel Installation



STEP: 1

Connect the bottom of the panel to the deck using two (2) M10*50 bolts, four (4) M10 washers, and two (2) M10 lock nuts. Then attach the top of the panel to the posts using two (2) flat clamps.

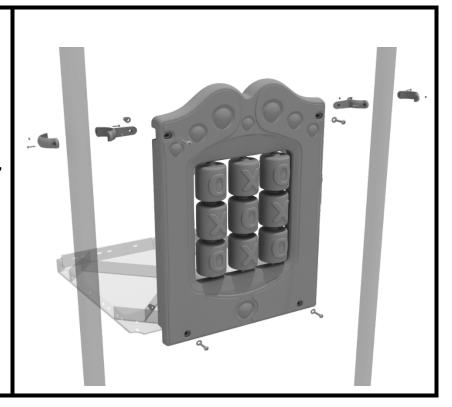

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price


Date: 03/23/2018

Ships Wheel Installation



STEP: 1

Detach half of the tube clamp connected to the Ships Wheel, and re-attach the clamp around the support post, as shown in the picture. Recommended install height is 20 to 36 inches above surfacing depending on age range.

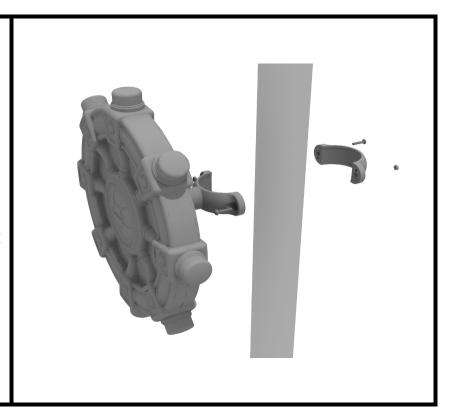

1 Playground Drive Greenfield, IN 46140 1-800-667-0097 Created By: Aaron Price

Date: 03/20/2018